UBIQUITI®
NETWORKS



EdgeSwitch™

User Interface for PoE Switches
Models: ES-24-250W, ES-24-500W,
ES-48-500W, ES-48-750W

Administration Guide

Table of Contents

About This Document 7
Purpose and Audience 7
Document Organization 7
Products and Models 7
Related Documents 8
Typographical Conventions 8

Chapter 1: Getting Started 9
Connecting the Switch to the Network 9
Understanding the User Interfaces 9
Using the EdgeSwitch UI 9
Accessing the UI 9
EdgeSwitch UI Page Layout 10
Device View 10
Navigation Menu 11
Configuration and Status Fields 12
Table Filtering 14
Help Page Access 14
User-Defined Fields 14
Using the Command-Line Interface 15

Chapter 2: Configuring Power over Ethernet 16

Chapter 3: Configuring System Information 18
Viewing ARP Cache 19
Viewing Inventory Information 20
Viewing the Dual Image Status 21
Viewing System Resources 22
System Resource Status 22
System Resource Configuration 23
Defining General Device Information 24
System Description 25
IP Address Conflict Detection 26
Network Port IPv6 Neighbors 29
DHCP Client Options 30
Secure HTTP Configuration 31
SSH Configuration 32
Authentication Server Users 36
Logged in Sessions 38

Accounting Selection....40
Authentication Selection....43
Last Password Result....47
Denial of Service Configuration....48
CLI Banner Configuration....50
Basic Switch Configuration....51
Switch Configuration....51
Managing Logs....52
Log Configuration....52
Buffered Log....54
Event Log....55
Logging Hosts....56
Syslog Source Interface Configuration....57
Persistent Log....58
Configuring Email Alerts....59
Email Alert Global Configuration....59
Email Alert Server Configuration....60
Email Alert Statistics....61
Email Alert Subject Configuration....62
Email Alert To Address Configuration....63
Viewing Device Port Information....64
Port Summary....64
Port Description....66
Cable Test....67
Mirroring....68
Configuring a Port Mirroring Session....69
Configuring Port Mirroring Source Ports....69
Configuring the Port Mirroring Destination....70
Defining SNMP Parameters....71
SNMP v1 and v2....71
SNMP v3....71
SNMP Community Configuration....72
SNMP v1/v2 Trap Receivers Configuration....73
SNMP v3 Trap Receivers Configuration....74
SNMP Access Control Group....75
SNMP User Security Model....76
SNMP Trap Source Interface Configuration....77
Viewing System Statistics....79
Switch Detailed Statistics....79
Port Summary....81
Port Detailed Statistics....82
Network Port DHCPv6 Client Statistics....85

Time-Based Group Statistics 86
Time-Based Flow Statistics 87
Time-Based Statistics 89
Using System Utilities....90
System Reset....90
Ping 90
TraceRoute....93
IP Address Conflict Detection....94
Uploading Files 96
Downloading Files 97
AutoInstall 98
Managing SNMP Traps.... 100
System Trap Log.... 100
System Trap Flags 101
Managing the DHCP Server.... 102
DHCP Server Global Configuration.... 102
DHCP Server Pool Configuration.... 103
DHCP Server Pool Options.... 104
DHCP Server Bindings Information.... 106
DHCP Server Statistics.... 107
DHCP Server Conflicts Information.... 108
Configuring Time Ranges.... 109
Time Range Configuration.... 109
Time Range Entry Configuration.... 110
Configuring DNS 112
DNS Global Configuration 112
DNS IP Mapping Configuration 113
DNS Source Interface Configuration 114
Configuring SNTP Settings.... 115
SNTP Global Configuration 116
SNTP Global Status.... 117
SNTP Server Configuration 118
SNTP Server Status 119
Configuring the Time Zone 121
Time Zone Configuration.... 122
Summer Time Configuration.... 123

Chapter 4: Configuring Switching Information 125
Managing VLANs.... 126
VLAN Status.... 126
VLAN Port Configuration 127
VLAN Port Summary.... 128

VLAN Internal Usage 129
Reset VLAN Configuration 130
Managing Voice VLANs 131
Voice VLAN Configuration 131
Voice VLAN Interface Summary 131
Creating MAC Filters 133
MAC Filter Configuration 133
GARP Configuration 134
GARP Switch Configuration 134
Configuring DHCP Snooping 136
Global DHCP Snooping Configuration 136
DHCP Snooping Static Bindings 139
DHCP Snooping Dynamic Bindings 140
DHCP Snooping Persistent Configuration 141
DHCP Snooping Statistics 142
Configuring IGMP Snooping 143
Global Configuration and Status 143
Interface Configuration 144
IGMP Snooping Source Specific Multicast 145
IGMP Snooping VLAN Status 146
IGMP Snooping Multicast Router Configuration 147
IGMP Snooping Multicast Router VLAN Status 148
IGMP Snooping Multicast Router VLAN Configuration 149
Configuring IGMP Snooping Querier 150
IGMP Snooping Querier Configuration 150
VLAN Configuration 151
IGMP Snooping Querier VLAN Status 152
Creating Port Channels 153
Port Channel Summary 153
Port Channel Statistics 155
Viewing Multicast Forwarding Database Information 156
Multicast Forwarding Database Summary 156
Multicast Forwarding Database GMRP Table 157
Configuring Protected Ports 159
Configuring Spanning Tree Protocol 160
Spanning Tree Switch Configuration 160
Spanning Tree CST Configuration 161
Spanning Tree CST Port Configuration 163
Spanning Tree MST Configuration 165
Spanning Tree MST Port Configuration 167
Spanning Tree Statistics 169

Configuring Port Security 171
Port Security Global Administration 171
Port Security Interface Status 172
Port Security Statically Configured MAC Addresses 173
Port Security Dynamically Learned MAC Addresses 174
Managing LLDP 175
LLDP Global Configuration 175
LLDP Interface Configuration 176
LLDP Local Device Summary 177
Remote Device Summary 178
LLDP Statistics 179
LLDP-MED 181
LLDP-MED Global Configuration 181
LLDP-MED Local Device Information 183
LLDP-MED Remote Device Information 184

Chapter 5: Configuring Routing 186
Configuring ARP 187
ARP Table 188
ARP Table Configuration 189
Configuring Global IP Settings 190
Routing IP Configuration 190
Routing IP Interface Summary 192
Routing IP Interface Configuration 194
Routing IP Statistics 196
Router 199
Route Table 199
Configured Routes 200
Adding a Static Route 200
Configuring Policy-Based Routing 202

Chapter 6: Managing Device Security 203
Port Access Control 203
Global Port Access Control Configuration 204
Port Access Control Port Summary 205
Port Access Control Port Configuration 207
Port Access Control Port Details 210
Port Access Control Statistics 212
Port Access Control Client Summary 214
Port Access Control Privileges Summary 215
Port Access Control History Log Summary 216

RADIUS Settings 217
RADIUS Configuration 217
RADIUS Named Server Status 218
RADIUS Server Statistics 219
RADIUS Accounting Server Status 220
RADIUS Accounting Server Statistics 221
RADIUS Clear Statistics 222
RADIUS Source Interface Configuration 223
TACACS+ Settings 224
TACACS+ Configuration 224
TACACS+ Server Summary 225
TACACS+ Server Configuration 226
TACACS+ Source Interface Configuration 227

Chapter 7: Configuring Quality of Service 228
Configuring Access Control Lists 229
IP Access Control Lists 229
Access Control List Summary 230
Access Control List Configuration 231
Access Control List Interface Summary 235
Access Control List VLAN Summary 236
Configuring Auto VoIP 237
Auto VoIP Global Configuration 237
OUI Table Summary 238
OUI Based Auto VoIP 239
Protocol Based Auto VoIP 240
Configuring Class of Service 242
CoS IP DSCP Mapping Configuration 242
CoS Interface Queue Configuration 245
CoS Interface Queue Drop Precedence Configuration 246
Configuring Diffserv 247
Diffserv Global Configuration and Status 247
Diffserv Class Summary 248
Diffserv Class Configuration 249
Diffserv Policy Summary 252
Diffserv Policy Configuration 253
Diffserv Service Summary 255
Diffserv Service Performance Statistics 256
Diffserv Policy Performance Statistics 257

Appendix A: Configuration Examples 258
Configuring VLANs 258
Using the EdgeSwitch UI to Configure VLANs 258
Using the CLI to Configure VLANs 260
Configuring Multiple Spanning Tree Protocol 261
Using the Web UI to Configure MSTP 261
Using the CLI to Configure MSTP 263
Configuring VLAN Routing 264
Using the CLI to Configure VLAN Routing 264
Configuring Policy-Based Routing 266
Configuring Policy-Based Routing Using the CLI 266
Configuring 802.1X Network Access Control 269
Using the CLI to Configure 802.1X Port-Based Access Control 269
Configuring Differentiated Services for VoIP 270
Using the CLI to Configure DiffServ VoIP Support 270

Appendix B: Contact Information 272
Ubiquiti Networks Support 272
Online Resources 272

About This Document

This section contains the following information about this document:

- **"Purpose and Audience" on page 8**
- **"Document Organization" on page 8**
- **"Products and Models" on page 8**
- **"Related Documents" on page 9**
- **"Typographical Conventions" on page 9**
- **"Typographical Conventions" on page 9**

Purpose and Audience

This guide describes how to configure the EdgeSwitch software features using the browser-based EdgeSwitch user interface (UI). The information in this guide is intended for system administrators who are responsible for configuring and operating a network using EdgeSwitch devices.

To obtain the greatest benefit from this guide, you should have an understanding of the base software and should have read the specification for your networking device platform. You should also have basic knowledge of Ethernet and networking concepts.

Document Organization

This guide contains the following sections:

- **"Chapter 1: Getting Started" on page 10** contains information about performing the initial system configuration and accessing the user interface.
- **"Chapter 3: Configuring System Information" on page 19** describes how to configure administrative features such as SNMP, system users, and port information.
- **"Chapter 4: Configuring Switching Information" on page 126** describes how to manage and monitor the Layer-2 switching features.
- **"Chapter 5: Configuring Routing" on page 187** describes how to configure the Layer-3 routing features.
- **"Chapter 6: Managing Device Security" on page 204** contains information about configuring switch security information such as port access control, TACACS+, and RADIUS server settings.
- **"Chapter 7: Configuring Quality of Service" on page 229** describes how to manage the EdgeSwitch software ACLs, and how to configure the Differentiated Services and Class of Service features.
- **"Appendix A: Configuration Examples" on page 259** describes how to configure selected features on the switch using either the EdgeSwitch UI, command-line interface, and/or Simple Network Management Protocol (SNMP).

Products and Models

This document covers the following Ubiquiti products and models:

Affected Products

Name	Description	Part Number
EdgeSwitch 48-port 750W	Managed PoE+ Gigabit Switch with SFP+	ES-48-750W
EdgeSwitch 48-port 500W	Managed PoE+ Gigabit Switch with SFP+	ES-48-500W
EdgeSwitch 24-port 500W	Managed PoE+ Gigabit Switch with SFP	ES-24-500W
EdgeSwitch 24-port 250W	Managed PoE+ Gigabit Switch with SFP	ES-24-250W

Related Documents

- *EdgeSwitch CLI Command Reference*
- *EdgeSwitch Quick Start Guide*

For additional information, refer to the EdgeSwitch community website: community.ubnt.com/edgemax

Typographical Conventions

The following table lists typographical conventions used throughout this document.

Typographical Conventions

Convention	Indicates	Example
Bold	User selection User-entered text	Select **VLAN 2** from the *VLAN ID* list; Click **Submit** enter **3** to assign VLAN 3 as the default VLAN
Italic	Name of a field Name of UI page, dialog box, window, etc.	delete the existing name in the *Username* field Use the *IP Address Conflict Detection* page
>	Order of navigation selections to access a page	To access the *Session* page, click **System** > **Users** > **Session**
`Courier` font	CLI commands and their output	`show network`

Chapter 1: Getting Started

This chapter describes how to start the switch and access the user interface. It contains the following sections:

- **"Connecting the Switch to the Network" on page 10**
- **"Understanding the User Interfaces" on page 10**

Connecting the Switch to the Network

For detailed instructions on how to connect the EdgeSwitch to your network, refer to the *Quick Start Guide* that came with the switch.

Understanding the User Interfaces

The EdgeSwitch software includes a set of comprehensive management functions for configuring and monitoring the system using the following methods:

- EdgeSwitch User Interface (UI)
- Command-Line Interface (CLI)

Each of the standards-based management methods allows you to configure and monitor the components of the EdgeSwitch UI. The method you use to manage the system depends on your network size and requirements, and on your preference.

This guide describes how to use the EdgeSwitch UI to manage and monitor the system. For information about how to manage and monitor the system by using the CLI, see the *EdgeSwitch CLI Command Reference*.

Using the EdgeSwitch UI

This section describes how to use the EdgeSwitch UI.

Accessing the UI

To access the switch using a web browser, the browser must meet the following software requirements:

- HTML version 4.0, or later
- HTTP version 1.1, or later
- JavaScript® version 1.5, or later

Use the following procedures to log into the EdgeSwitch UI:

1. Open a web browser and enter the IP address of the switch in the web browser address field. The login screen appears, as shown in the following illustration.



EdgeSwitch UI Login Screen


2. Type the *User Name* and *Password* into the fields on the login screen, and then click **Login**.

   The user name and password are the same as those you use to log on to the command-line interface. By default, the user name is *ubnt*, and the password is *ubnt*. Passwords are case-sensitive.

3. If this is your first login to the UI, read the license agreement. Then, click the **I agree to the terms of this License Agreement** check box and click **Log In**.
4. After the system authenticates you, the *System Description* page is displayed.

EdgeSwitch UI Page Layout


The following illustration shows the layout of a page in the EdgeSwitch UI. Each UI page contains three main areas: the device view, the navigation menu, and the configuration and status fields. Each page also provides buttons that let you perform operations on the displayed information, access a context-specific help page, or log out of the system.

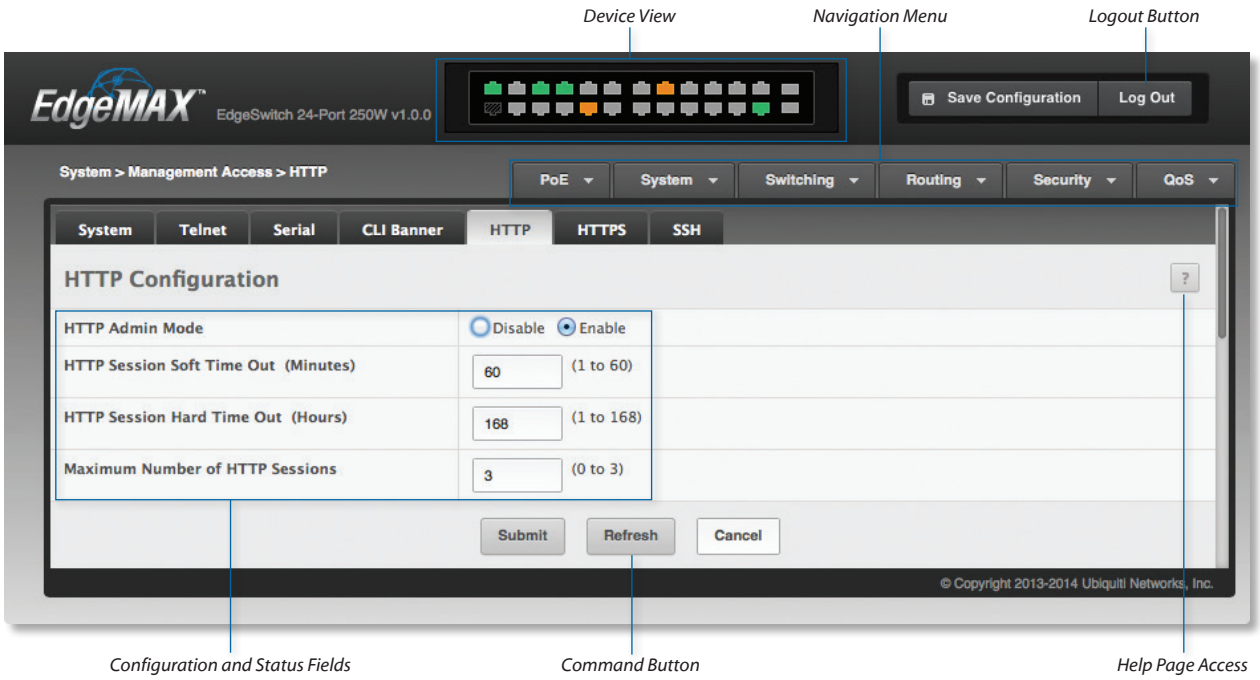

EdgeSwitch UI Page Layout

Device View

The Device View shown in the illustration below is a Java® applet that displays the ports on the switch. This graphic at the top of each UI page provides an alternate way to navigate to port-related configuration and monitoring options. The graphic also provides information about device ports, current configuration and status, table information, and feature components.

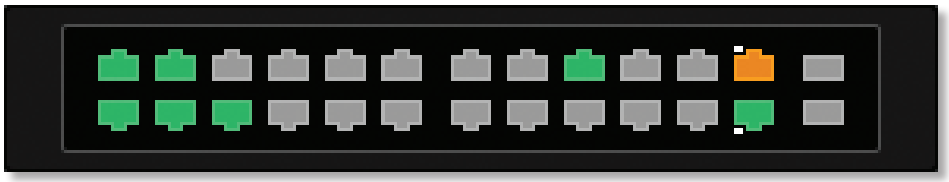


Example of Device View (24-Port Models)

In the Device View, colors indicate status information:

- Gray indicates that the port link is down.
- Amber indicates that the port link is up at 100 Mbps.
- Green indicates that the port link is up at 1 Gbps.
- A white dot indicates PoE output.

To obtain additional information on the ports:

- Click any port to display the *Port Description* page (**System** > **Port** > **Description** on the navigation menu).
- Right-click any port to display a menu with links to the following port configuration-related pages:
  - *PoE* (**PoE > PoE Configuration**)
  - *Port Summary* (**System > Port > Summary**)
  - *Port Description* (**System > Port > Description**)
  - *Port Cable Test* (**System > Port > Cable Test**)
  - *Multiple Port Mirroring* (**System Port Mirroring**)
  - *Port Summary Statistics* (**System > Statistics > System > Port Summary**)
  - *Port Detailed Statistics* (**System > Statistics > System > Port Detailed**)
- Hover over any port to display status information for that port, as shown in the following illustration.

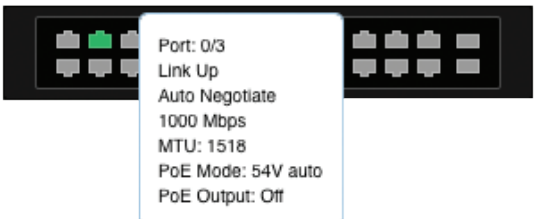


Example of Information Displayed by Hovering over a Port

Navigation Menu

The navigation menu, located at the top right of each UI page, lists the device's main features: **PoE**, **System**, **Switching**, **Routing**, **Security**, and **QoS**. You can access each feature's UI pages using a series of cascading menus.

To access an individual UI page, click the corresponding feature tab in the navigation menu to display a menu of subcategories. Select a subcategory and repeat this process until you see the desired page, and then select the page to display it in the main window.


For example, the following illustration shows how to access the *IPv6 Network Connectivity* page: first, select the main feature (**System** tab); then, the appropriate subcategory (**Connectivity**); and finally, the desired page (**IPv6**).

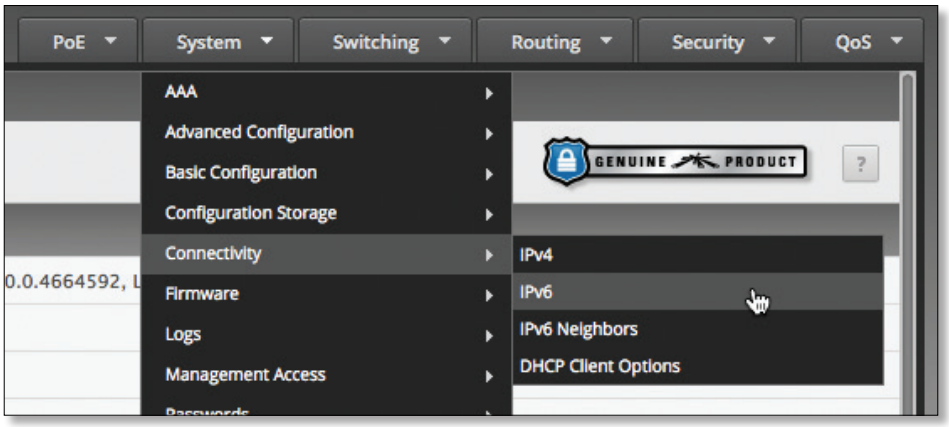

Navigation Menu View – System Tab Submenu

Each menu option (subcategory or page name) that you select is highlighted (the color changes to a lighter shade of gray). When you select a page, the navigation menus and submenus are again hidden, and the selected page appears in the main window.


In addition to the navigation menu, you can use the tabs at the top left of each page to quickly navigate among related pages. For example, from the *System Resource Configuration* page, simply click the *ARP Cache* or *Resource Status* tabs to display those pages without having to access the navigation menu, as shown in the following illustration.

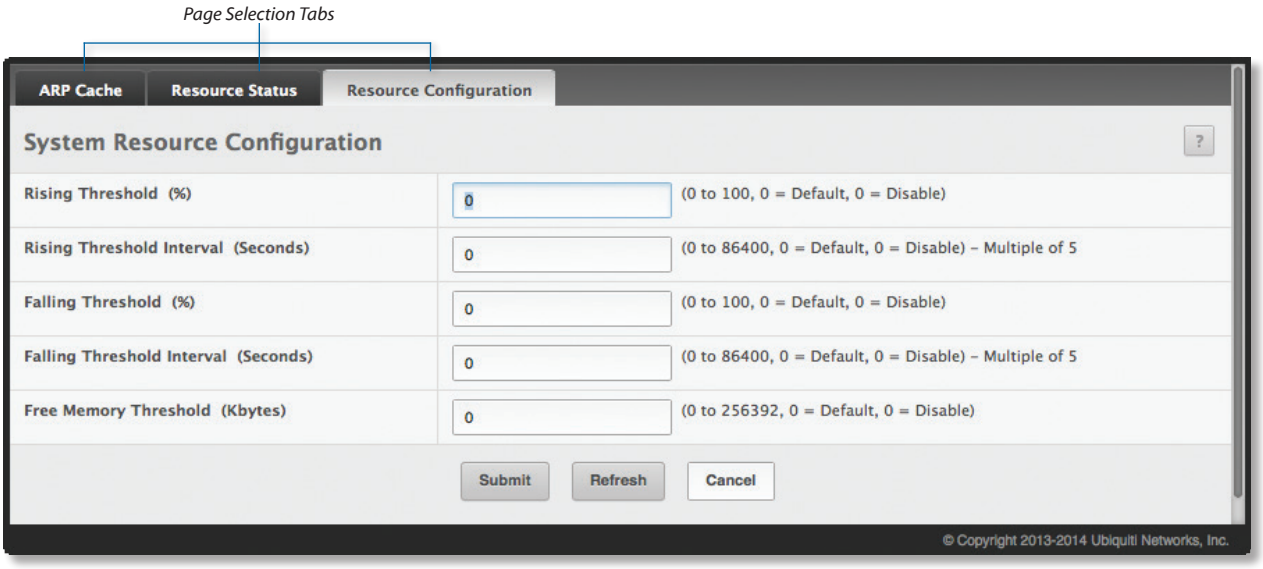

Page Selection Tabs on System Resource Configuration Page

Configuration and Status Fields

The main area of the screen displays fields that you use to configure the switch and monitor its status. Configuration options allow you to input information using text input boxes, or make selections from drop-down boxes, radio buttons, and check boxes. Status fields display read-only information related to the switch and its configuration.

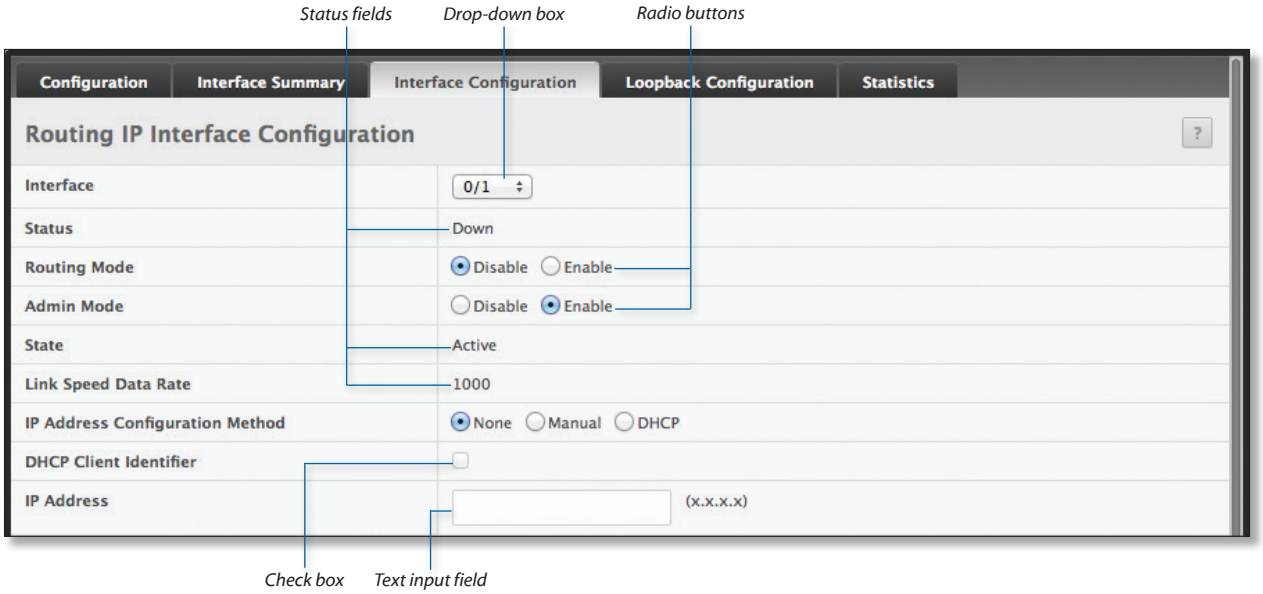

Example of Configuration and Status Fields

Command Buttons

Many UI pages also contain command buttons. These buttons, which typically appear at the bottom of a page but can also appear in the configuration and status field area, are labeled with either text or icons. The following table lists the common command buttons found throughout the UI pages.

Common Command Buttons

Button Text[1, 2]	Icon	Function
Add	+	Adds a new entry to a table.
Clear	–	Removes all entries from a table, resets statistical counters to the default value, or clears all the statistics counters and resets all switch summary and detailed statistics to default values.
Delete	–	Removes the selected entry from the running configuration.
Download	↓	Downloads data.
Edit	✎	Changes an existing entry.
Generate	⚙	Generates a security certificate, key, etc.
Initialize	⏻	Resets the 802.1X state machine on the associated interface to the initialization state.
Logout	–	Ends the session.
Re-Authenticate	⟳	Forces the associated interface to restart the authentication process.
Refresh	⟳	Refreshes the page with the most current information, or refreshes the DHCP lease.
Remove	–	Deletes the selected entries.
Reset	⏻	Resets a field to its default value.
Submit	–	Sends the updated configuration to the switch. Configuration changes take effect immediately, but changes are not retained across a power cycle unless you save them to the system configuration file. IMPORTANT: To retain changes across a power cycle (reboot), you must save the configuration to non-volatile memory, by navigating to **System** > **Configuration Storage** > **Save** and clicking **Save**.
Upload	↑	Uploads data.


[1] This is either the text label on a button, or the text that appears when hovering over a button labeled with an icon.

[2] Button names may include additional text, such as: **Add Vendor Option**, **Clear Entries**, **Remove Last Rule**, etc.

Table Sorting

All tables on UI pages can be sorted by columns. By default, the information in a table is sorted in ascending order, using the leftmost column as primary sort. To change the default sort order, click the heading above the column you want to sort the table by. Successive clicks on the heading toggle between ascending and descending order.


For example, the following illustration shows the *Event Log* page in its default sort order (sorted by *Log Index*). To sort the table entries (rows) by the *Event Time* field, simply click the *Event Time* heading.

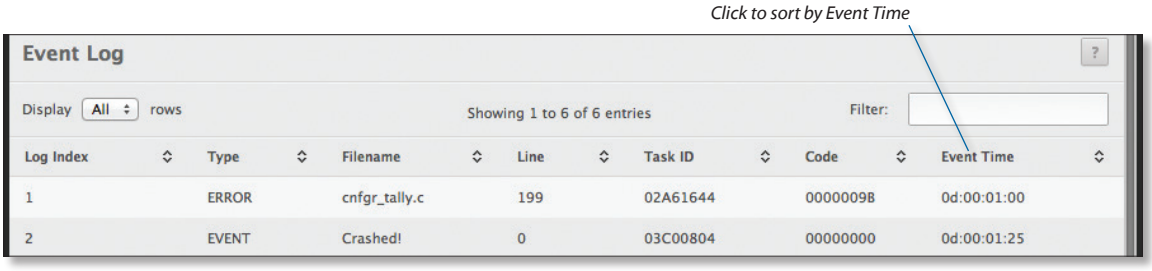

Column Headings in Table

Table Filtering

This feature allows you to specify a filter that limits which rows are displayed in a table. This is useful to reduce the contents of a long table to a specific set of items or even one particular item. To use this feature, type a string of one or more characters into the *Filter* field at the upper-right corner of the table, as shown in the following illustration. If any field of a table row contains a match for the filter string, that row is displayed in the table. Matching is not case-sensitive.

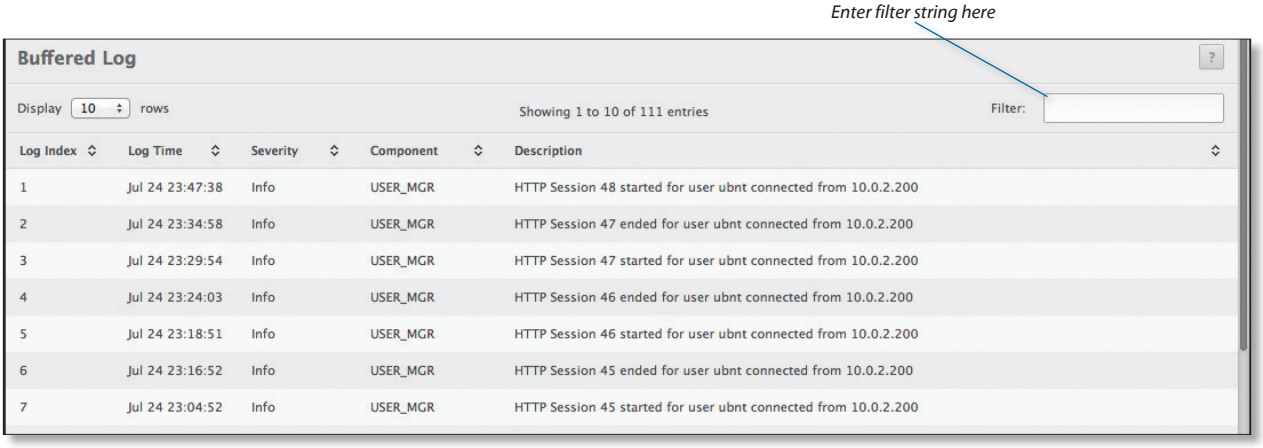

Filtering the Contents of a Table

Help Page Access

The *Help* icon appears in the upper right corner of each UI page (see the illustration **"EdgeSwitch UI Page Layout" on page 11**). Click the *Help* icon to open a new page with information on the various fields and command buttons on the active page. Online help pages are context-sensitive – the help topic is specific to the active page.



Help Icon

User-Defined Fields

User-defined fields can contain 1-159 characters, unless otherwise noted on the configuration UI page.

All characters may be used except for the following (unless specifically noted in the feature's Help page):

\ < / > * | ?

Using the Command-Line Interface

The command-line interface (CLI) is a text-based way to manage and monitor the system. You can access the CLI by using a direct serial connection or by using a remote logical connection with Telnet or SSH.

The CLI groups commands into modes according to the command function. Each of the command modes supports specific software commands. The commands in one mode are not available until you switch to that particular mode, with the exception of the User EXEC mode commands. You can execute the User EXEC mode commands in the Privileged EXEC mode.

To display the commands available in the current mode, enter a question mark (**?**) at the command prompt. To display the available command keywords or parameters, enter a question mark (**?**) after each word you type at the command prompt. If there are no additional command keywords or parameters, or if additional parameters are optional, the following message appears in the output:

```
<cr>                    Press Enter to execute the command
```

For more information about the CLI, see the *EdgeSwitch CLI Command Reference Guide*.

The *EdgeSwitch CLI Command Reference* lists each command available from the CLI by the command name and provides a brief description of the command. Each command reference also contains the following information:

- The command keywords and the required and optional parameters.
- The command mode you must be in to access the command.
- The default value, if any, of a configurable setting on the device.

Each `show` command in this document also includes a description of the information displayed by the command.

Chapter 2: Configuring Power over Ethernet


Use the PoE feature menu to display and configure the switch's Power over Ethernet (PoE) settings. The PoE tab contains links to the following features:

- **"Configuring PoE" on page 17**

Configuring PoE

This page displays information about the PoE settings on the switch's interfaces and allows you to configure those settings.

To access the *Power Over Ethernet* page, click **PoE** > **PoE Configuration** in the navigation menu.

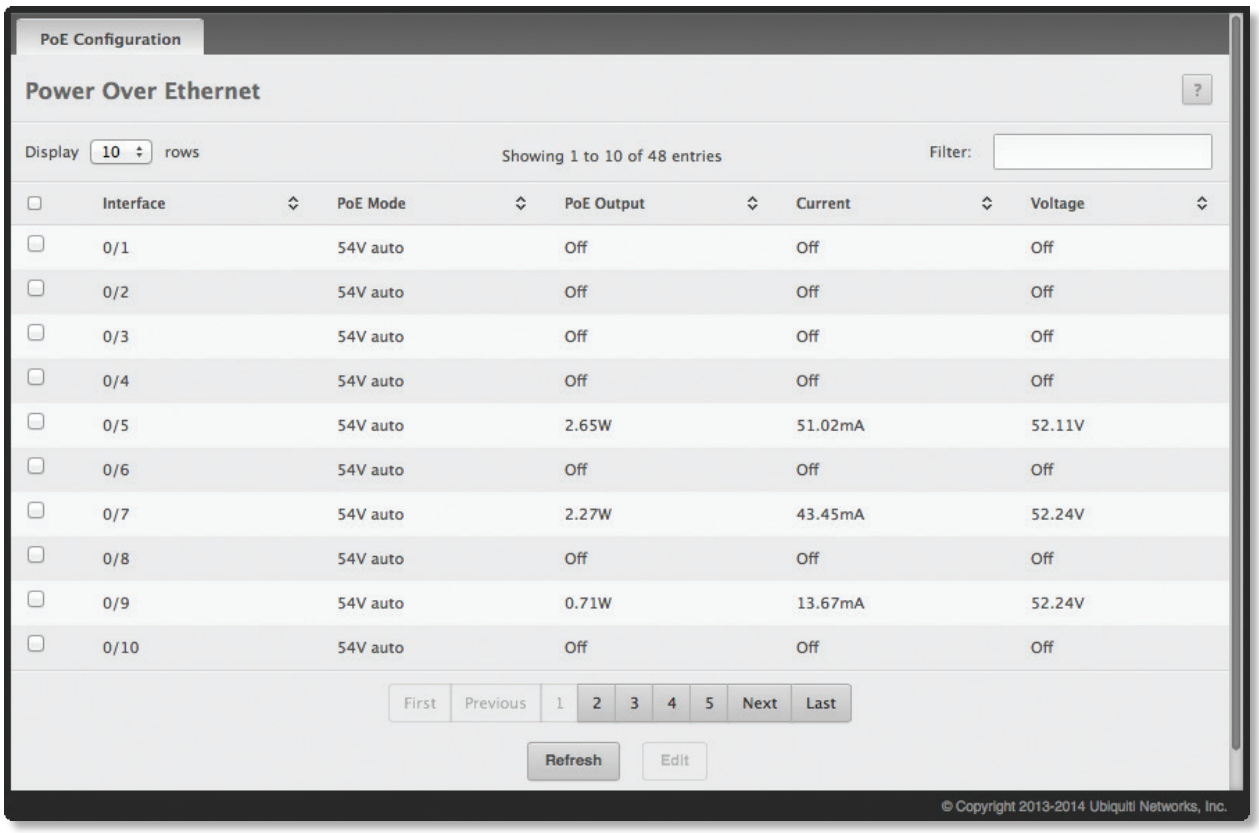

Power Over Ethernet

Power Over Ethernet Fields

Field	Description
Interface	The interface (slot/port) for which PoE information is displayed.
PoE Mode	The PoE mode on the interface: • **Off** PoE is disabled for the interface. • **54V auto** Standard PoE/PoE+ (802.3af/at) with auto-sensing is enabled for the interface. • **24V passive** Passive 24V PoE output is enabled for the interface. Note: The 24V passive setting causes power to be output immediately with no auto-sensing. Before applying the 24V passive setting, ensure that the connected device can accept passive 24V PoE power.
The following fields apply only to interfaces whose PoE mode is set to *54V auto*:	
PoE Output	The interface's current PoE output power in W
Current	The interface's current output current in mA
Voltage	The interface's current output voltage in V

Use the buttons to perform the following tasks:

- To edit an interface's PoE settings, select the interface, click **Edit**, and make the changes as needed. Then, click **Submit** to apply the settings.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Chapter 3: Configuring System Information

Use the features in the System feature menu to define the switch's relationship to its environment. The System folder contains links to the following features:


- **"Viewing ARP Cache" on page 20**
- **"Viewing Inventory Information" on page 21**
- **"Viewing the Dual Image Status" on page 22**
- **"Viewing System Resources" on page 23**
- **"Defining General Device Information" on page 25**
- **"Basic Switch Configuration" on page 52**
- **"Managing Logs" on page 53**
- **"Configuring Email Alerts" on page 60**
- **"Viewing Device Port Information" on page 65**
- **"Defining SNMP Parameters" on page 72**
- **"Viewing System Statistics" on page 80**
- **"Using System Utilities" on page 91**
- **"Managing SNMP Traps" on page 101**
- **"Managing the DHCP Server" on page 103**
- **"Configuring Time Ranges" on page 110**
- **"Configuring DNS" on page 113**
- **"Configuring SNTP Settings" on page 116**

Viewing ARP Cache

The ARP cache is a table maintained locally in each station on a network. ARP cache entries are learned by examining the source information in the ARP packet payload fields, regardless of whether it is an ARP request or response. Thus, when an ARP request is broadcast to all stations on a LAN segment or virtual LAN (VLAN), every recipient has the opportunity to store the sender's IP and MAC address in their respective ARP cache. The ARP response, being unicast, is normally seen only by the requestor, who stores the sender information in its ARP cache. Newer information always replaces existing content in the ARP cache.

The ARP cache can support 1,024 entries, although this size is user-configurable to any value less than 1,024. When multiple network interfaces are supported by a device, as is typical of a router, either a single ARP cache is used for all interfaces, or a separate cache is maintained per interface. While the latter approach is useful when network addressing is not unique per interface, this is not the case for Ethernet MAC address assignment so a single ARP cache is employed.

To display the system ARP cache, click **System** > **Status** > **ARP Cache** page in the navigation menu.

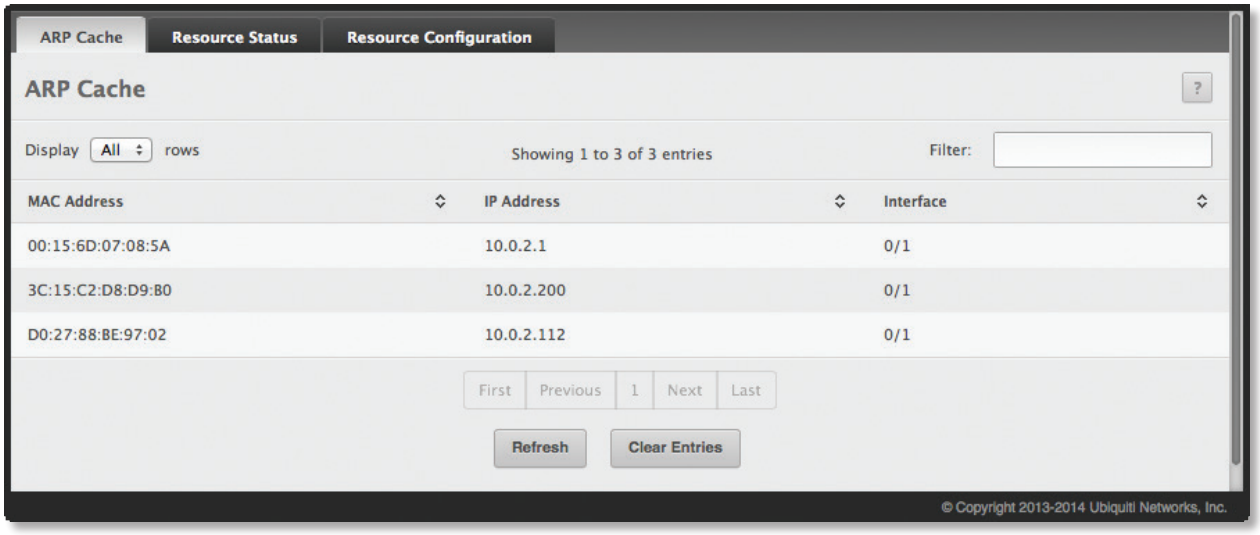

ARP Cache

ARP Cache Fields

Field	Description
MAC Address	Displays the physical (MAC) address of the system in the ARP cache.
IP Address	Displays the IP address associated with the system's MAC address.
Interface	Displays the unit, slot, and port number being used for the connection. For non-stacking systems, only the slot and port number is displayed. For units that have a service port, the service port will be listed as *Management* in this field.


Use the buttons to perform the following tasks:

- Click **Refresh** to reload the page and refresh the ARP cache view.
- Click **Clear Entries** to clear all entries from the table. The table will be repopulated as new addresses are learned.

Viewing Inventory Information

Use the *System Inventory Information* page to display the switch's Vital Product Data, which is stored in non-volatile memory at the factory.

To display the inventory information, click **System** > **Summary** > **Inventory** page in the menu.

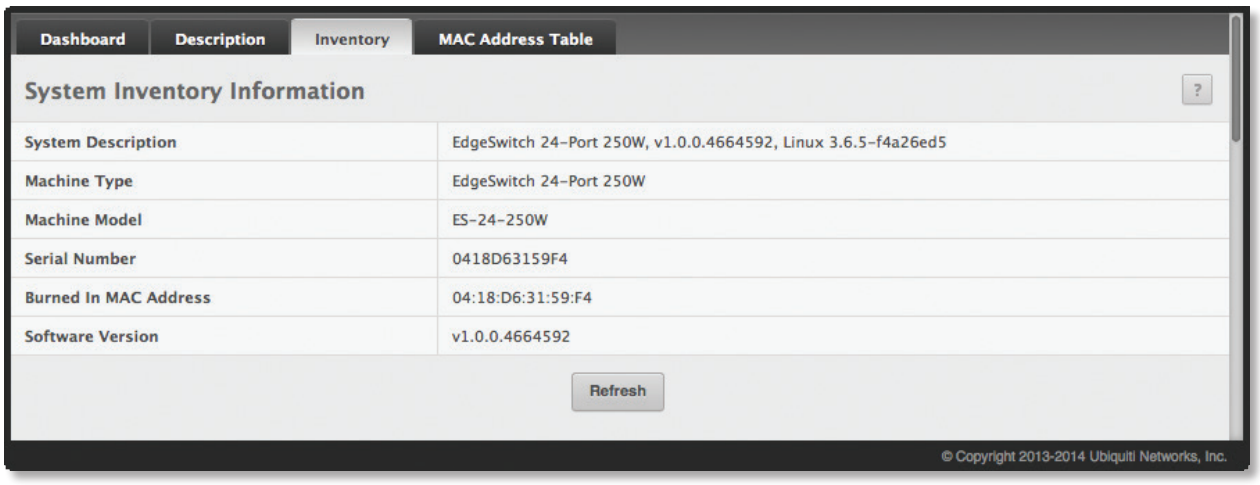

System Inventory Information

System Inventory Information Fields


Field	Description
System Description	The product name of this switch.
Machine Type	The hardware platform of this switch.
Machine Model	The product model number.
Serial Number	The unique serial number used to identify this switch.
Burned In MAC Address	The burned-in universally administered MAC address of this switch.
Software Version	The *release.version.maintenance* number of the code currently running on the switch. For example, if the release is 1, the version is 2 and the maintenance number is 4, the format is "1.2.4."

Click **Refresh** to refresh the page with the most current data from the switch.

Viewing the Dual Image Status

The Dual Image feature allows the switch to have two EdgeSwitch software images in the permanent storage. One image is the active image, and the second image is the backup. This feature reduces the system down-time during upgrades and downgrades. You can use the *Dual Image Status* page to view information about the system images on the device.

To display the *Dual Image Status* page, click **System** > **Firmware** > **Status** in the navigation menu.

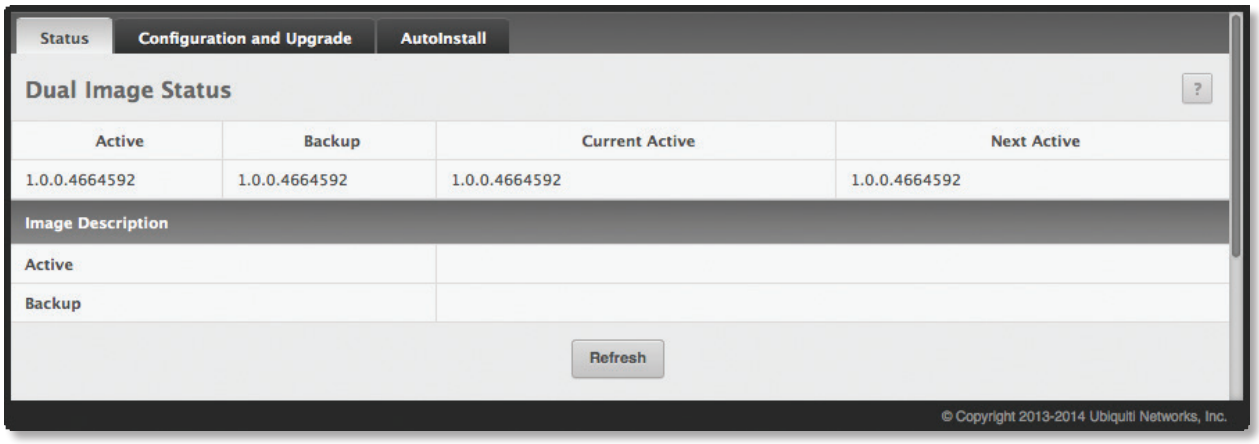

Dual Image Status

Dual Image Status Fields

Field	Description
Active	Displays the version of the active code file.
Backup	Displays the version of the backup code file.
Current Active	Displays the currently active image on this unit.
Next Active	Displays the image to be used on the next restart of this unit.
Active	Displays the description associated with the active code file.
Backup	Displays the description associated with the backup code file.

Click **Refresh** to display the latest information from the switch.

For information about how to update or change system images, see **"Using System Utilities" on page 91**.


Viewing System Resources

System Resource Status

Use the *System Resource Status* page to display the following memory information for the switch:

- Free memory
- Allocated memory
- CPU utilization by task
- Total CPU utilization at the following intervals:
  - Five seconds
  - One minute
  - Five minutes

To display the *System Resource Status* page, click **System** > **Status** > **Resource Status** in the navigation menu.

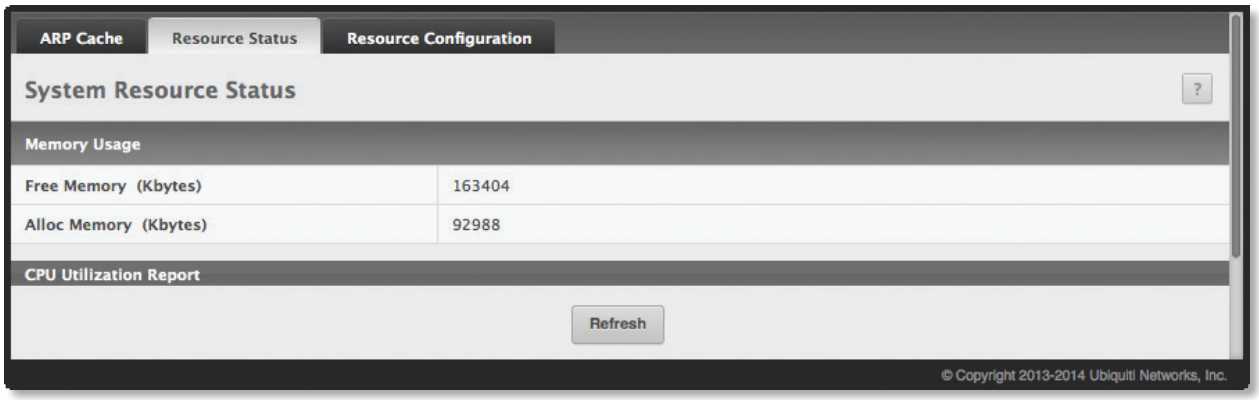

System Resource Status


System Resource Status Fields

Field	Description
Memory Usage section:	
Free Memory	Displays the available free memory on the switch.
Alloc Memory	Displays the allocated memory for the switch.
Task ID	Displays the ID of running tasks.
Task Name	Displays the name of the running tasks.
CPU Utilization Report section:	
5 Seconds	The percentage amount of CPU utilization consumed by the corresponding task in the last 5 seconds.
60 Seconds	The percentage amount of CPU utilization consumed by the corresponding task in the last 60 seconds.
300 Seconds	The percentage amount of CPU utilization consumed by the corresponding task in the last 300 seconds.

Click **Refresh** to display the latest information from the switch.

System Resource Configuration

To display the *System Resource Configuration* page, click **System** > **Status** > **Resource Configuration** in the navigation menu.

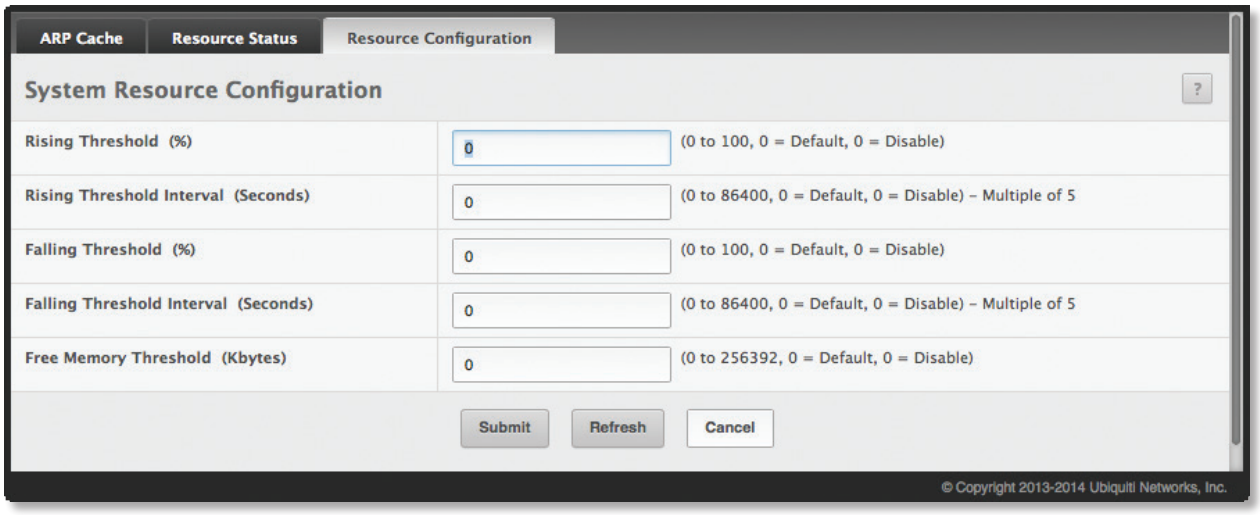

System Resource Configuration

System Resource Configuration Fields

Field	Description
Rising Threshold	The CPU rising utilization threshold in percentage. A *0* (zero) percent threshold indicates that the CPU Utilization Notification feature is disabled.
Rising Threshold Interval	The CPU rising threshold interval in seconds. The time interval is configured in multiples of 5. A time interval of *0* (zero) seconds indicates that the CPU Utilization Notification feature is disabled.
Falling Threshold	The CPU falling utilization threshold in percentage. Configuration of this field is optional. If configured, the falling threshold value must be equal to or less than the rising threshold value. If not configured, it takes the same value as the rising threshold.
Falling Threshold Interval	The CPU falling threshold interval in seconds. Configuration of this field is optional. If configured, the falling interval value must be equal to or less than the rising interval value. If not configured, it takes the same value as the rising interval. The time interval is configured in multiples of 5.
Free Memory Threshold	The CPU free memory threshold in kilobytes. A *0* (zero) threshold value indicates that the CPU Free Memory Notification feature is disabled.

Use the buttons to perform the following tasks:

- Click **Submit** to apply the settings immediately to the running configuration.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Defining General Device Information


The System menu's Configuration and Summary submenus contains links to pages that allow you to configure device parameters, such as the following features:

- **"System Description" on page 26**
- **"IP Address Conflict Detection" on page 27**
- **"Network Connectivity" on page 27**
- **"Network Port IPv6 Neighbors" on page 30**
- **"DHCP Client Options" on page 31**
- **"HTTP Configuration" on page 31**
- **"Secure HTTP Configuration" on page 32**
- **"SSH Configuration" on page 33**
- **"Telnet Session Configuration" on page 34**
- **"User Accounts" on page 35**
- **"Authentication Server Users" on page 37**
- **"Logged in Sessions" on page 39**
- **"User Domain Name" on page 39**
- **"Accounting List" on page 40**
- **"Accounting Selection" on page 41**
- **"Authentication List Configuration" on page 42**
- **"Authentication Selection" on page 44**
- **"Line Password Configuration" on page 44**
- **"Enable Password Configuration" on page 45**
- **"Password Rules" on page 46**
- **"Last Password Result" on page 48**
- **"Denial of Service Configuration" on page 49**
- **"CLI Banner Configuration" on page 51**

System Description

After a successful login, the *System Description* page displays. Use this page to configure and view general device information.

To display the *System Description* page, click **System** > **Summary** > **Description** in the navigation menu.

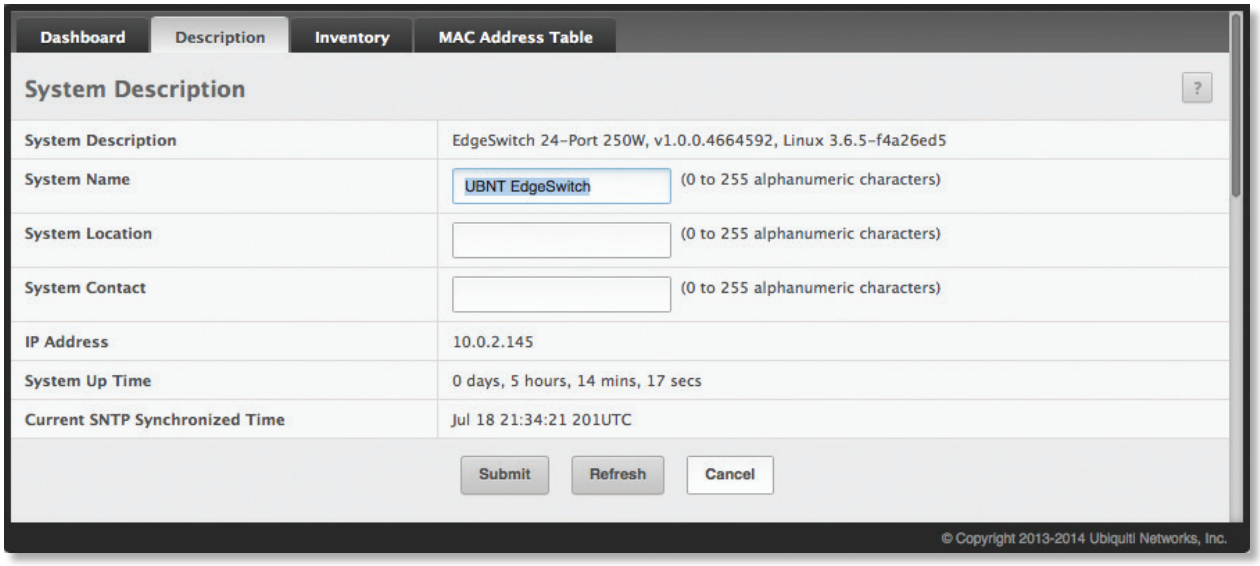

System Description

System Description Fields

Field	Description
System Description	The product name of this switch.
System Name	Enter the name you want to use to identify this switch. You may use up to 31 alphanumeric characters. This field is blank by default.
System Location	Enter the location of this switch. You may use up to 31 alphanumeric characters. This field is blank by default.
System Contact	Enter the contact person for this switch. You may use up to 31 alphanumeric characters. This field is blank by default.
IP Address	The IP Address assigned to the network interface. The network interface is the logical interface that allows remote management of the device via any of the front-panel switch ports. To change the IP address, see **"Network Connectivity" on page 27**.
System Up Time	Displays the number of days, hours, and minutes since the last system restart.
Current SNTP Synchronized Time	Displays currently synchronized SNTP time in UTC. If no SNTP server has been configured and the time is not synchronized, this field displays "Not Synchronized." To specify an SNTP server, see **"Configuring SNTP Settings" on page 116**.

Defining System Information

1. Open the *System Description* page.
2. Define the following fields: *System Name*, *System Contact*, and *System Location*.
3. Scroll to the bottom of the page and click **Submit**.


   The system parameters are applied, and the device is updated.

Click **Refresh** to refresh the page with the most current data from the switch. Click **Cancel** to exit the page. To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

IP Address Conflict Detection

Use the I*P Address Conflict Detection* page to run the IP Address Conflict Detection tool, which detects IP address conflicts for IPv4 addresses. When a conflict is detected, the switch updates the status on the page, generates an SNMP trap, and logs a message noting the conflict.

To display the *IP Address Conflict Detection* page, click **System** > **Utilities** > **IP Address Conflict** in the navigation menu.

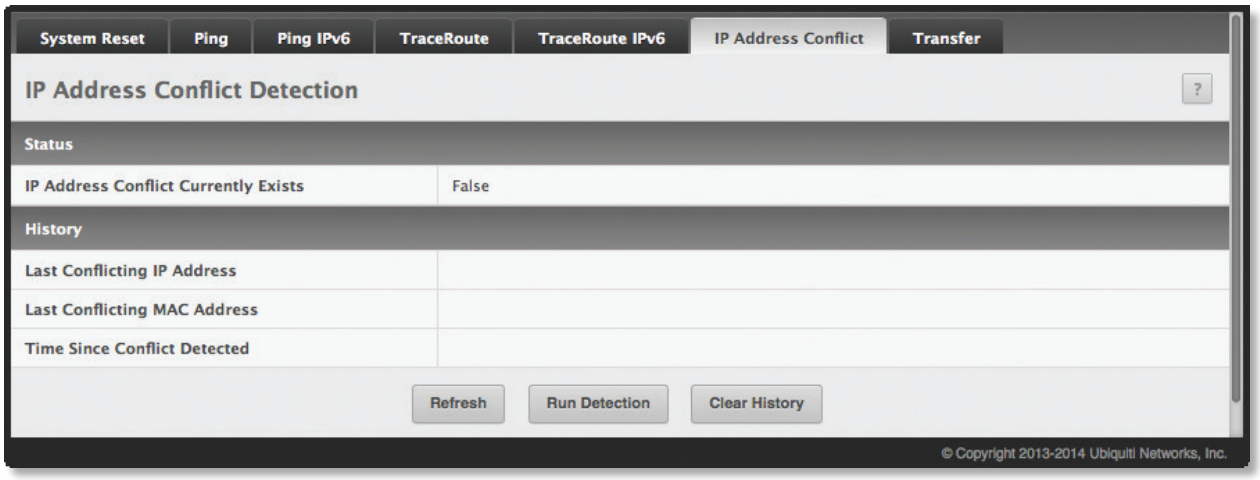

IP Address Conflict Detection

IP Address Conflict Detection Fields

Field	Description
IP Address Conflict Currently Exists	Shows whether a conflicting IP address has been detected since status was last reset. • **False** No conflict detected (the subsequent fields on this page are displayed as N/A). • **True** Conflict was detected (the subsequent fields on this page show the relevant information).
Last Conflicting IP Address	The IP address of the interface that was last found to be in conflict. If multiple conflicts were detected, only the most recent occurrence is displayed. This field displays only if a conflict has been detected since the switch was last reset.
Last Conflicting MAC Address	The MAC address of the remote host associated with the IP address that was last found to be in conflict. If multiple conflicts are detected, only the most recent occurrence is displayed. This field is displayed only if a conflict has been detected since the switch was last reset.
Time Since Conflict Detected	The time elapsed (displayed in days, hours, minutes, and seconds) since the last address conflict was detected (provided **Clear History** has not yet been clicked). This field is displayed only if a conflict has been detected since the switch was last reset.

Use the buttons to perform the following tasks:


- To run the tool and check for possible address conflicts, click **Run Detection**.
- To reset the last IP address conflict detection status information seen by the switch, click **Clear History**.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Network Connectivity

The network interface is the logical interface used for in-band connectivity with the switch via any of the switch's front panel ports. The configuration parameters associated with the switch's network interface do not affect the configuration of the front panel ports through which traffic is switched or routed.


The *IPv4 Network Connectivity* and *IPv6 Network Connectivity* pages allow you to change the IPv4 and IPv6 information using the EdgeSwitch UI. To access the pages, click **System** > **Connectivity** > **IPv4** or **IPv6** in the navigation menu.

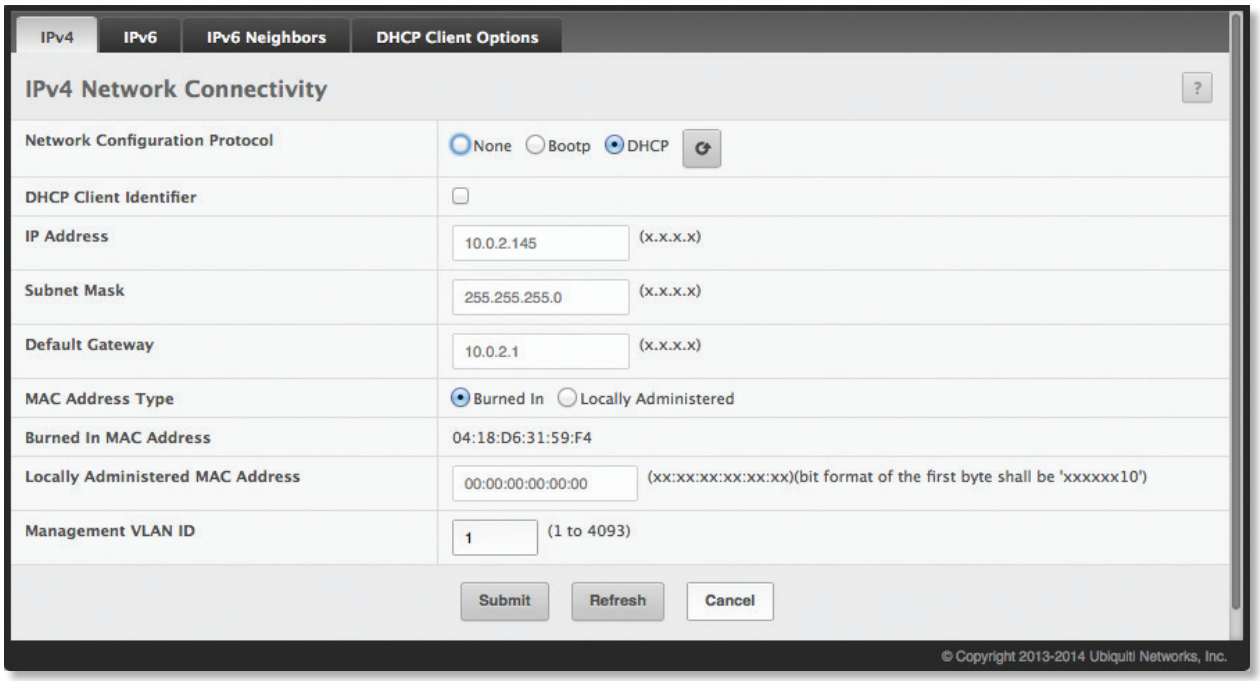

IPv4 Network Connectivity

IPv4 Network Connectivity Fields

Field	Description
Network Configuration Protocol	Specifies what the switch should do following power-up. The factory default is *None*. Options are as follows: • **None** Do not send any requests following power-up. • **Bootp** Transmit a Bootp request. • **DHCP** Transmit a DHCP request. Click to refresh the DHCP lease.
DHCP Client Identifier	The DHCP Client Identifier (Option 61) is used by DHCP clients to specify their unique identifier. DHCP servers use this value to index their database of address bindings. This value must be unique for all clients in an administrative domain. The Client Identifier string is displayed beside the check box if DHCP is enabled on the port on which the Client Identifier option is selected (the UI page must be refreshed after this change is made).
IP Address	The IP address of the network interface. The factory default value is *0.0.0.0*. **Note:** Each part of the IP address must start with a number other than zero. For example, IP addresses 001.100.192.6 and 192.001.10.3 are not valid.
Subnet Mask	The IP subnet mask for the interface. The factory default value is *0.0.0.0*.
Default Gateway	The default gateway for the IP interface. The factory default value is *0.0.0.0*.
MAC Address Type	Specifies whether to use the burned-in or the locally administered MAC address for in-band connectivity. The factory default is *Burned In*.
Burned-In MAC Address	This read-only field displays the MAC address that is burned-in to the network card at the factory. This MAC address is used for in-band connectivity if you choose not to configure a locally administered address.
Locally Administered MAC Address	Specifies a locally administered MAC address for in-band connectivity instead of using the burned-in universally administered MAC address. In addition to entering an address in this field, you must also set the MAC address type to locally administered. Enter the address as twelve hexadecimal digits (6 bytes) with a colon between each byte. Bit 1 of byte 0 must be set to a 1 and bit 0 to a 0; i.e., byte 0 must have a value between x'40' and x'7F'.
Management VLAN ID	Specifies the management VLAN ID of the switch. It may be configured to any value from *1* to *4093*. The management VLAN is used for management of the switch. This field is configurable for administrative users and read-only for other users.

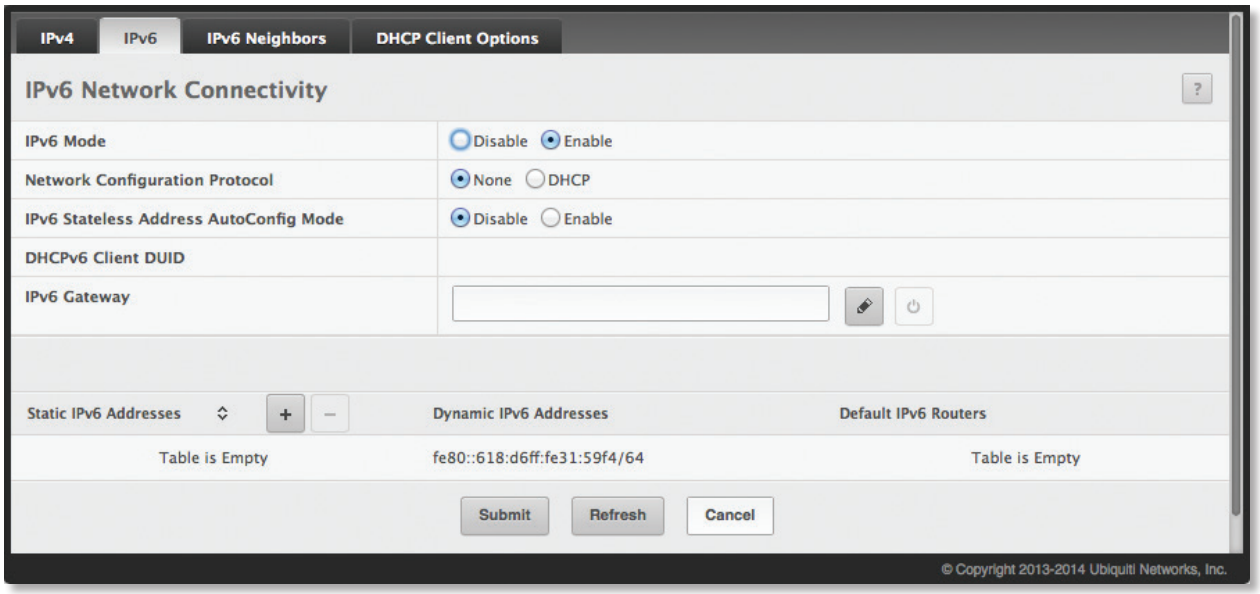

IPv6 Network Connectivity

IPv6 Network Connectivity Fields

Field	Description
IPv6 Mode	Enables or disables IPv6 mode.
Network Configuration Protocol	Specifies whether the device should attempt to acquire network information from a DHCPv6 server. The factory default is *None*, which disables the DHCPv6 client on the network interface.
IPv6 Stateless Address AutoConfig Mode	Sets the IPv6 stateless address autoconfiguration mode on the network interface. • **Enabled** The network interface can acquire an IPv6 address through IPv6 Neighbor Discovery Protocol (NDP) and the use of Router Advertisement messages. • **Disabled** The network interface will not use the native IPv6 address autoconfiguration features to acquire an IPv6 address.
DHCPv6 Client DUID	The client identifier used by DHCPv6 Client when sending messages to the DHCPv6 Server. Displayed only if IPv6 *Network Configuration Protocol* is set to *DHCP*.
IPv6 Gateway	The default gateway for the IPv6 network interface. Use the buttons to perform the following: Click this button to change the field's setting. Click this button to reset the field to the default value.
Static IPv6 Addresses	The configured static IPv6 addresses. Use the buttons to perform the following: Click this button to add an IPv6 address by configuring the *New IPv6 Address* and *EUI Flag* fields in the *Add IPv6 Address* dialog box. To remove an IPv6 address, select it and then click this button. To remove *all* IPv6 addresses, click this button in the heading row.
New IPv6 Address	Specifies the IPv6 address being added.
EUI Flag	Sets the EUI flag while configuring a new IPv6 address when selected. The default is option not selected.
Dynamic IPv6 Addresses	The configured dynamic IPv6 addresses.
Default IPv6 Routers	The default IPv6 Router address(es).

Use the buttons to perform the following tasks:


- If you change any of the network connectivity parameters, click **Submit** to apply the settings immediately to the running configuration.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Network Port IPv6 Neighbors

When IPv6 is enabled on the service port, and a ping is initiated to a neighbor, the neighbor is added to the cache (if successful). The *Network Port IPv6 Neighbors* page displays data on these ports.

To access this page, click **System** > **Connectivity** > **IPv6 Neighbors**.

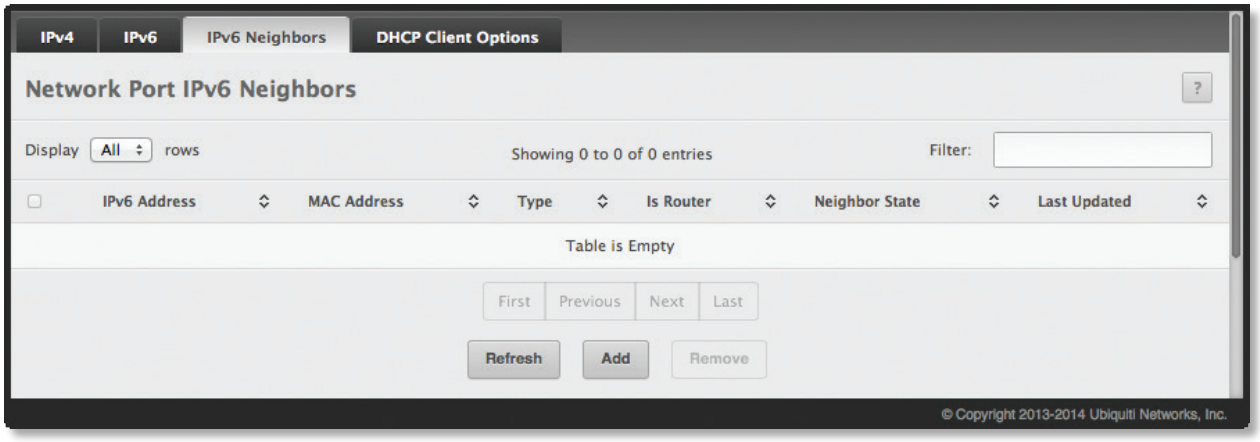

Network Port IPv6 Neighbors

Network Port IPv6 Neighbors Fields

Field	Description
IPv6 Address	The IPv6 address of a neighbor device that has been reachable on the local link through the network interface.
MAC Address	The MAC address of the neighboring device.
Type	The type of the neighbor entry, which is one of the following: • **Static** The neighbor entry is manually configured. • **Dynamic** The neighbor entry is dynamically resolved. • **Local** The neighbor entry is a local entry. • **Other** The neighbor entry is an unknown entry.
Is Router	Indicates whether the neighbor is a router. The possible values are: • **True** The neighbor device is a router. • **False** The neighbor device is not a router.
Neighbor State	Specifies the state of the neighbor cache entry. Following are the states for dynamic entries in the IPv6 neighbor discovery cache: • **Reachable** The neighbor is reachable through the network interface. • **Stale** The neighbor is not known to be reachable, and the system will begin the process to reach the neighbor. • **Delay** The neighbor is not known to be reachable, and upper-layer protocols are attempting to provide reachability information. • **Probe** The neighbor is not known to be reachable, and the device is attempting to probe for this neighbor. • **Unknown** The reachability status cannot be determined.
Last Updated	The amount of time that has passed since the neighbor entry was last updated.


Use the buttons to perform the following tasks:

- To add a network port static IPv6 neighbor entry, click **Add**, configure the settings, and click **Submit** to apply the changes.
- To remove entries, select each entry to remove, click **Remove**, and confirm the removal.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

DHCP Client Options

Use the *DHCP Client Options* page to configure DHCP client settings on the system. To access the *DHCP Client Options* page, click **System** > **Connectivity** > **DHCP Client Options** in the navigation menu.

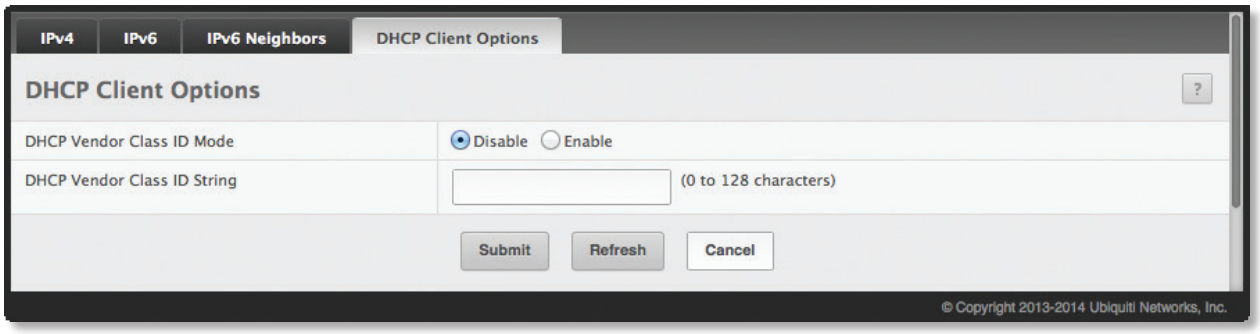

DHCP Client Options

DHCP Client Options Fields

Field	Description
DHCP Vendor Class ID Mode	The VCI administrative mode (*Enable* or *Disable*). When enabled, the DHCP client includes the text configured as the *DHCP Vendor Class ID String* in DHCP requests.
DHCP Vendor Class ID String	The text string added to DHCP requests as Option-60; i.e., Vendor Class Identifier option.


Use the buttons to perform the following tasks:

- Click **Submit** to apply the settings immediately to the running configuration.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

HTTP Configuration

Use the *HTTP Configuration* page to configure the HTTP server settings on the system. To access the *HTTP Configuration* page, click **System** > **Management Access** > **HTTP** in the navigation menu.

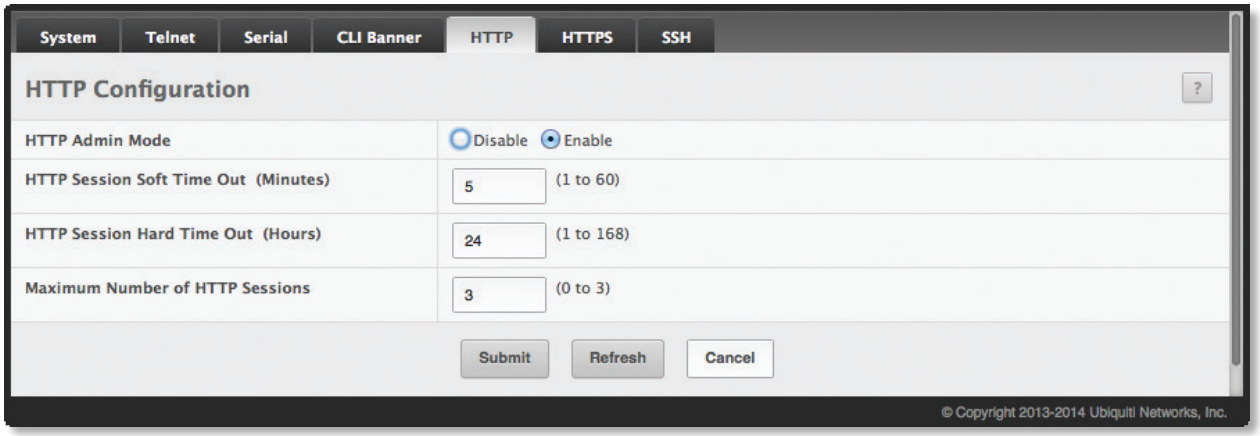

HTTP Configuration

HTTP Configuration Fields

Field	Description
HTTP Admin Mode	Used to *Enable* (default) or *Disable* the HTTP administrative mode. If this field is set to *Disable*, access to the UI is limited to secure HTTP, which is disabled by default.
HTTP Session Soft Timeout	Specifies the inactivity timeout value for HTTP sessions, in the range of *1* to *60* minutes (*0* corresponds to an infinite timeout). The default value is *5* minutes.

HTTP Configuration Fields (Continued)

Field	Description
HTTP Session Hard Timeout	Specifies the hard timeout value for HTTP sessions in the range of *1* to *168* hours (*0* corresponds to an infinite timeout). The default is *24* hours. This timeout is unaffected by the activity level of the session.
Maximum Number of HTTP Sessions	Specifies the maximum allowable number of HTTP sessions, in the range of *0* to *16* sessions. The default value is *16*.

Use the buttons to perform the following tasks:


- Click **Submit** to apply the settings immediately to the running configuration.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Secure HTTP Configuration

Use the *Secure HTTP Configuration* page to view and modify the Secure HTTP (HTTPS) settings on the device. HTTPS increases the security of web-based management by encrypting communication between the administrative system and the device.

To access this page, click **System** > **Management Access** > **HTTPS** in the navigation menu.

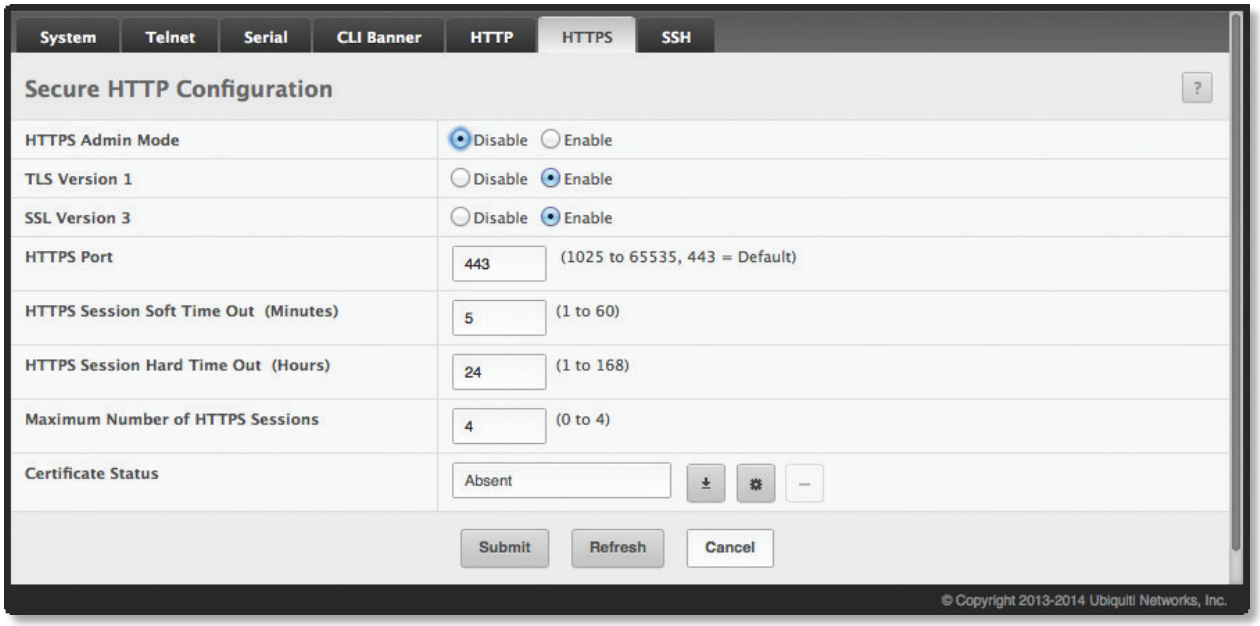

Secure HTTP Configuration

Secure HTTP Configuration Fields

Field	Description
HTTPS Admin Mode	Used to *Enable* or *Disable* the HTTPS administrative mode. When this mode is enabled, the device can be accessed through a web browser using the HTTPS protocol.
TLS Version 1	Used to *Enable* or *Disable* Transport Layer Security Version 1.0. When enabled, communication between the web browser on the administrative system and the web server on the device is sent through TLS 1.0.
SSL Version 3	Used to *Enable* or *Disable* Secure Sockets Layer Version 3.0. When enabled, communication between the administrative system's web browser and the device's web server is sent through SSL 3.0. SSL must be administratively disabled while downloading an SSL certificate file from a remote server to the device.
HTTPS Port	The TCP port number that HTTPS uses.
HTTPS Session Soft Time Out (Minutes)	The maximum time in minutes that a user logged into an HTTPS session can be inactive before being automatically logged out of the HTTPS session.
HTTPS Session Hard Time Out (Hours)	The maximum time in hours that a user connected to the device via an HTTPS session can be inactive before being automatically logged out, regardless of the amount of HTTPS activity that occurs.

Secure HTTP Configuration Fields (Continued)

Field	Description
Maximum Number of HTTPS Sessions	The maximum number of HTTPS sessions that can be connected to the device simultaneously.
Certificate Status	The status of the SSL certificate generation process. • **Present** The certificate has been generated and is present on the device • **Absent** Certificate is not available on the device • **Generation In Progress** An SSL certificate is currently being generated. Use the buttons next to this field to perform the following: Click this button to download an SSL certificate file from a remote system to the device. Note that to download SSL certificate files, SSL must be administratively disabled. Click this button to generate an SSL certificate to use for secure communication between the web browser and the embedded web server on the device. Click this button to delete an SSL certificate (button available only if an SSL certificate is present on the device).

Use the buttons to perform the following tasks:


- If you make changes to the page, click **Submit** to apply the changes to the running configuration.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

SSH Configuration

Use the *SSH Configuration* page to view and modify the Secure Shell (SSH) server settings on the device. SSH is a network protocol that enables access to the CLI management interface by using an SSH client on a remote administrative system. SSH is a more secure access method than Telnet because it encrypts communication between the administrative system and the device. This page also allows you to download or generate SSH host keys for secure CLI-based management.

To access the page, click **System** > **Management Access** > **SSH** in the navigation menu.

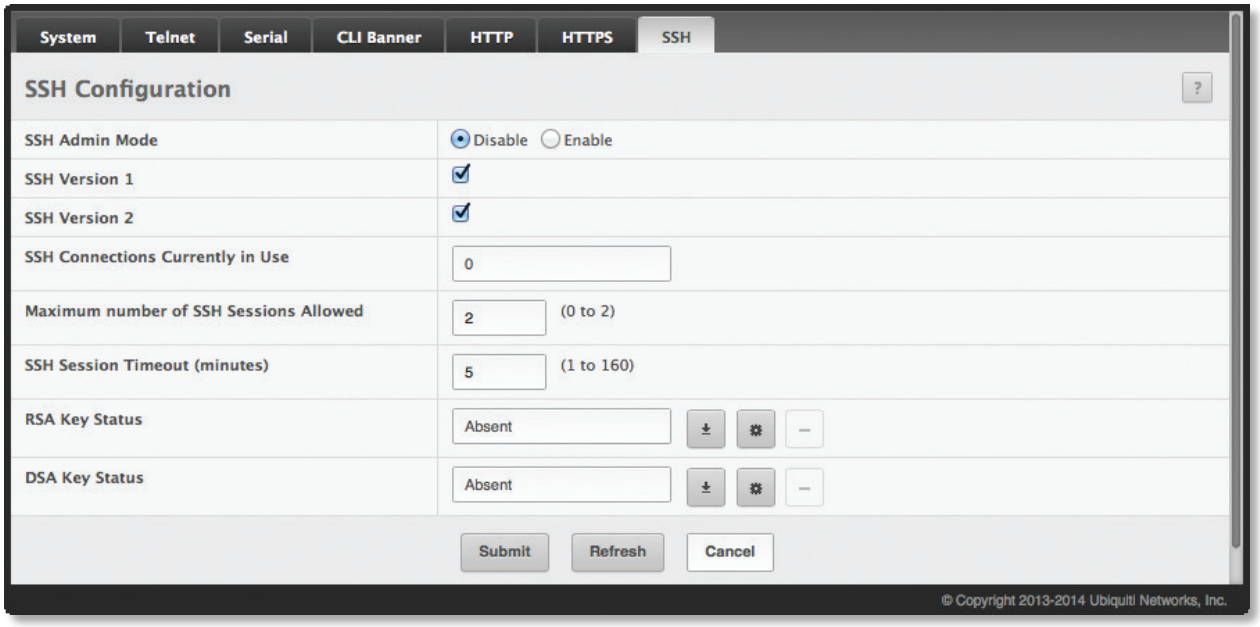

SSH Configuration

SSH Configuration Fields

Field	Description
SSH Admin Mode	Used to *Enable* or *Disable* the SSH server administrative mode. When this mode is enabled, the device can be accessed by using an SSH client on a remote system.
SSH Version 1	Select this option to enable the device's SSH server to accept connections from SSH clients using SSH-1 protocol. Clear this option to disable connections from clients using SSH-1 protocol.
SSH Version 2	Select this option to enable the device's SSH server to accept connections from SSH clients using SSH-2 protocol. Clear this option to disable connections from clients using SSH-2 protocol.
SSH Connections Currently in Use	The number of active SSH sessions between remote SSH clients and the SSH server on the device.
Maximum number of SSH Sessions Allowed	The maximum number of SSH sessions that may be connected to the device simultaneously.
SSH Session Timeout (minutes)	The SSH session inactivity timeout value. A connected user that does not exhibit any SSH activity for this amount of time is automatically disconnected from the device.
RSA Key Status	The status of the SSH-1 Rivest-Shamir-Adleman (RSA) key file or SSH-2 RSA key file (PEM Encoded) on the device, which might be *Present*, *Absent*, or *Generation in Progress*. Use the buttons as follows: Click to download an SSH-1 RSA or SSH-2 RSA key file from a remote system. In the *Download Certificate* dialog box, select the file type to download, browse to the file location on the remote system, select the file, and click **Begin Transfer**. The *Status* field provides information about the file transfer. Click to manually generate an RSA key on the device. Click to delete an RSA key downloaded to the device or manually generated on the device.
DSA Key Status	The status of the SSH-2 Digital Signature Algorithm (DSA) key file (PEM Encoded) on the device, which might be *Present*, *Absent*, or *Generation in Progress*. Use the buttons as follows: Click to download an SSH-2 DSA key file from a remote system. In the *Download Certificate* dialog box, select the file type to download, browse to the file location on the remote system, select the file, and click **Begin Transfer**. The *Status* field provides information about the file transfer. Click to manually generate a DSA key on the device. Click to delete a DSA key downloaded to the device or manually generated on the device.

Use the buttons to perform the following tasks:


- If you make changes to the page, click **Submit** to apply the changes to the running configuration.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Telnet Session Configuration

Telnet is a terminal emulation TCP/IP protocol. ASCII terminals can be virtually connected to the local device through a TCP/IP protocol network. Telnet is an alternative to a local login terminal where a remote login is required. The switch supports up to five simultaneous Telnet sessions. All CLI commands can be used over a Telnet session.

The *Telnet Session Configuration* page lets you control inbound Telnet settings on the switch. Inbound Telnet sessions originate on a remote system and allow a user on that system to connect to the switch CLI. To display the *Telnet Session Configuration* page, click **System** > **Management Access** > **Telnet** in the navigation menu.

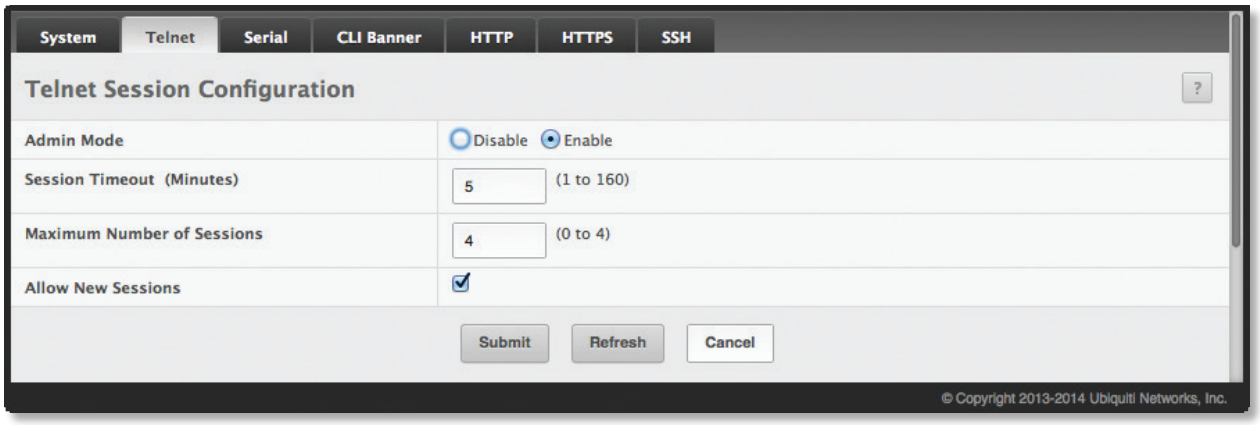

Telnet Session Configuration

Telnet Session Configuration Fields

Field	Description
Admin Mode	Used to *Enable* or *Disable* the Telnet administrative mode. When enabled, the device may be accessed through the Telnet port (23). Disabling this mode value disconnects all existing Telnet connections and shuts down the Telnet port in the device.
Session Timeout (Minutes)	Specifies how many minutes (from *1* to *160*) a Telnet session can be inactive before it is logged off. The factory default is *5*. **Note:** When you change the timeout value, it is immediately applied to all active and inactive sessions. Any sessions that have been idle longer than the new timeout value are disconnected immediately.
Maximum Number of Sessions	Specifies the maximum number of Telnet sessions that can be connected simultaneously. The maximum is *4*, which is also the factory default.
Allow New Sessions	Select this option to permit new Telnet sessions until the maximum number allowed is reached. Clear this option to disable new Telnet sessions (but existing sessions are not disconnected).

Use the buttons to perform the following tasks:

- If you make changes to the page, click **Submit** to apply the changes to the running configuration.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.


User Accounts

By default, the switch contains one user account with read/write privileges. This account's default user name is *ubnt* and its password is *ubnt*; both user name and password are case-sensitive.

If you log on to the switch with the default read/write account (ubnt), you can use the *User Accounts* page to assign passwords and set security parameters for that account. You can also add up to five additional accounts (either read-only or read/write). You can delete all accounts except for the default account.

Note: Only a user with read/write privileges may alter data on this screen.

To access the *User Accounts* page, click **System** > **Users** > **Accounts** in the navigation menu.

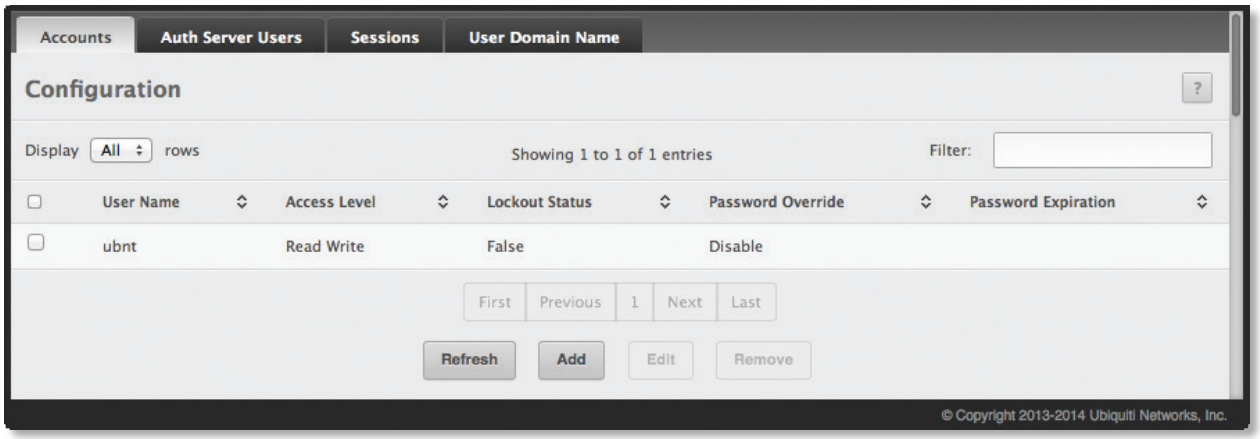

User Accounts

User Accounts Fields

Field	Description
User Name	The unique ID or name identifying the user account.
Access Level	Indicates the access or privilege level for this user. The options are: • **Read Write** The user can view and modify the configuration. • **Read Only** The user can view the configuration but cannot modify any fields. • **Suspended** The user exists but is not permitted to log on to the device.
Lockout Status	Displays a user's current lockout status (*True* or *False*). A user is locked out of the system after failing to supply the correct password within the maximum allowed number of logins defined by the *Lockout Attempts* field on the *Password Rules* page. A locked-out user cannot log in again until an administrator resets the account using the *Unlock User Account* field (see table **"Add New User and Edit Existing User Dialog Box Fields" on page 36**).
Password Override	Identifies the password override complexity status for this user. • **Enable** The system does not check the strength of the password. • **Disable** When configuring a password, it is checked against the Strength Check rules configured for passwords.
Password Expiration	Indicates the current expiration date (if any) of the password.

The *User Accounts* page also provides the capability to add, edit, and remove user accounts:

- To add a user, click **Add**. The *Add new user* dialog box opens; specify the new account information in the available fields, and click **Submit** to create the new account.
- To edit an existing user, select the user's check box or click the row to select the account and click **Edit**. The *Edit existing user* dialog box opens; modify the account information as needed, and click **Submit** to apply the changes.
- To remove one or more user accounts, select one or more table entries, click **Remove**, and click **OK** to delete the selected entries.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

The following table describes the fields in the *Add new user* and *Edit existing user* dialog boxes.

Add New User and Edit Existing User Dialog Box Fields

Field	Description
User Name	The unique name for the account. Configurable only from the *Add new user* dialog box. Valid user names can contain up to 32 alphanumeric characters, plus "-" (hyphen) and '_' (underscore), and are not case-sensitive.
Password	Enter the optional new or changed password for the account. The password characters are not displayed on the page, but are disguised in a browser-specific manner. Passwords must be from 8 to 64 characters in length, and are case-sensitive.
Confirm	Enter the password again, to confirm that you entered it correctly. The password characters are not displayed on the page, but are disguised in a browser-specific manner.

Add New User and Edit Existing User Dialog Box Fields (Continued)

Field	Description
Access Level	Indicates the access or privilege level for this user. The options are: • **Read Write** The user can view and modify the configuration. • **Read Only** The user can view the configuration but cannot modify any fields. • **Suspended** The user exists but is not permitted to log on to the device.
Lockout Status	(*Edit existing user* dialog box only) Displays a user's current lockout status (*True* if user is locked out of the system after failing to log in successfully within the configured number of login attempts).
Unlock User Account	(*Edit existing user* dialog box only) Select this option to unlock a user account that has been locked out (*Lockout Status* is *True*).
Password Override	Identifies the password override complexity status for this user. • **Enable** The system does not check the strength of the password. • **Disable** When configuring a password, it is checked against the Strength Check rules configured for passwords.
Password Strength	Indicates the date when the user's password will expire. This is determined by the date the password was created and the number of days specified in the *Aging* setting on the *Password Rules* page.
Encrypted password	Select this option to encrypt the password before it is stored on the device.

Authentication Server Users

Use the *Auth Server Users* page to add and remove users from the local authentication server user database. For some security features, such as IEEE 802.1X port-based authentication, you can configure the device to use the locally stored list of usernames and passwords to provide authentication to users instead of using an external authentication server.

Note: The preconfigured users, admin and guest, are assigned to a pre-configured list named defaultList, which you cannot delete. All newly created users are also assigned to the defaultList until you specifically assign them to a different list.


You can create a text file that contains a list of IAS users to add to the database and then download the file to the switch. The following script is an example of an IAS user text file that contains three users:

```
configure
aaa ias-user username client-1
password my-password1
exit
aaa ias-user username client-2
password aa5c6c251fe374d5e306c62496c3bcf6 encrypted
exit
aaa ias-user username client-3
password 1f3ccb1157
exit
```

After the download completes, client-1, client-2, and client-3 are added to the IAS database. The password for client-2 is encrypted.

When 802.1X authentication is enabled on the ports and the authentication method is LOCAL, port access is allowed only to users in this database that provide the correct name and password.

To access the *Auth Server Users* page, click **System** > **Users** > **Auth Server Users** in the navigation menu.

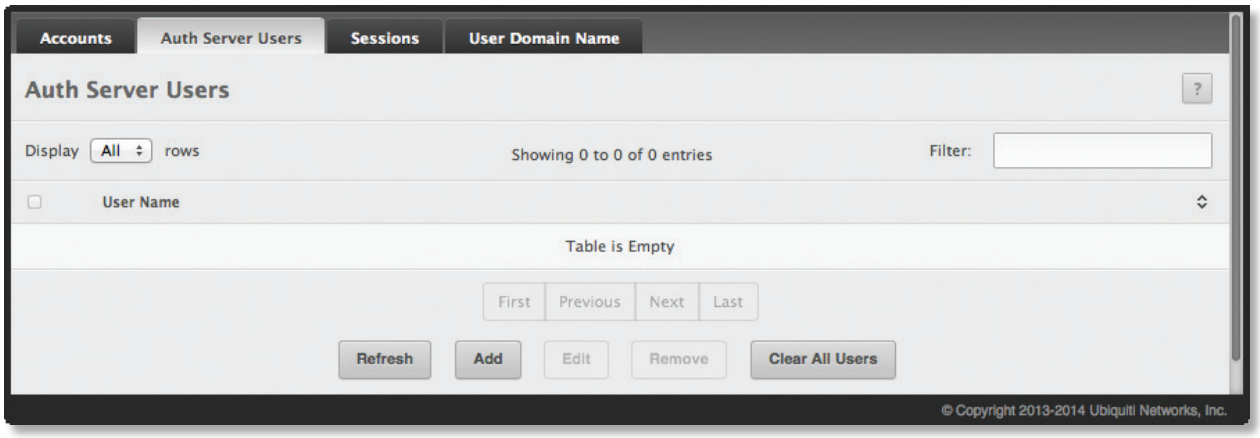

Auth Server Users

The *Auth Server Users* page lists the users (*User Name* field) in the authentication server user database.

The following table describes the fields in the *Add new user* and *Edit existing user* dialog boxes.

Add New User and Edit Existing User Fields

Field	Description
User Name	A unique name used to identify the user account. Configurable only from the *Add new user* dialog box.
Password Required	Select this option to indicate that the user must enter a password to be authenticated. If this option is cleared, the user is required only to enter a valid user name.
Password	Specify the password to associate with the user name (if required).
Confirm	Re-enter the password to confirm the entry.
Encrypted	Select this option to encrypt the password before it is stored on the device.

Use the buttons to perform the following tasks:

- To add a user to the local authentication server database, click **Add**, configure the settings, and click **Submit** to apply the changes.
- To change the password information for an existing user, select the user to update, click **Edit**, configure the settings, and click **Submit** to apply the changes.
- To delete a user from the database, select each user to delete, click **Remove**, and confirm the deletion.
- To remove all users from the database, click **Clear All Users**.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

When you add a new user or edit an existing user, a pop-up window opens to allow you to configure the user information. The following table describes the configurable fields in these pop-up windows.


Auth Server Users Configuration Fields

Field	Description
User Name	A unique name used to identify this user account. You configure the User Name when you add a new user.
Password Required	Select this option to indicate that the user must enter a password to be authenticated. If this option is clear, the user is required only to enter a valid user name.
Password	Specify the password to associate with the user name (if required).
Confirm	Re-enter the password to confirm the entry.
Encrypted	Select this option to encrypt the password before it is stored on the device.

Logged in Sessions

The *Logged In Sessions* page identifies the users that are logged in to the management interface of the device. The page also provides information about their connections.

To access the page, click **System** > **Users** > **Sessions** in the navigation menu.

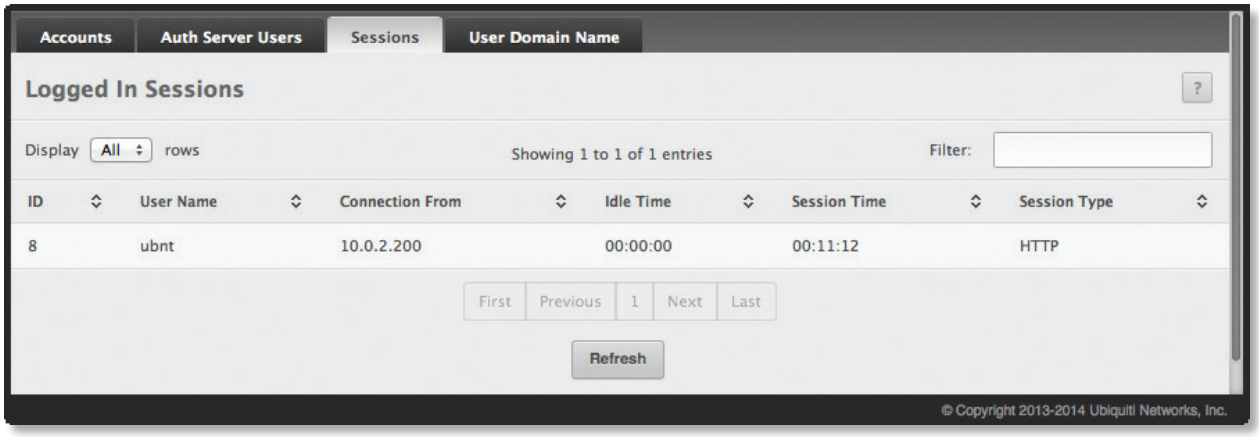

Logged In Sessions

Logged In Sessions Fields


Field	Description
ID	The unique ID of the session.
User Name	The name that identifies the user account.
Connection From	Identifies the administrative system that is the source of the connection. For remote connections, this field shows the IP address of the administrative system.
Idle Time	Shows the amount of time in hours, minutes, and seconds that the logged-on user has been inactive.
Session Time	Shows the amount of time in hours, minutes, and seconds since the user logged onto the system.
Session Type	Shows the type of session, which can be *Telnet*, *Serial*, *SSH*, *HTTP*, or *HTTPS*.

Click **Refresh** to update the information on the screen.

User Domain Name

Use this page to configure the domain name to send to the authentication server, along with the user name and password, to authenticate a user attempting to access the device management interface. Domain name authentication is supported when user authentication is performed by a RADIUS server or TACACS+ server.

To access the *User Domain Name* page, click **System** > **Users** > **User Domain Name** in the navigation menu.

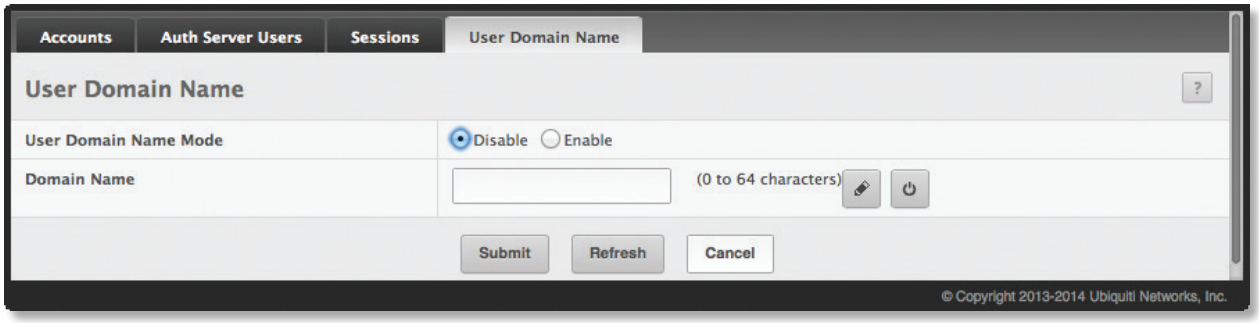

User Domain Name

User Domain Name Fields

Field	Description
User Domain Name Mode	Used to *Enable* or *Disable* the administrative mode of domain name authentication on the device. When enabled, the domain name is included when the user name and password are sent to the authentication server. The domain name can be specified either by the user in the *User Name* field on the login screen in a domain-name\username format, or it can be specified by the *Domain Name* field.
Domain Name	The domain name sent to the authentication server if the user does not provide one in the *User Name* field during logon. When only the username is provided, the device sends the username as *domain-name\username*, where *domain-name* is the string configured in this field. Use the buttons as follows: To configure the *Domain Name* field, click this button and specify the desired string. To reset the field to the default value, click this button and confirm the action.

Use the buttons to perform the following tasks:


- If you make changes to the page, click **Submit** to apply the changes to the running configuration.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Accounting List

Use the *Accounting List* page to view and configure the accounting lists for users who access the command-line interface (CLI) to manage and monitor the device. Accounting lists are used to record user activity on the device. The device is preconfigured with accounting lists. These are default lists, and they cannot be deleted. Additionally, the *List Name* and *Accounting Type* settings for the default lists cannot be changed.

To access the *Accounting List* page, click **System** > **AAA** > **Accounting List** in the navigation menu.

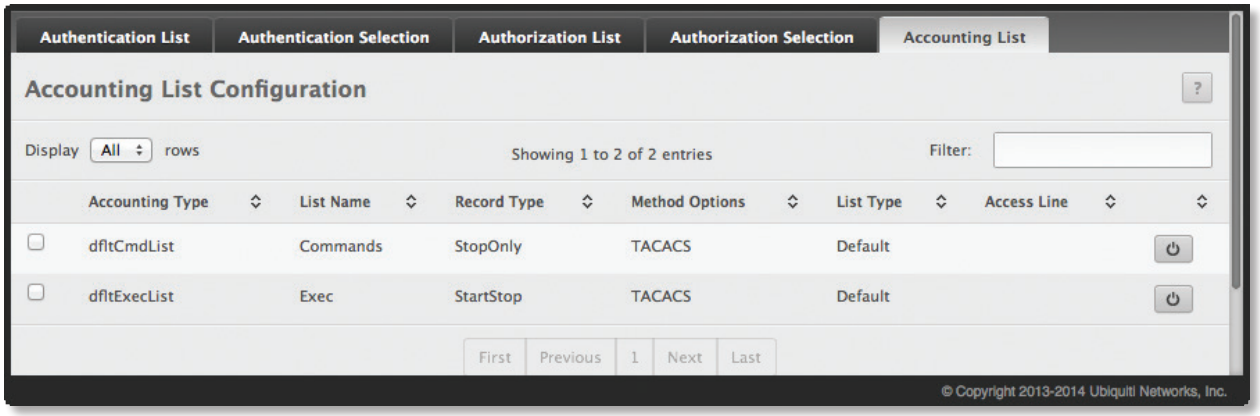

Accounting List

Accounting List Fields

Field	Description
Accounting Type	The type of accounting list, which is one of the following: • **Commands** Each CLI command executed by the user, along with the time the command was executed, is recorded and sent to an external AAA server. • **EXEC** User login and logout times are recorded and sent to an external AAA server.
List Name	The name of the accounting list. This field can be configured only when adding a new accounting list.
Record Type	Indicates when to record and send information about the user activity: • **StartStop** Accounting notifications are sent at the beginning and end of an exec session or user-executed command. User activity does not wait for the accounting notification to be recorded at the AAA server. • **StopOnly** Accounting notifications are sent at the end of an exec session or user-executed command.
Method Options	The method(s) used to record user activity. The possible methods are as follows: • **TACACS+** Accounting notifications are sent to the configured TACACS+ server. • **RADIUS** Accounting notifications are sent to the configured RADIUS server.

Accounting List Fields (Continued)

Field	Description
List Type	The type of accounting list, which is one of the following: • **Default** The list is preconfigured on the system. This type of list cannot be deleted, and only the *Method Options* and *Record Type* settings are configurable. • **Configured** The list has been added by a user.
Access Line	The access method(s) that use the list for accounting user activity. The settings for this field are configured on the *Accounting Selection* page.
Accounting Methods – This section of the *Add New Accounting List* dialog box contains the fields that you use to configure the accounting methods for the accounting list.	
Available Methods	The accounting methods that can be used for the accounting list. Select the method in the *Available Methods* field and click » to move it to the *Selected Methods* field.
Selected Methods	The accounting methods currently configured for the list. If this field lists multiple methods, the methods are applied in the order listed – if the switch fails to send accounting notifications using the first method, it tries again using the second method, and so on. To remove a method from the list, select it and click «.

Use the buttons to perform the following tasks:

- To configure a new accounting list, click **Add**, configure the settings in the *Add New Accounting List* dialog box, and then click **Submit** to apply the new settings to the switch.
- To edit a list, select the list's entry, click **Edit**, configure the settings in the *Edit Accounting List* dialog box, and then click **Submit** to apply the settings to the switch. The available settings depend on the list type.
- To remove a non-default accounting list, click the entry's - button and confirm the action.
- To reset the *Method Options* for a default accounting list to the factory default values, click the entry's ⏻ button and confirm the action.


To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Accounting Selection

Use this page to associate an accounting list with each access method. For each access method, the following two accounting lists are associated:

- *Exec* – The accounting list to record user login and logout times.
- *Commands* – The accounting list to record which actions a user takes on the system, such as page views or configuration changes. This list also records the time when the action occurred. For Terminal access methods, this list records the CLI commands a user executes and when each command is issued.

To access the *Accounting Selection* page, click **System** > **AAA** > **Accounting Selection** in the navigation menu.

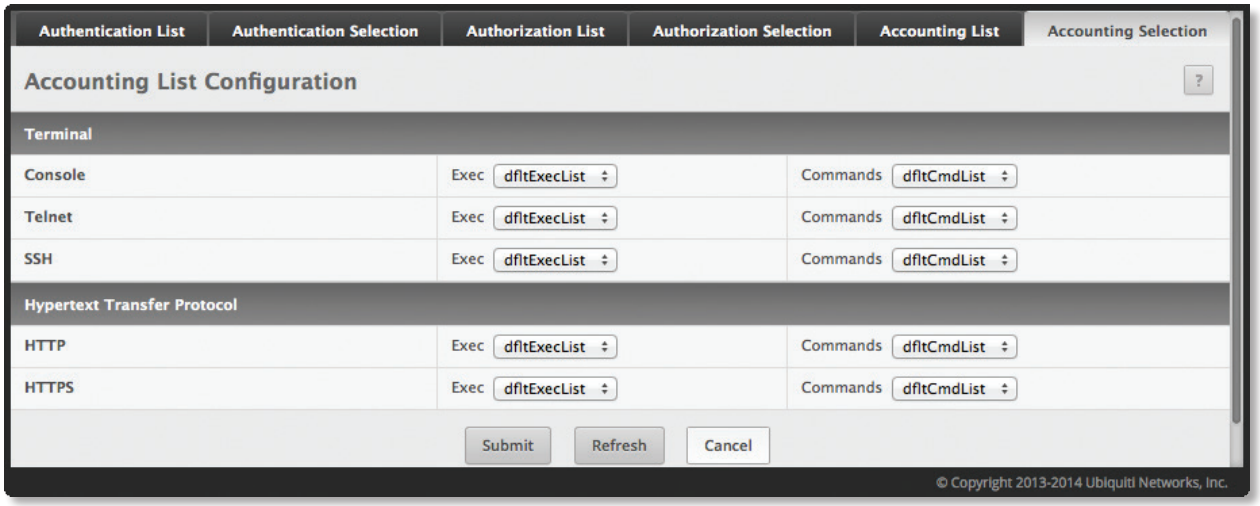

Accounting Selection

Accounting Selection Fields

Field	Description
Terminal – The access methods in this section are CLI-based.	
Telnet	The *Exec* accounting list and the *Commands* accounting list to apply to users who access the CLI using a Telnet session.
SSH	The *Exec* accounting list and the *Commands* accounting list to apply to users who access the CLI using a secure shell (SSH) session.
Hypertext Transfer Protocol – The access methods in this section are through a web browser.	
HTTP	The *Exec* accounting list and the *Commands* accounting list to apply to users who access the web-based management interface using HTTP.
HTTPS	The *Exec* accounting list and the *Commands* accounting list to apply to users who access the web-based management interface using secure HTTP.

Use the buttons to perform the following tasks:


- If you make changes to the page, click **Submit** to apply the changes to the running configuration.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Authentication List Configuration

Use the *Authentication List Configuration* page to view and configure the authentication lists used for management access and port-based (IEEE 802.1X) access to the system. An authentication list specifies which authentication method(s) to use to validate the credentials of a user who attempts to access the device. Several authentication lists are preconfigured on the system. These are default lists, and they cannot be deleted. Additionally, the *List Name* and *Access Type* settings for the default lists cannot be changed.

To access the *Authentication List Configuration* page, click **System** > **AAA** > **Authentication List** in the navigation menu.

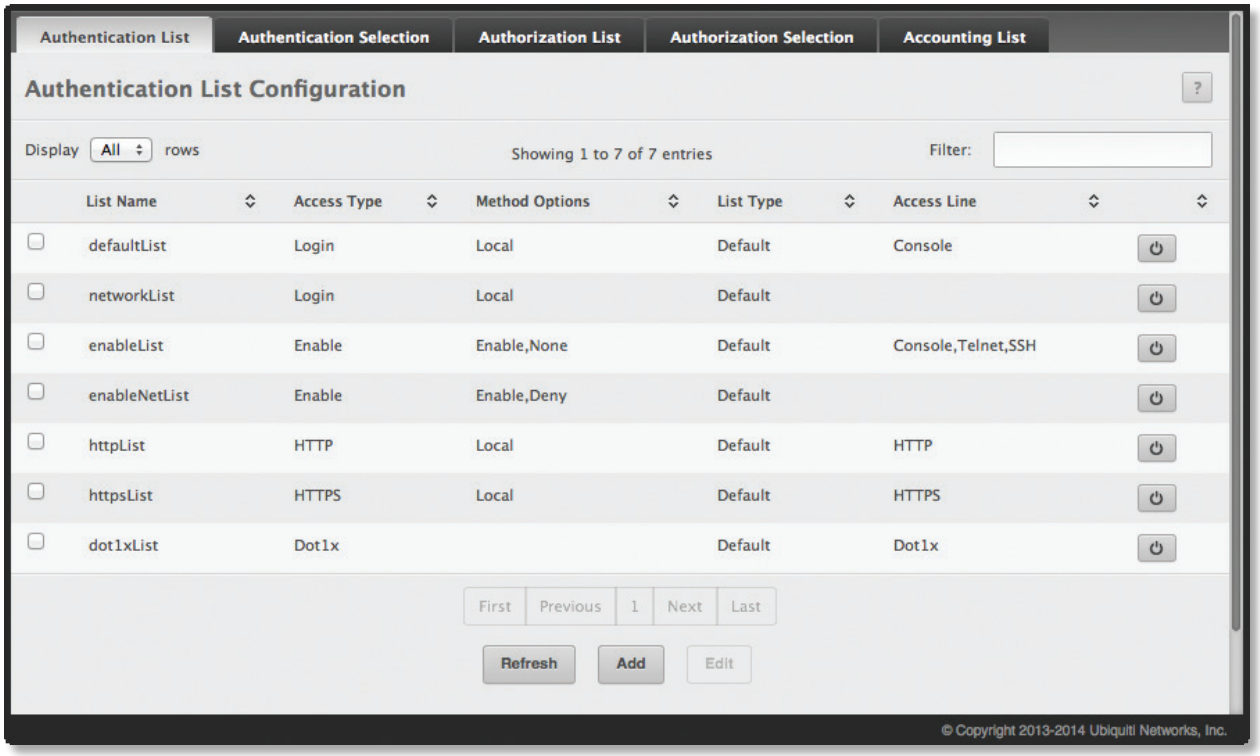

Authentication List Configuration

The following table shows the fields for the *Authentication List Configuration* page.

Authentication List Configuration Fields

Field	Description
List Name	The name of the authentication list. This field can be configured only when adding a new authentication list.
Access Type	How the user accesses the system. This field can be configured only when a new authentication list is added, and only the Login and Enable access types can be selected. The access types are as follows: • **Login** User EXEC-level management access to the command-line interface (CLI) using a Telnet or SSH session. Access at this level has a limited number of CLI commands available to view or configure the system. • **Enable** Privileged EXEC-level management access to the CLI using a Telnet or SSH session. In Privileged EXEC mode, read-write users have access to all CLI commands. • **HTTP** Management-level access to the web-based user interface using HTTP. • **HTTPS** Management-level access to the web-based user interface using secure HTTP. • **Dot1x** Port-based access to the network through a switch port that is controlled by IEEE 802.1X.
Method Options	The method(s) used to authenticate a user who attempts to access the management interface or network. The possible methods are as follows: • **Enable** Uses the locally configured Enable password to verify the user's credentials. • **Local** Uses the ID and password in the Local User database to verify the user's credentials. • **RADIUS** Sends the user's ID and password to the configured RADIUS server to verify the user's credentials. • **TACACS+** Sends the user's ID and password to the configured TACACS+ server to verify the user's credentials. • **None** No authentication is used. • **IAS** Uses the local Internal Authentication Server (IAS) database for 802.1X port-based authentication.
List Type	The type of list, which is one of the following: • **Default** The list is preconfigured on the system. This type of list cannot be deleted, and only the *Method Options* are configurable. • **Configured** The list has been added by a user.
Access Line	The access method(s) that use the list for authentication. The settings for this field are configured on the *Authentication Selection* page.
Authentication Methods – This section of the *Add New Authentication List* dialog box contains the fields that you use to configure the authentication methods for the authentication list.	
Available Methods	The authentication methods that can be used for the authentication list. To set the authentication method, select the method from the *Available Methods* field and click » to move it to the *Selected Methods* field.
Selected Methods	The authentication methods currently configured for the list. If this field lists multiple methods, the methods are applied in the order listed – if user authentication fails using the first method, the device tries again using the second method, and so on. If the current method is *None*, no authentication is performed (user is granted unconditional access); therefore, *None* must be the last method in the list. To remove a method from the list, select it and click « to return it to the *Available Methods* field.

Use the buttons to perform the following tasks:

- To configure a new authentication list, click **Add**, configure the settings in the *Add New Authentication List* dialog box, and click **Submit** to apply the settings to the switch.
- To edit a list, select the list's entry, click **Edit**, configure the settings in the *Edit Authentication List* dialog box, and click **Submit** to apply the settings to the switch. Available settings depend on the list type.
- To remove a non-default authentication list, click the entry's – button and confirm the action.
- To reset the *Method Options* for a default authentication list to the factory default values, click the entry's ⏻ button and confirm the action.
- Click **Refresh** to update the information on the screen.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.


To create a new authentication list, see **"Authentication Server Users" on page 37**. To assign users to a specific authentication list, see **"User Accounts" on page 35**. To configure the 802.1X port security users, see **"RADIUS Settings" on page 218**.

Authentication Selection

Use the *Authentication Selection* page to associate an authentication list with each CLI-based access method (Telnet and SSH). Each access method has the following two authentication lists associated with it:

- *Login* – The authentication list to use for User EXEC-level management access to the CLI. Access at this level has a limited number of CLI commands available to view or configure the system. The available options include the default Login authentication lists as well as any user-configured Login lists.
- *Enable* – The authentication list to use for Privileged EXEC-level management access to the CLI. In Privileged EXEC mode, read-write users have access to all CLI commands. The options available in this menu include the default Enable authentication lists as well as any user-configured Enable lists.

To access this page, click **System** > **AAA** > **Authentication Selection** in the navigation menu.

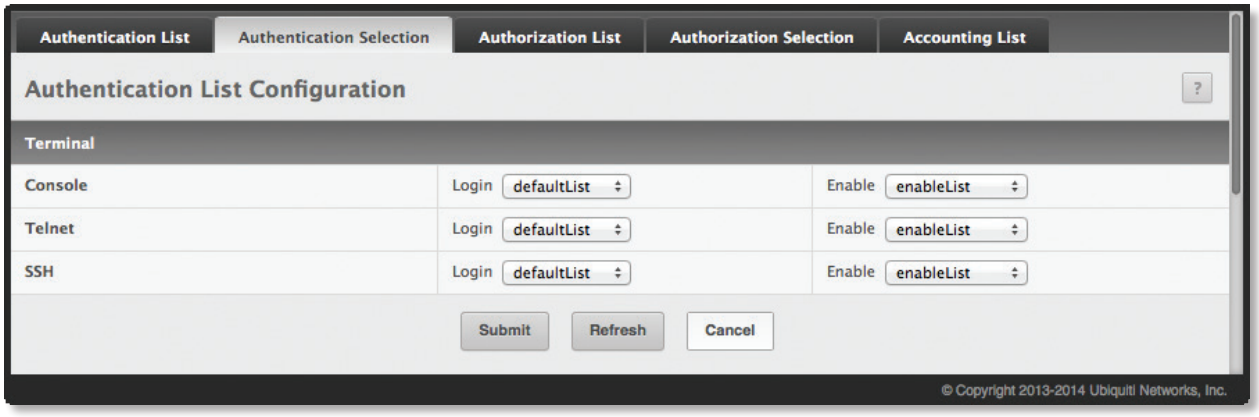

Authentication Selection

The following table shows the fields for the *Authentication Selection* page.

Authentication Selection Fields

Field	Description
Console	The *Login* authentication list and the *Enable* authentication list to apply to users who attempt to access the CLI using a connection to the console port.
Telnet	The *Login* authentication list and the *Enable* authentication list to apply to users who attempt to access the CLI using a Telnet session.
SSH	The *Login* authentication list and the *Enable* authentication list to apply to users who attempt to access the CLI using a secure shell (*SSH*) session.

Use the command buttons to perform the following tasks:

- Click **Submit** to update the switch with the values on the screen.
- Click **Refresh** to update the information on the screen.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Line Password Configuration

Use the *Line Password* page to configure line mode passwords.

To display the page, click **System** > **Passwords** > **Line Password** in the navigation menu.



Line Password Configuration

Line Password Configuration Fields

Field	Description
Line Mode	Any or all of the following passwords may be changed on this page by checking the adjacent box: • **Console** • **Telnet** • **SSH**
Password (8-64 characters)	Enter the new password for the corresponding *Line Mode* in this field. Be sure the password conforms to the allowed number of characters. The password characters are not displayed on the page, but are disguised in a browser-specific manner.
Confirm Password (8-64 characters)	Re-enter the new password for the corresponding *Line Mode* in this field. This must be the same value entered in the *Line Password* field. Be sure the password conforms to the allowed number of characters. The password characters are not displayed on the page, but are disguised in a browser-specific manner.

Use the buttons to perform the following tasks:


- If you make changes to the page, click **Submit** to apply the changes to the running configuration.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Enable Password Configuration

Use the *Enable Password Configuration* page to configure the enable password.

To display the page, click **System** > **Passwords** > **Enable Password** in the navigation menu.

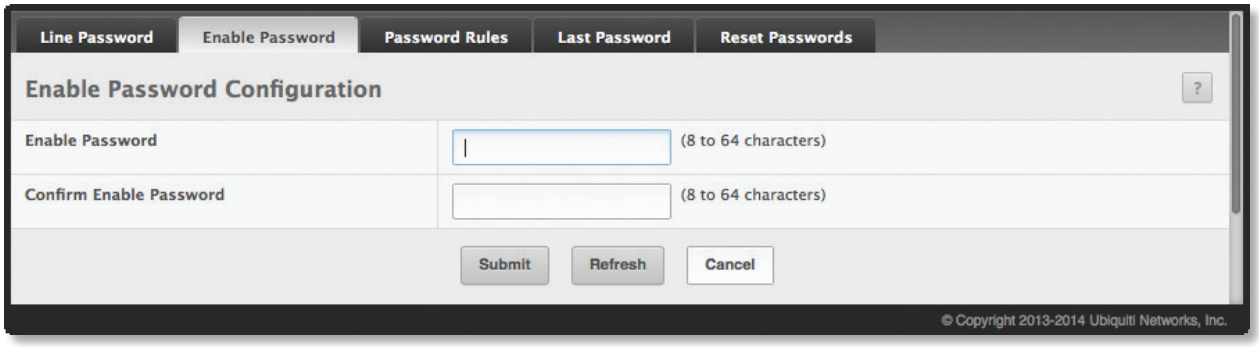

Enable Password Configuration

Enable Password Configuration Fields

Field	Description
Enable Password	Specify the password all users must enter after executing the enable command at the CLI prompt. The password characters are not displayed on the page, but are disguised in a browser-specific manner.
Confirm Enable Password	Enter the password again to confirm it. The password characters are not displayed on the page, but are disguised in a browser-specific manner.

Use the buttons to perform the following tasks:


- If you make changes to the page, click **Submit** to apply the changes to the running configuration.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Password Rules

Use the *Password Rules* page to configure settings that apply to all user passwords.

To display the page, click **System** > **Passwords** > **Password Rules** in the navigation menu.

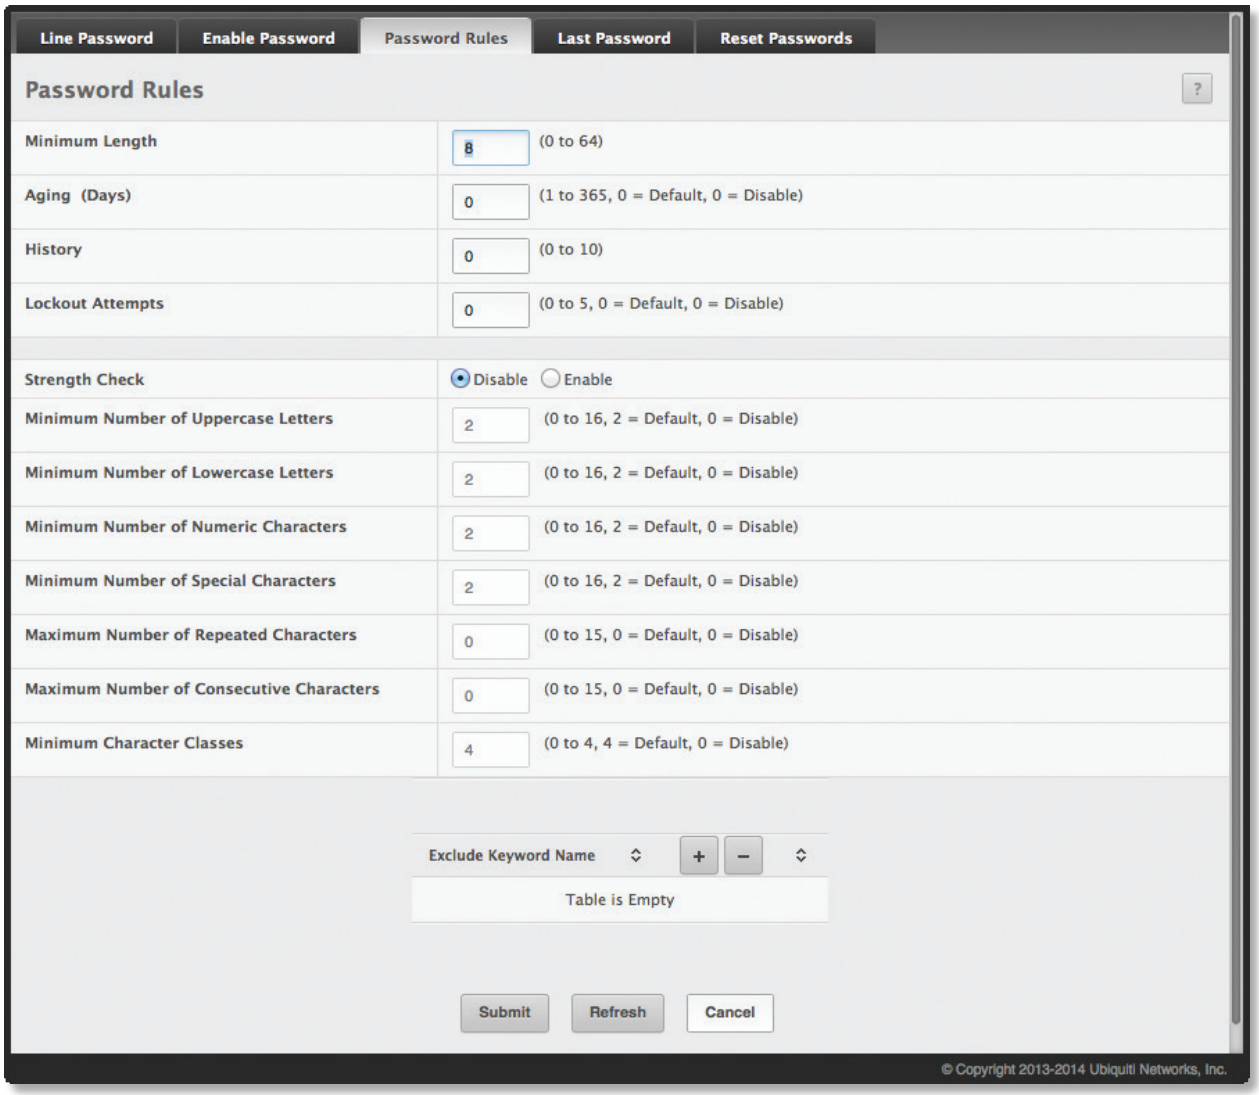

Password Rules

Password Rules Fields

Field	Description
Minimum Length	Specifies the minimum number of characters required for a valid password.
Aging (days)	The number of days that a user password is valid from the time the password is set. Once a password expires, the user is required to enter a new password at the next login.
History	The number of previous passwords that are retained to prevent password reuse. This helps to ensure that a user does not attempt to reuse the same password too often.
Lockout Attempts	The number of local authentication attempts that are allowed to fail before the user account is automatically locked (the account remains locked until the lockout is reset by the administrator on the user account page).
Strength Check	Used to *Enable* or *Disable* the password strength checking feature. Enabling this feature forces the user to configure passwords that satisfy the strong password requirements defined by the following fields.
Minimum Number of Uppercase Letters	Specifies the minimum number of uppercase letters a password must include.
Minimum Number of Lowercase Letters	Specifies the minimum number of lowercase letters a password must include.
Minimum Number of Numeric Characters	Specifies the minimum number of numbers a password must include.
Minimum Number of Special Characters	The minimum number of special characters (non-alphanumeric, such as @, #, &) that a valid password must contain.
Maximum Number of Repeated Characters	The maximum number of characters of any type that can repeat in a valid password. Repetition means the same character occurring in succession anywhere in the password, such as *11*, *%%%*, or *EEEE*.
Maximum Number of Consecutive Characters	Specifies the maximum number of characters belonging to a sequence that are allowed to occur in a valid password. Consecutive characters are defined as a sequential pattern of case-sensitive alphabetic or numeric characters, such as *2345*, *def*, or *YZ*.
Minimum Character Classes	Specifies the minimum number of character classes that a valid password must contain. There are four character classes: uppercase, lowercase, numeric, and special characters. This field allows you to define strength checking criteria for all four classes, but require passwords to meet only some of them. The number of character classes that must be met is specified by this value.
Exclude Keyword Name	The list of keywords that a valid password must not contain. Excluded keyword checking is case-insensitive. Additionally, a password cannot contain the backwards version of an excluded keyword. For example, if *pass* is an excluded keyword, passwords such as *23passA2c*, *ssapword*, and *PAsSwoRD* are prohibited. Use the buttons to perform the following tasks: + Click this button to add a keyword to the list. Type the word to exclude in the *Exclude Keyword Name* field, and click **Submit**. – Click this button next to a keyword to remove the keyword from the list, and confirm the action. To remove *all* keywords from the list, click the button in the header row and confirm the action.

Use the buttons to perform the following tasks:


- If you make changes to the page, click **Submit** to apply the changes to the running configuration.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Last Password Result

Use the *Last Password Result* page to view information about the last attempt to set a user password. If the password set was unsuccessful, a reason for the failure is given.

To display the page, click **System** > **Password** > **Last Password Result** in the navigation menu.

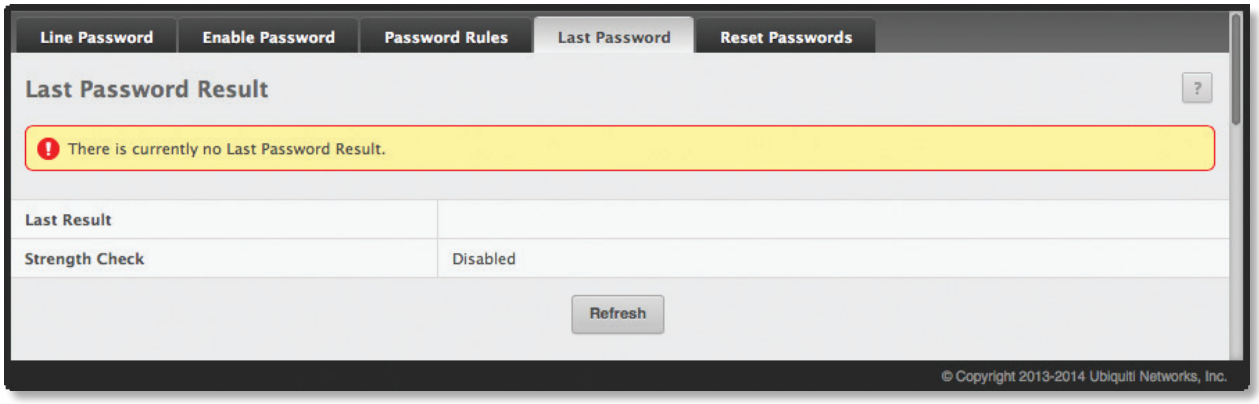

Last Password Result

Last Password Result Fields


Field	Description
Last Result	Displays information about the last (User/Line/Enable) password configuration result. If the field is blank, no passwords have been configured on the device. Otherwise, the field shows that the password was successfully set or provides information about the type of password configuration that failed and why it could not be set.
Strength Check	Displays *Enabled* if Strength Check is applied in last password change, otherwise it displays *Disabled*.

Click **Refresh** to refresh the page with the most current data from the switch.

Denial of Service Configuration

Use the *Denial of Service Configuration* page to configure Denial of Service (DoS) control. The EdgeSwitch software provides support for classifying and blocking specific types of DoS attacks. You can configure your system to monitor and block the types of attacks listed in the table below.

To access the *Denial of Service Configuration* page, click **System** > **Advanced Configuration** > **Protection** > **Denial of Service** in the navigation menu.

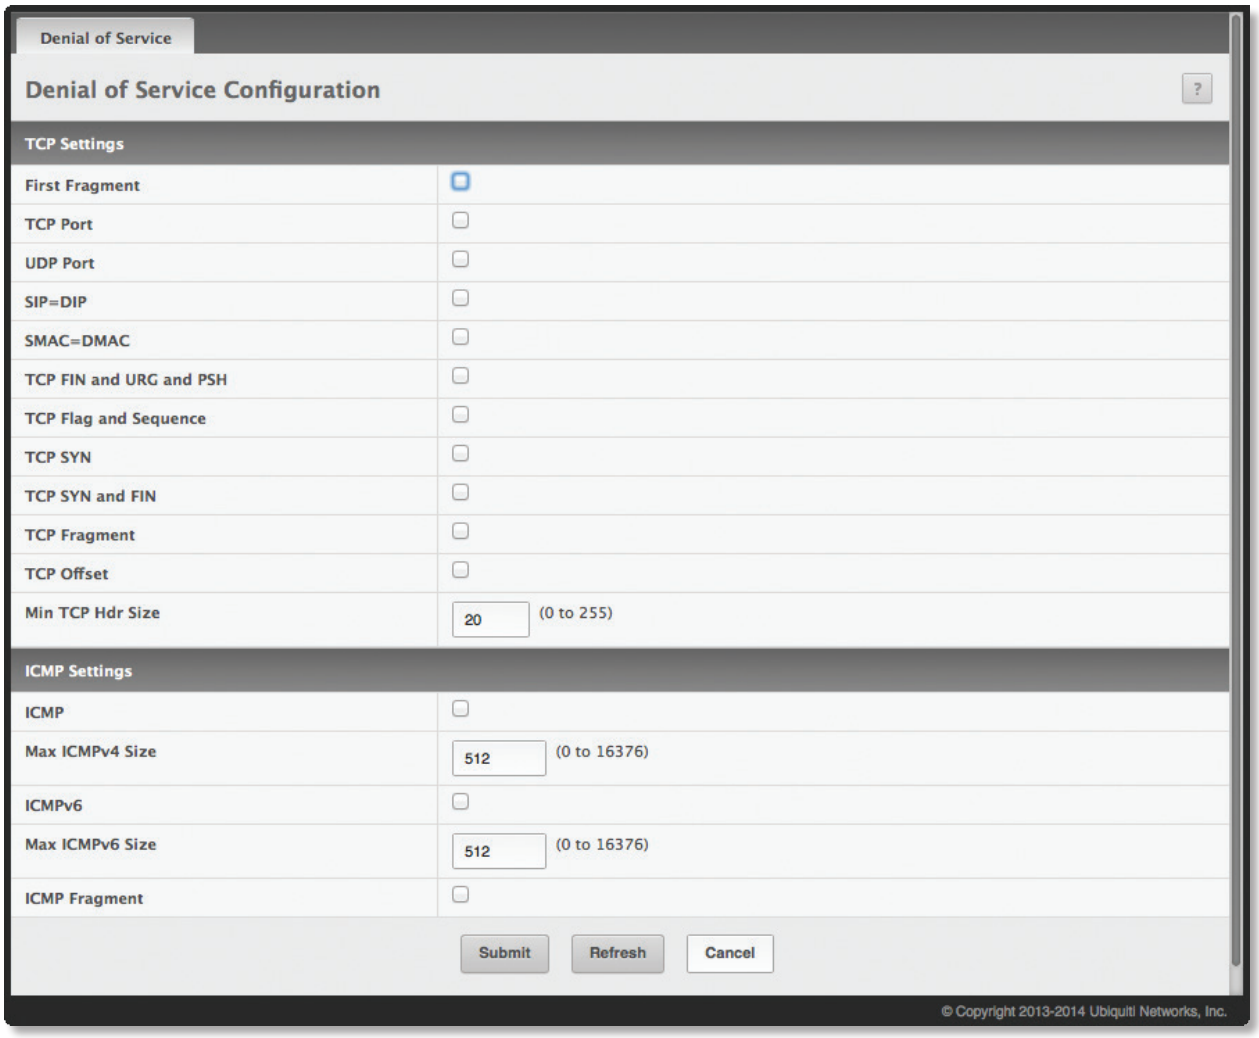

Denial of Service Configuration

Denial of Service Configuration Fields

Field	Description
TCP Settings – These options help prevent the device and the network from attacks that exploit the TCP header size or the information in the TCP or UDP headers of packets that the device receives.	
First Fragment	When selected, this option allows the device to drop packets that have a TCP header smaller than the value configured in the Min TCP Hdr Size field.
TCP Port	When selected, this option allows the device to drop packets that have the TCP source port equal to the TCP destination port.
UDP Port	When selected, this option allows the device to drop packets that have the UDP source port equal to the UDP destination port.
SIP=DIP	When selected, this option allows the device to drop packets that have a source IP address equal to the destination IP address.

Denial of Service Configuration Fields (Continued)

Field	Description
SMAC=DMAC	When selected, this option allows the device to drop packets that have a source MAC address equal to the destination MAC address.
TCP FIN and URG and PSH	When selected, this option allows the device to drop packets that have TCP Flags FIN, URG, and PSH set and a TCP Sequence Number equal to 0.
TCP Flag and Sequence	When selected, this option allows the device to drop packets that have TCP control flags set to 0 and the TCP sequence number set to 0.
TCP SYN	When selected, this option allows the device to drop packets that have TCP Flags SYN set.
TCP SYN and FIN	When selected, this option allows the device to drop packets that have TCP Flags SYN and FIN set.
TCP Fragment	When selected, this option allows the device to drop packets that have a TCP payload where the IP payload length minus the IP header size is less than the minimum allowed TCP header size.
TCP Offset	When selected, this option allows the device to drop packets that have a TCP header Offset set to 1.
Min TCP Hdr Size	The minimum TCP header size allowed. If First Fragment DoS prevention is enabled, the device will drop packets that have a TCP header smaller than this configured value.
ICMP Settings – These options help prevent the device and the network from attacks that involve issues with the ICMP echo request packets (pings) that the device receives.	
ICMP	Enable this option to allow the device to drop ICMP packets that have a type set to ECHO_REQ (ping) and a payload size greater than the ICMP payload size configured in the *Max ICMPv4 Size* field.
Max ICMPv4 Size	The maximum allowed ICMPv4 packet size. If ICMP DoS prevention is enabled, the device will drop ICMPv4 ping packets that have a size greater then this configured maximum ICMPv4 packet size.
ICMPv6	Enable this option to allow the device to drop ICMP packets that have a type set to ECHO_REQ (ping) and a payload size greater than the ICMP payload size configured in the *Max ICMPv6 Size* field.
Max ICMPv6 Size	The maximum allowed IPv6 ICMP packet size. If ICMP DoS prevention is enabled, the switch will drop IPv6 ICMP ping packets that have a size greater than this configured maximum ICMPv6 packet size.
ICMP Fragment	Enable this option to allow the device to drop fragmented ICMP packets.

Use the buttons to perform the following tasks:


- If you change any of the DoS settings, click **Submit** to apply the changes to the running configuration.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

CLI Banner Configuration

Use the *CLI Banner Configuration* page to configure a message that appears before the user prompt as a Pre-login banner. The message configured shows up on Telnet, SSH, and Console connections.

To access the *CLI Banner Configuration* page, click **System** > **Management Access** > **CLI Banner** in the navigation menu.

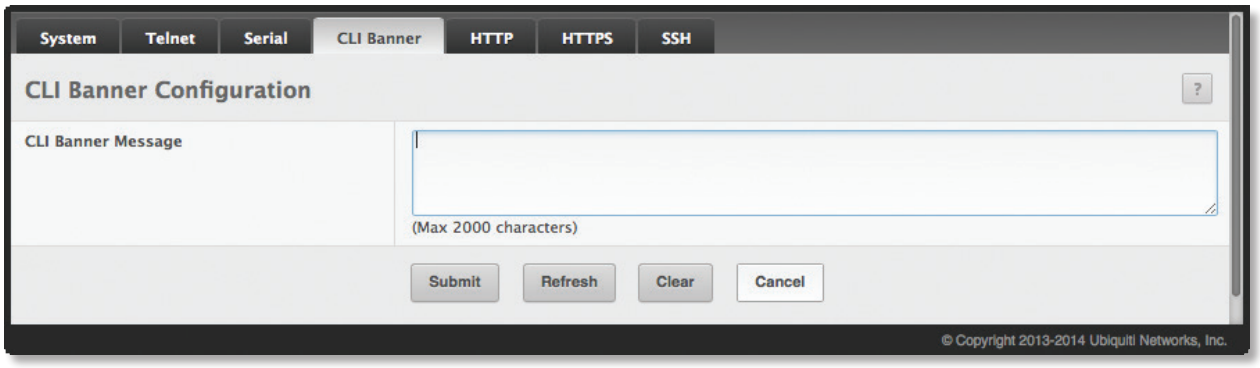

CLI Banner Configuration

CLI Banner Configuration Fields

Field	Description
CLI Banner Message	Text area for creating, viewing, or updating the CLI banner message. To create the CLI banner message, type the desired message in the text area. If you reach the end of the line, the text wraps to the next line. The line might not wrap at the same location in the CLI. To create a line break (carriage return) in the message, press **Enter** on the keyboard. The line break in the text area will be at the same location in the banner message when viewed through the CLI.

Use the buttons to perform the following tasks:

- If you make changes to the page, click **Submit** to apply the changes to the running configuration.
- Click **Clear** to clear the CLI banner message from the device. After you click **Clear**, you must confirm the action. You can also clear the CLI banner by deleting the text in the *CLI Banner Message* field and clicking **Submit**.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Basic Switch Configuration

The forwarding database maintains a list of MAC addresses after having received a packet from this MAC address. The transparent bridging function uses the forwarding database entries to determine how to forward a received frame.


Switch Configuration

Use the *Switch Configuration* page to set the amount of time to keep a learned MAC address entry in the forwarding database, or to enable or disable flow control mode on the switch.

The forwarding database contains both static entries that are never aged out, and dynamically learned entries that are removed if they are not updated within a specified time interval. The *Switch Configuration* page allows you to specify this time interval for learned entries.

IEEE 802.3x flow control works by pausing a port when the port becomes oversubscribed. It also allows a port to drop all traffic for small bursts of time during the congestion condition. This can lead to high-priority and/or network control traffic loss. When enabled, flow control allows lower speed or congested switches to communicate with higher-speed switches by sending a PAUSE frame to request that the higher-speed switch refrain from sending packets. Transmissions are temporarily halted to prevent buffer overflows.

To access the *Switch Configuration* page, click **System** > **Basic Configuration** > **Switch** in the navigation menu.

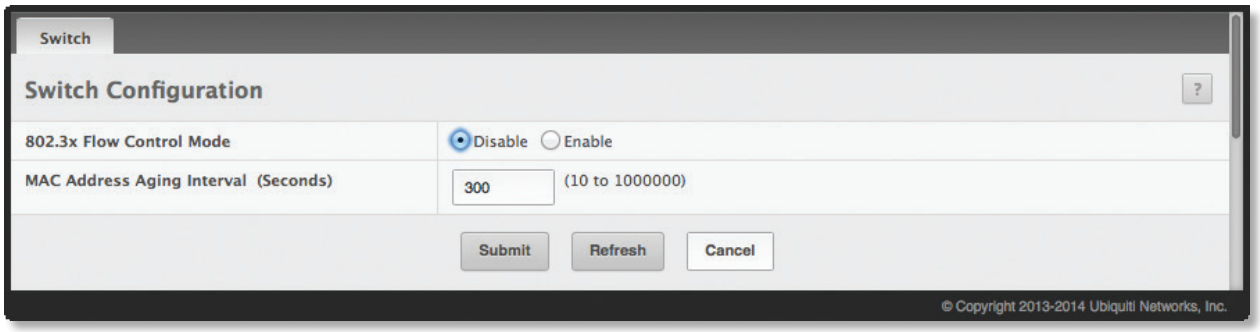

Switch Configuration

Switch Configuration Fields

Field	Description
802.3x Flow Control Mode	Used to *Enable* or *Disable* 802.3x flow control on the switch: • **Disable** The switch does not send PAUSE frames if the port buffers become full. • **Enable** The switch can send PAUSE frames to a peer device if the port buffers become full.
MAC Address Aging Interval	Used to specify the number of seconds a dynamic address should remain in the MAC address table after it has been learned.

Note: IEEE 802.1D recommends a default of *300* seconds, which is the factory default.

Use the buttons to perform the following tasks:

- If you make changes to the page, click **Submit** to apply the changes to the running configuration.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Managing Logs


The switch may generate messages in response to events, faults, or errors occurring on the platform as well as changes in configuration or other occurrences. These messages are stored both locally on the platform and forwarded to one or more centralized points of collection for monitoring purposes as well as long term archival storage. Local and remote configuration of the logging capability includes filtering of messages logged or forwarded based on severity and generating component.

The *in-memory* log stores messages in memory based upon the settings for message component and severity. On stackable systems, this log exists only on the management unit. Other platforms in the stack forward their messages to the management unit log. Access to in-memory logs on other than the management unit is not supported.

Log Configuration

The *Log Configuration* page allows administrators with the appropriate privilege level to configure the administrative mode and various settings for logging features on the switch.

To access the *Log Configuration* page, click **System** > **Logs** > **Configuration** in the navigation menu.

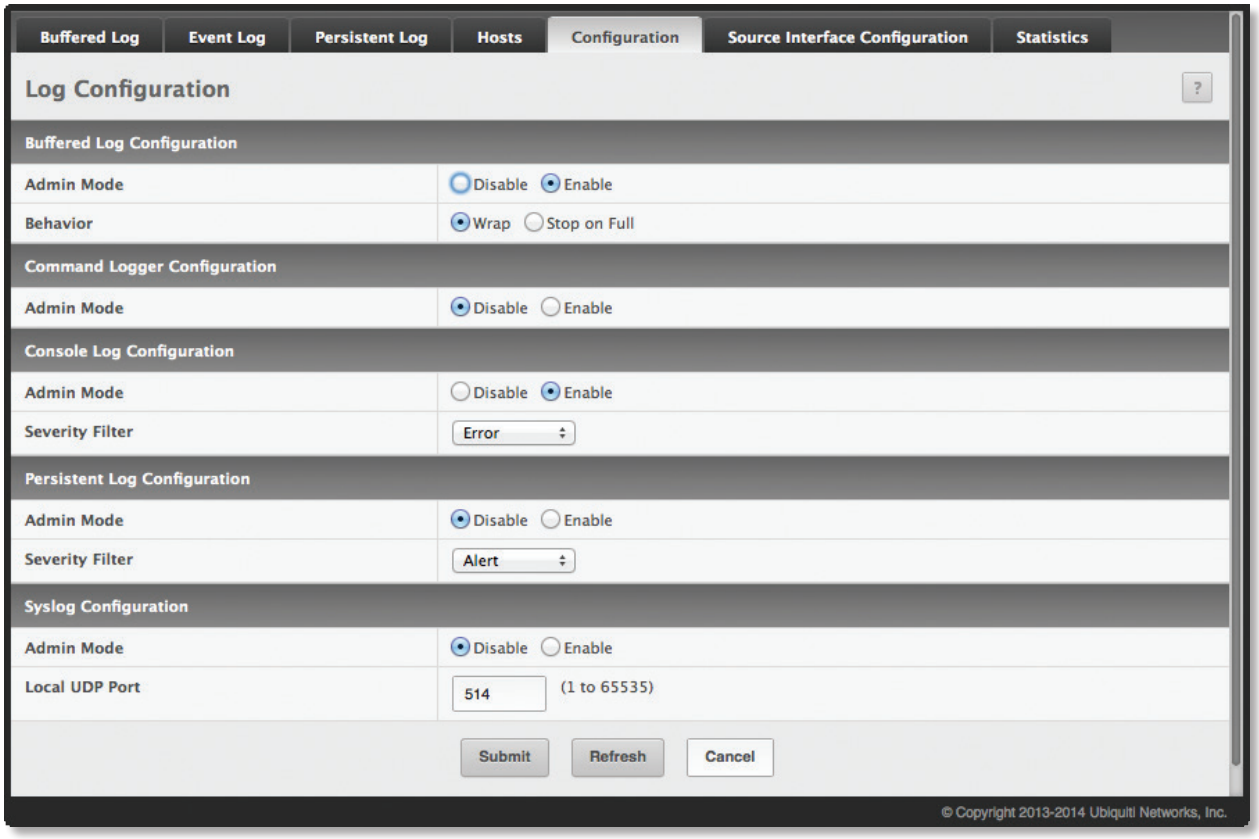

Log Configuration

Log Configuration Fields

Field	Description
Buffered Log Configuration section:	
Admin Mode	Used to *Enable* or *Disable* logging to the buffered (RAM) log file.
Behavior	Specify what the device should do when the buffered log is full. It can either overwrite the oldest messages (*Wrap*) or stop writing new messages to the buffer (*Stop on Full*).
Command Logger Configuration section:	
Admin Mode	Used to *Enable* or *Disable* logging of the command-line interface (CLI) commands issued on the device.
Console Log Configuration section:	
Admin Mode	Used to *Enable* or *Disable* logging to any serial device attached to the host.
Severity Filter	Select the severity of the messages to be logged. All messages at and above the selected threshold are logged to the console. The severity can be one of the following: • **Emergency (0)** The device is unusable. • **Alert (1)** Action must be taken immediately. • **Critical (2)** The device is experiencing primary system failures. • **Error (3)** The device is experiencing non-urgent failures. • **Warning (4)** The device is experiencing conditions that could lead to system errors if no action is taken. • **Notice (5)** The device is experiencing normal but significant conditions. • **Info (6)** The device is providing non-critical information. • **Debug (7)** The device is providing debug-level information.
Persistent Log Configuration section:	
Admin Mode	Used to *Enable* or *Disable* logging to the persistent log. These messages are not deleted when the device reboots.
Severity Filter	Select the severity of the messages to be logged. All messages at and above the selected threshold are logged to the console. See the previous severity filter description for more information about each severity level.
Syslog Configuration section:	
Admin Mode	Used to *Enable* or *Disable* logging to configured syslog hosts. When the syslog admin mode is disabled the device does not relay logs to syslog hosts, and no messages will be sent to any collector/relay. When the syslog admin mode is enabled, messages will be sent to configured collectors/relays using the values configured for each collector/relay.
Local UDP Port	The UDP port on the local host from which syslog messages are sent.

Use the buttons to perform the following tasks:


- If you make changes to the page, click **Submit** to apply the changes to the running configuration.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Buffered Log

The log messages the device generates in response to events, faults, errors, and configuration changes are stored locally on the device in the RAM (cache). This collection of log files is called the RAM log or buffered log. When the buffered log file reaches the configured maximum size, the oldest message is deleted from the RAM when a new message is added. If the system restarts, all messages are cleared.

To access the *Buffered Log* page, click **System** > **Logs** > **Buffered Log** in the navigation menu.

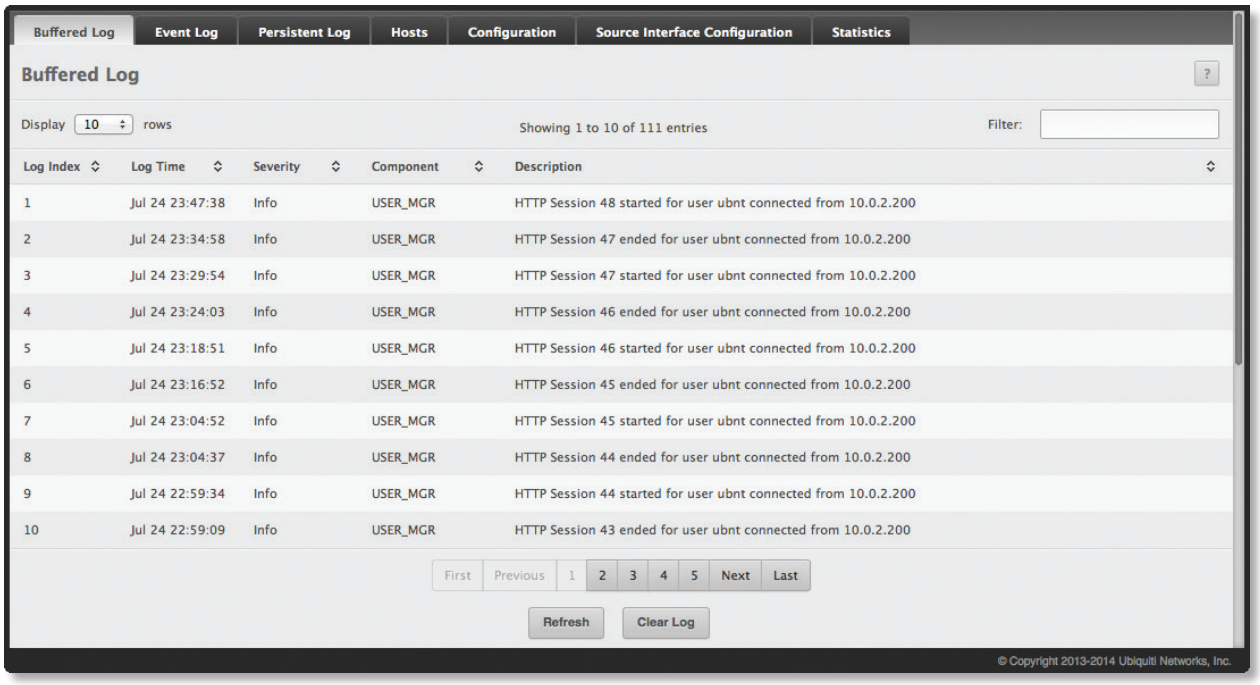

Buffered Log

Buffered Log Fields

Field	Description
Log Index	The position of the entry within the buffered log file. The most recent log message has a *Log Index* value of *1*.
Log Time	The time the entry was added to the log.
Severity	The severity level associated with the log entry. The severity can be one of the following: • **Emergency (0)** The device is unusable. • **Alert (1)** Action must be taken immediately. • **Critical (2)** The device is experiencing primary system failures. • **Error (3)** The device is experiencing non-urgent failures. • **Warning (4)** The device is experiencing conditions that could lead to system errors if no action is taken. • **Notice (5)** The device is experiencing normal but significant conditions. • **Info (6)** The device is providing non-critical information. • **Debug (7)** The device is providing debug-level information.
Component	The component that issued the log entry.
Description	The text description for the log entry.

Use the buttons to perform the following tasks:


- Click **Clear Log** to clear the buffered log messages and reset the counters. The buffered log will be repopulated with new entries as they occur on the system.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Event Log

Use the *Event Log* page to display the event log, which is used to hold error messages for catastrophic events. After the event is logged and the updated log is saved in flash memory, the switch will be reset. The log can hold at least 2,000 entries (the actual number depends on the platform and OS), and is erased when an attempt is made to add an entry after it is full. The event log is preserved across system resets.

To access the *Event Log* page, click **System** > **Logs** > **Event Log** in the navigation menu.

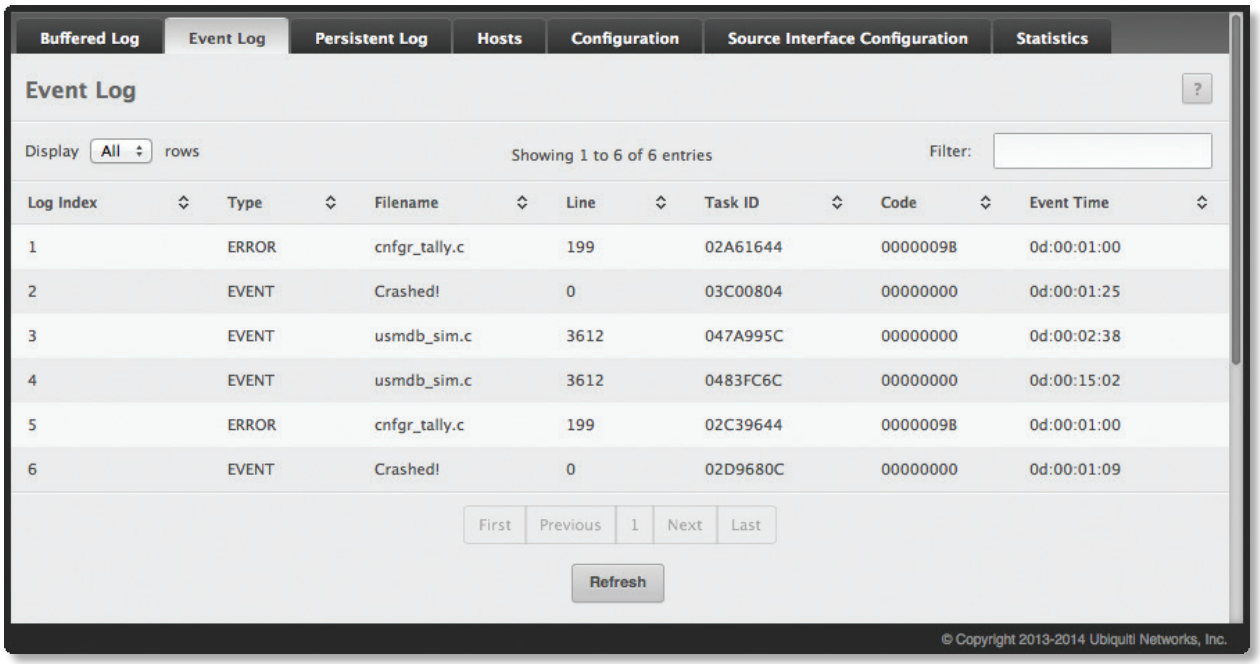

Event Log

Event Log Fields


Field	Description
Log Index	A display row index number used to identify the event log entry, with the most recent entry listed first (lowest number).
Type	The incident category that indicates the cause of the log entry: EVENT, ERROR, etc.
Filename	The EdgeSwitch source code filename identifying the code that detected the event.
Line	The line number within the source file of the code that detected the event.
Task ID	A system identifier of the task that was running when the event occurred. This value is assigned by, and is specific to, the operating system.
Code	An event-specific code value that is passed to the log handler by the source code file reporting the event.
Event Time	A time stamp (days, hours, minutes, and seconds) indicating when the event occurred, measured from the time the device was last reset. The only correlation between any two entries in the event log is the relative amount of time after a system reset that the event occurred.

Click **Refresh** to update the screen and associated messages.

Logging Hosts

Use the *Logging Hosts* page to configure remote logging hosts to which the switch can send logs.

To access the *Logging Hosts* page, click **System** > **Logs** > **Hosts** in the navigation menu. The *Logging Hosts* page is shown below.

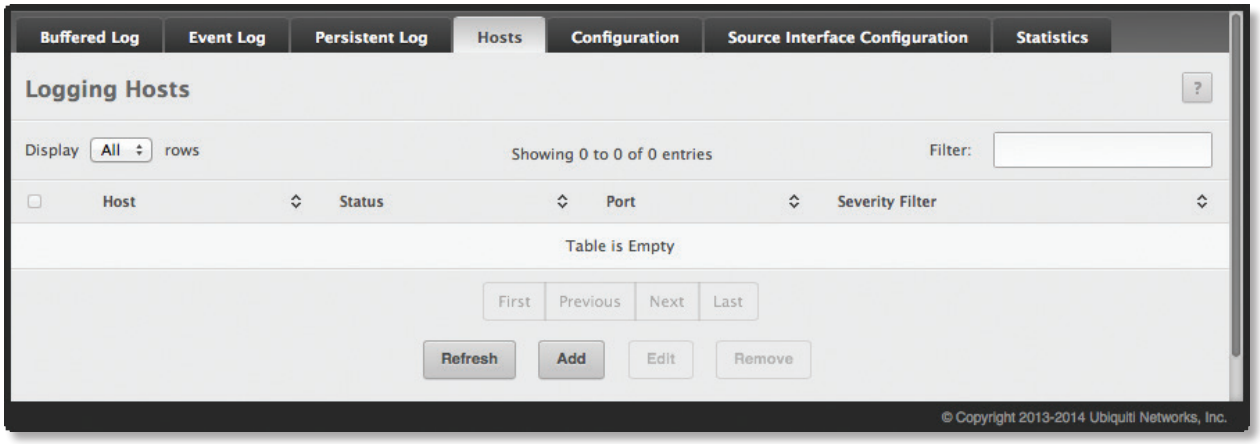

Logging Hosts

Logging Hosts Fields

Field	A
Host (IP Address/Host Name)	The IP address or DNS-resolvable host name of the remote host to receive log messages. This field is not configurable when you click **Edit**.
Status	Indicates whether the host has been configured to be actively logging or not.
Port	The UDP port on the logging host to which syslog messages will be sent. The default port is *514*. Specify the port in the text field.
Severity Filter	Use the menu to select the severity level threshold for log messages. Logs with a severity level at or above the configured level are forwarded to the host. For example, if you select **Error**, the logged messages include Error, Critical, Alert, and Emergency. The default severity level is *Alert* (1). The severity can be one of the following levels: • **Emergency (0)** The highest warning level. If the device is down or not functioning properly, an emergency log is saved to the device. • **Alert (1)** The second highest warning level. An alert log is saved if there is a serious device malfunction, such as all device features being down. • **Critical (2)** The third highest warning level. A critical log is saved if a critical device malfunction occurs, for example, two device ports are not functioning, while the rest of the device ports remain functional. • **Error (3)** A device error has occurred, such as if a port is offline. • **Warning (4)** The lowest level of a device warning. • **Notice (5)** Provides the network administrators with device information. • **Info (6)** Provides device information. • **Debug (7)** Provides detailed information about the log. Debugging should only be entered by qualified support personnel.

Use the buttons to perform the following tasks:


- To add a logging host, click **Add**. In the *Add Host* dialog box, fill in the *IP Address/Host Name*, *Port*, and *Severity Filter* fields, and click **Submit** to apply the changes to the switch's running configuration.
- To change information for an existing logging host, select the entry and click **Edit**. In the *Edit Host* dialog box, edit the *Port* and *Severity Filter* fields, and click **Submit** to apply the changes. You cannot edit the *IP Address/Host Name* field.
- To delete a configured logging host from the list, select the check box associated with each entry to delete, click **Remove**, and confirm the deletion.
- Click **Refresh** to update the screen and associated messages.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Syslog Source Interface Configuration

Use this page to specify the physical or logical interface to use as the logging (Syslog) client source interface. When an IP address is configured on the source interface, this address is used for all Syslog communications between the local logging client and the remote Syslog server. The IP address of the designated source interface is used in the IP header of Syslog management protocol packets. This allows security devices, such as firewalls, to identify all source packets coming from a specific device.

To access the *Syslog Source Interface Configuration* page, click **System** > **Logs** > **Source Interface Configuration** in the navigation menu.

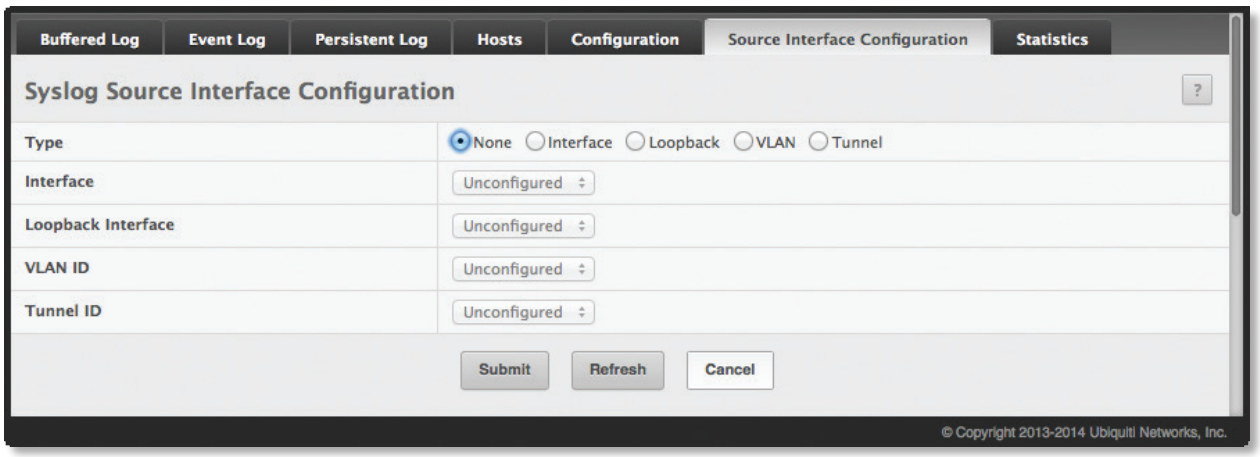

Syslog Source Interface Configuration

Syslog Source Interface Configuration Fields

Field	Description
Type	The type of interface to use as the source interface: • **None** The primary IP address of the originating (outbound) interface is used as the source address. • **Interface** The primary IP address of a physical port is used as the source address. • **VLAN** The primary IP address of a VLAN routing interface is used as the source address. • **Tunnel** The primary IP address of a tunnel interface is used as the source address.
Interface	When the selected *Type* is *Interface*, select the physical port to use as the source interface.
VLAN ID	When the selected *Type* is *VLAN*, select the VLAN to use as the source interface. The menu contains only the VLAN IDs for VLAN routing interfaces.
Tunnel ID	When the selected *Type* is *Tunnel*, select the tunnel interface to use as the source interface.

Use the buttons to perform the following tasks:


- If you make changes to the page, click **Submit** to apply the changes to the running configuration.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Persistent Log

Use the *Persistent Log* page to view the persistent log messages.

To access the *Persistent Log* page, click **System** > **Log** > **Persistent Log** in the navigation menu.

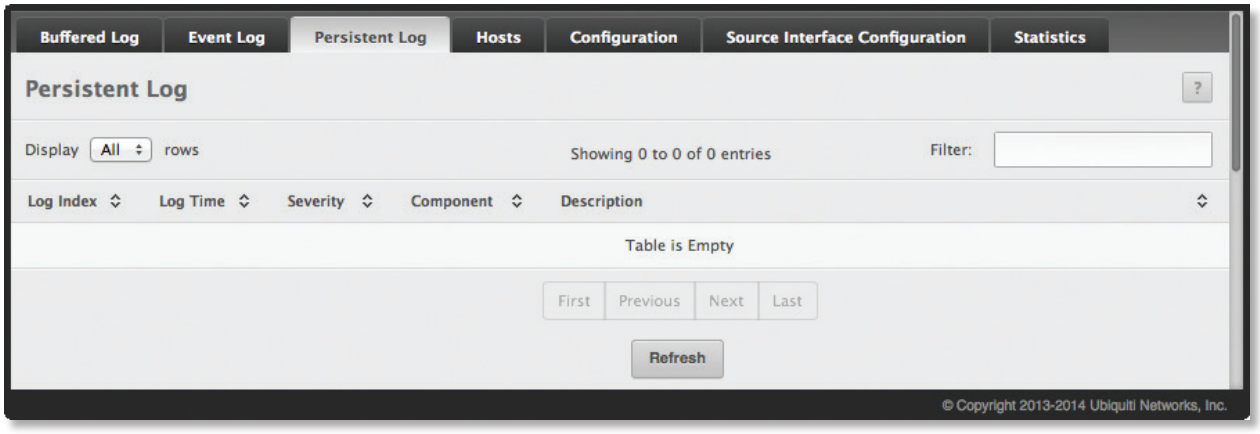

Persistent Log

Persistent Log Fields

Field	Description
Log Index	The position of the entry within the buffered log file. The most recent log message always has a *Log Index* value of *1*.
Log Time	The time the entry was added to the log.
Severity	The severity level associated with the log entry. The severity can be one of the following: • **Emergency (0)** The device is unusable. • **Alert (1)** Action must be taken immediately. • **Critical (2)** The device is experiencing primary system failures. • **Error (3)** The device is experiencing non-urgent failures. • **Warning (4)** The device is experiencing conditions that could lead to system errors if no action is taken. • **Notice (5)** The device is experiencing normal but significant conditions. • **Info (6)** The device is providing non-critical information. • **Debug (7)** The device is providing debug-level information.
Component	The component that has issued the log entry.
Description	The text description for the log entry.

Click **Refresh** to update the screen and associated messages.


Configuring Email Alerts

With the email alerting feature, log messages can be sent to one or more email addresses. You must configure information about the network Simple Mail Transport Protocol (SMTP) server for email to be successfully sent from the switch.

The pages available from the Email Alerting folder allow you to configure information about what type of log message are sent via email and to what address(es) the messages are emailed.

Email Alert Global Configuration

Use the *Email Alert Global Configuration* page to configure the common settings for log messages emailed by the switch. To access the page, click **System** > **Advanced Configuration** > **Email Alerts** > **Global** in the navigation menu.

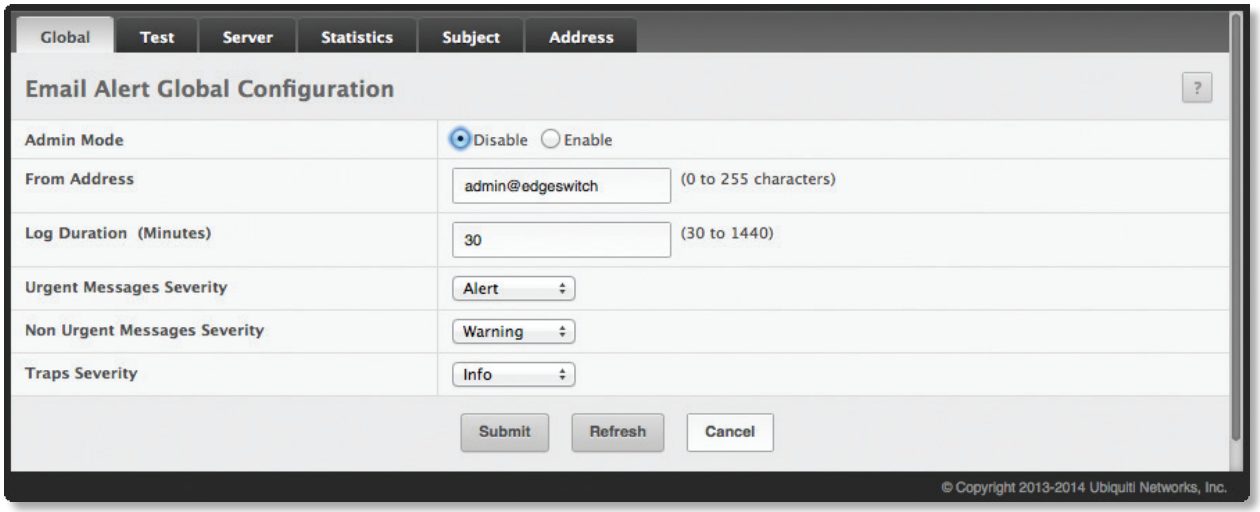

Email Alert Global Configuration

Email Alert Global Configuration Fields

Field	Description
Admin Mode	The administrative mode of the feature: • **Enable** The device can send email alerts to the configured SMTP server. • **Disable** The device will not send email alerts.
From Address	Specifies the email address of the sender (the switch).
Log Duration	This duration in minutes specifies how often to send the noncritical messages to the SMTP Server. For example, if set to **30**, the noncritical messages are sent every 30 minutes.
Urgent Messages Severity	Configures the urgent severity level(s) for log messages (urgent log messages are sent immediately). Select a severity level to define that level and all higher levels as urgent. Severity levels are (from highest to lowest severity): • **Emergency** Indicates system is unusable (highest severity) • **Alert** Indicates action must be taken immediately • **Critical** Indicates critical conditions • **Error** Indicates error conditions • **Warning** Indicates warning conditions • **Notice** Indicates normal but significant conditions • **Info** Indicates informational messages • **Debug** Indicates debug-level messages (lowest severity)
Non Urgent Messages Severity	Configures the nonurgent severity level(s) for log messages (nonurgent log messages are collected and sent in a digest form at the time interval specified by the *Log Duration* field). Select a severity level to define that level, and all levels up to but not including the lowest urgent level, as nonurgent. Messages below the severity level you specify are not sent via email. See the Urgent Messages Severity field description for information about the severity levels.
Traps Severity	Configures the severity level for trap log messages. See the Urgent Messages Severity field description for information about the severity levels.

Use the buttons to perform the following tasks:

- If you make changes to the page, click **Submit** to apply the changes to the running configuration.
- Click **Refresh** to refresh the page with the most current data from the switch.


To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

After configuring all email alert settings, click **Test** to send a test message to the configured address(es).

Email Alert Server Configuration

Use the *Email Alert Server Configuration* page to add, edit, and remove information about the network SMTP (mail) server that handles email alerts sent from the switch.

To access the *Email Alert Server Configuration* page, click **System** > **Advanced Configuration** > **Email Alerts** > **Server** in the navigation menu.

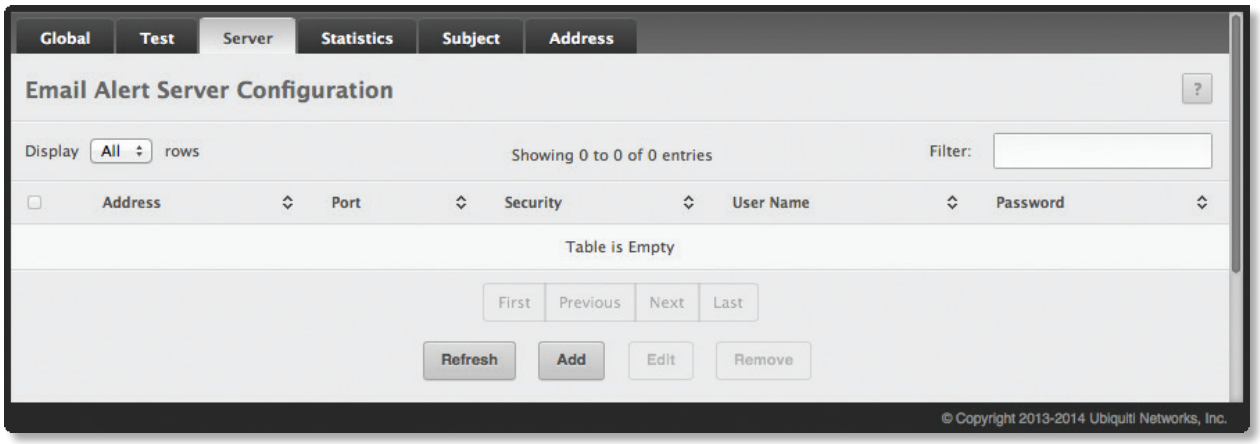

Email Alert Server Configuration

Email Alert Server Configuration Fields

Field	Description
Address	The IPv4/IPv6 address or host name of the SMTP server that handles email alerts that the device sends.
Port	The TCP port that email alerts are sent to on the SMTP server.
Security	The type of authentication to use with the mail server, which can be *TLSv1* (SMTP over SSL) or *None* (no authentication is required).
User Name	If the *Security* is *TLSv1*, this field specifies the user name required to access the mail server.
Password	If the *Security* is *TLSv1*, this field specifies the password associated with the configured user name for mail server access. When adding or editing the server, you must retype the password to confirm that it is entered correctly.

Use the buttons to perform the following tasks:


- To add an SMTP server, click **Add**, configure the desired settings, and click **Submit** to apply the changes.
- To edit the information for an existing SMTP server (except the *Host Name or IP Address* field), select the check box next to the entry and click **Edit**. When finished editing, click **Submit** to apply the changes.
- To delete a configured SMTP server from the list, select the check box next to the entry to delete and click **Remove**.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Email Alert Statistics

Use the *Email Alert Statistics* page to view information about email alerts that the switch has sent or attempted to send. The statistics are cleared when the system is reset.

To access the page, click **System** > **Advanced Configuration** > **Email Alerts** > **Statistics** in the navigation menu.

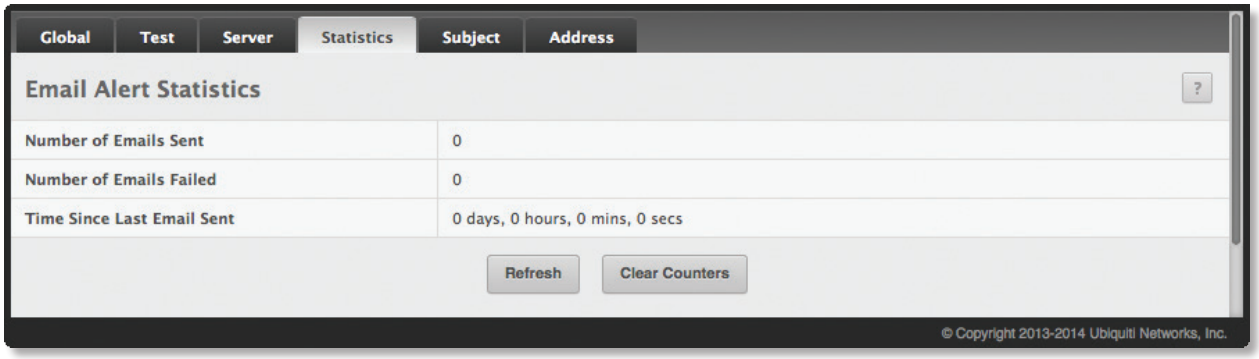

Email Alert Statistics

Email Alert Statistics Fields

Field	Description
Number of Emails Sent	The number of email alert messages successfully sent since the counters were cleared or the system was reset
Number of Emails Failed	The number of email alert messages that failed to be sent since the counters were cleared or the system was reset
Time Since Last Email Sent	The time in days, hours, minutes, and seconds that has passed since the last email alert message was successfully sent


Use the buttons to perform the following tasks:

- To reset the values on the page to zero, click **Clear Counters**.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Email Alert Subject Configuration

Use the *Email Alert Subject Configuration* page to configure the subject line of the urgent and nonurgent email alert messages sent from the switch. To access the page, click **System** > **Advanced Configuration** > **Email Alerts** > **Subject** in the navigation menu.

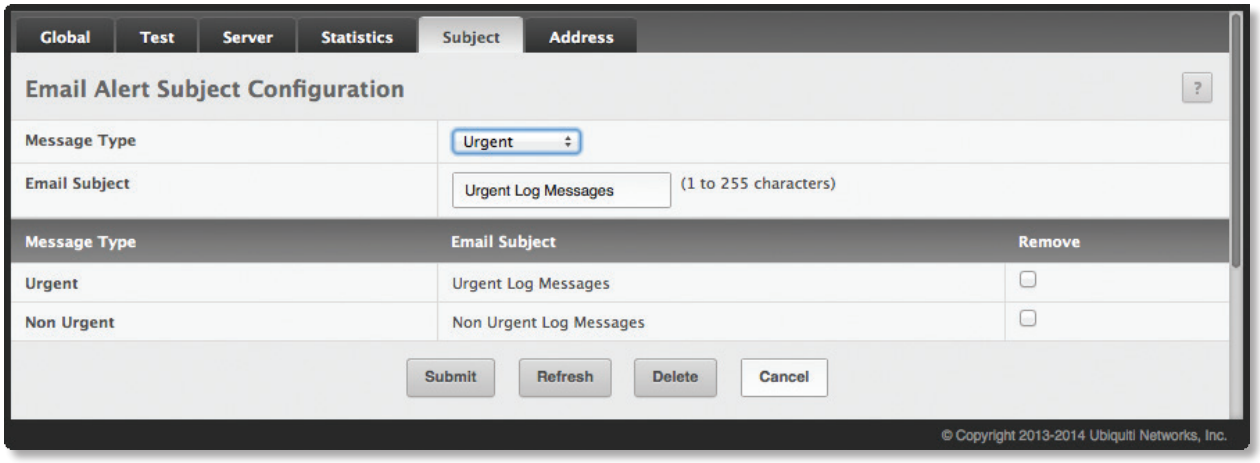

Email Alert Subject Configuration

Email Alert Subject Configuration Fields

Field	Description
Message Type	Select the message type for which you want to configure the subject line: *Urgent* or *Nonurgent*.
Email Subject	Specify the text to be displayed in the subject of the email alert message.
Remove	To reset the email alert subject to the default value, select the *Remove* option associated with the message type to reset, and click **Delete**.

Use the buttons to perform the following tasks:


- If you make changes to the page, click **Submit** to apply the changes to the running configuration.
- To remove a configured *Email Subject*, select the *Remove* check box associated with the entry, click **Delete**, and confirm the deletion.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Email Alert To Address Configuration

Use the *Email Alert To Address Configuration* page to configure the email addresses to which alert messages are sent.

To access the *Email Alert To Address Configuration* page, click **System** > **Advanced Configuration** > **Email Alerts** > **Address** in the navigation menu.

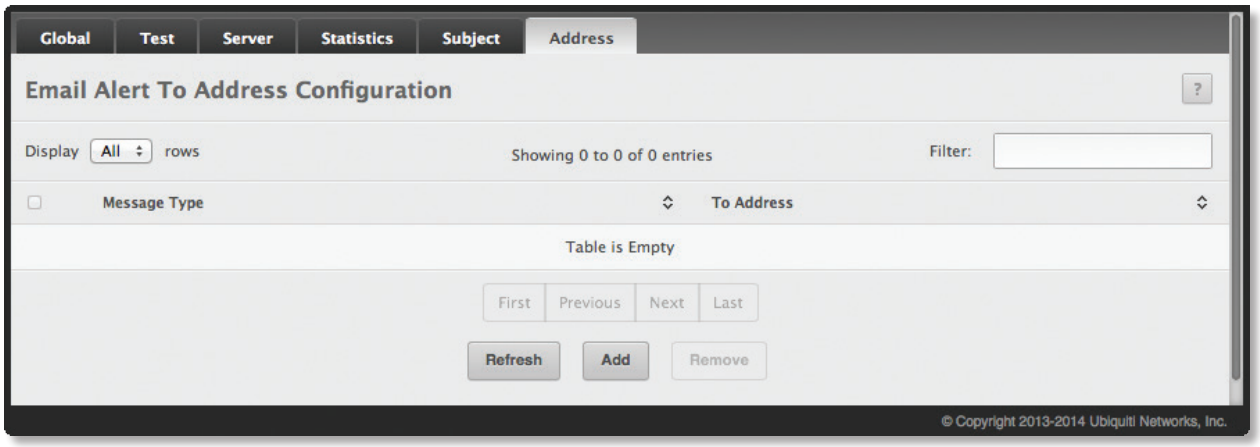

Email Alert To Address Configuration

Email Alert To Address Configuration Fields

Field	Description
Message Type	Select the type of message for which you want to specify a recipient address: *Urgent* or *Nonurgent*.
To Address	Specify the email address to which the selected type of messages are sent.

Use the buttons to perform the following tasks:

- To add an email address to the list of email alert message recipients, click **Add**, configure the desired settings, and click **Submit** to apply the changes.
- To remove configured email addess entries from the list, select the *Remove* check box next to each entry to delete, click **Remove**, and confirm the deletion.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.


Viewing Device Port Information

The pages in the *Port* folder allow you to view and monitor the physical port information for the ports available on the switch. The *Port* folder has links to the following pages:

Port Summary

Use the *Port Summary* page to view and configure the settings for all physical ports and Link Aggregation Groups (LAGs) on the switch. LAGs are also known as port channels.

To access the *Port Summary* page, click **System** > **Port** > **Summary** in the navigation menu.

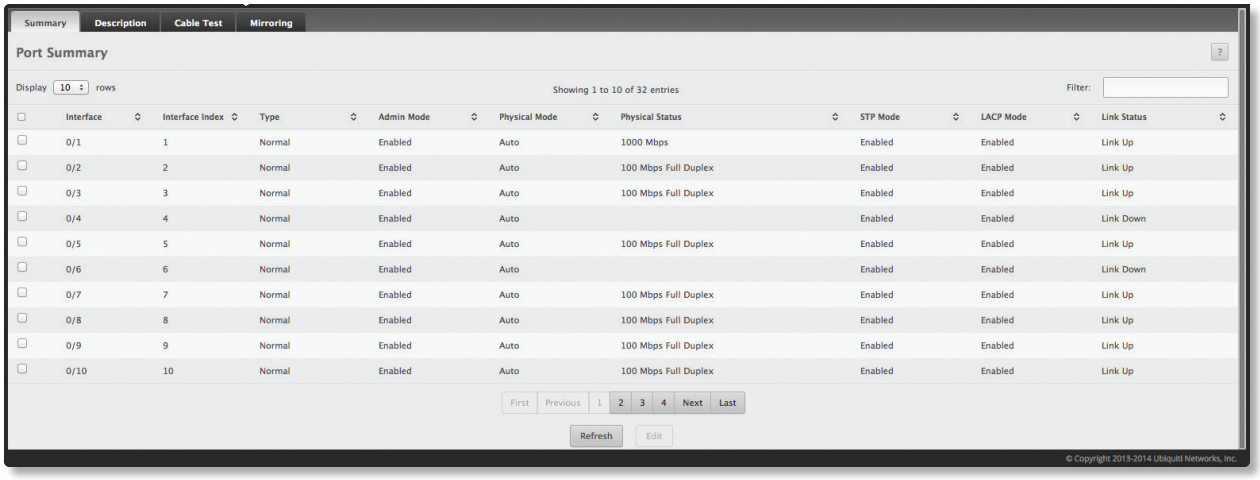

Port Summary

Port Summary Fields

Field	Description
Interface	Identifies the port or LAG associated with the information in this row of the table.
Interface Index	The interface index object value assigned by the IF-MIB. This value is used to identify the interface when managing the device using SNMP.
Type	The interface type, which is one of the following: • **Normal** The port is a normal port (it is not a LAG member or configured for port mirroring). • **Trunk Member** The port is a member of a LAG. • **Mirrored** The port is configured as a monitoring port and is the source port in a port mirroring session. For more information on port monitoring and probe ports, see **"Mirroring" on page 69**. • **Probe** The port is configured as a monitoring port and is the destination port in a port mirroring session. For more information on port monitoring and probe ports, see **"Mirroring" on page 69**.
Admin Mode	The interface's administrative mode: *Enabled* (default) or *Disabled*. If a port or LAG is administratively disabled, it cannot forward traffic.
Physical Mode	If the interface is not a LAG, this field displays the port's configured speed and duplex mode: • **Auto** The duplex mode and speed will be set by the auto-negotiation process. The port's maximum capability (full duplex and 100 Mbps) will be advertised. • **<Speed> Half Duplex** The port speeds available from the menu depend on the platform on which the EdgeSwitch software is running and which port you select. In half-duplex mode, the transmissions are one-way; that is, the port does not send and receive traffic at the same time. • **<Speed> Full Duplex** The port speeds available from the menu depend on the platform on which the EdgeSwitch software is running and which port you select. In half-duplex mode, the transmissions are two-way. In other words, the port can send and receive traffic at the same time. If the interface is a LAG, this field displays *LAG*.
Physical Status	The port speed and duplex mode for physical interfaces. The physical status is not reported for LAGs. When a port is down, the physical status is unknown.

Port Summary Fields (Continued)

Field	Description
STP Mode	The Spanning Tree Protocol (STP) Administrative Mode associated with the port or LAG. STP is a Layer-2 protocol that provides a tree topology for switches on a bridged LAN. STP allows a network to have redundant paths without the risk of network loops, by providing a single path between end stations on a network. The possible values for STP mode are: • **Enabled** Spanning tree is enabled for this port. • **Disabled** Spanning tree is disabled for this port. For more information about STP, see **"Configuring Spanning Tree Protocol" on page 161**.
LACP Mode	The administrative mode of the Link Aggregation Control Protocol (LACP). The mode must be enabled in order for the port to participate in Link Aggregation. This field can have the following values: • **Enabled** The port uses LACP for dynamic LAG configuration. When LACP is enabled, the port sends and receives LACP Protocol Data Units (PDUs) with its link partner to confirm that the external switch is also configured for link aggregation. • **Disabled** The port supports static LAG configuration only. This mode might be used when the port is connected to a device that does not support LACP. When a port is added to a LAG as a static member, it neither transmits nor receives LACP PDUs.
Link Status	Indicates whether the Link is up or down. The link is the physical connection between the port or LAG and the interface on another device.
Edit Port Configuration dialog box – Click **Edit** to display this dialog box with configurable *Admin Mode*, *Physical Mode*, *STP Mode*, and *LACP Mode* fields, plus the following configurable fields:	
Link Trap	Indicates whether the port will send an SNMP trap when link status changes. • **Enable** (Default) The system sends a trap when the link status changes. • **Disable** The system does not send a trap when the link status changes.
Maximum Frame Size	The maximum Ethernet frame size the interface supports or is configured to support. The maximum frame size includes the Ethernet header, CRC, and payload.
Broadcast Storm Recovery Level	The broadcast storm control threshold for the port. If broadcast traffic on the Ethernet port exceeds this threshold, the system blocks (discards) the broadcast traffic. To configure this threshold (disabled by default), click **Enable**, enter a threshold value, and select the units for the threshold: • **%** The threshold value specifies a percentage of port speed from *0* to *100* (default: *5*). • **pps** The threshold value is in packets per second.
Multicast Storm Recovery Level	The multicast storm control threshold for the port. If multicast traffic on the Ethernet port exceeds this threshold, the system blocks (discards) the multicast traffic. To configure this threshold (disabled by default), click **Enable**, enter a threshold value, and select the units for the threshold: • **%** The threshold value specifies a percentage of port speed from *0* to *100* (default: *5*). • **pps** The threshold value is in packets per second.
Unicast Storm Recovery Level	The unicast storm control threshold for the port. If unicast traffic on the Ethernet port exceeds this threshold, the system blocks (discards) the unicast traffic. To configure this threshold (disabled by default), click **Enable**, enter a threshold value, and select the units for the threshold: • **%** The threshold value specifies a percentage of port speed from *0* to *100* (default: *5*). • **pps** The threshold value is in packets per second.

Use the command buttons as follows:


- To edit a port's settings, select the port and click **Edit**. In the *Edit Port Configuration* dialog box, change the settings as needed, and click **Submit** to apply the changes.
- Click **Refresh** to redisplay the page with the latest information.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Port Description

Use the *Port Description* page to configure a human-readable description of the port.

To access the *Port Description* page, click **System** > **Port** > **Description** in the navigation menu.

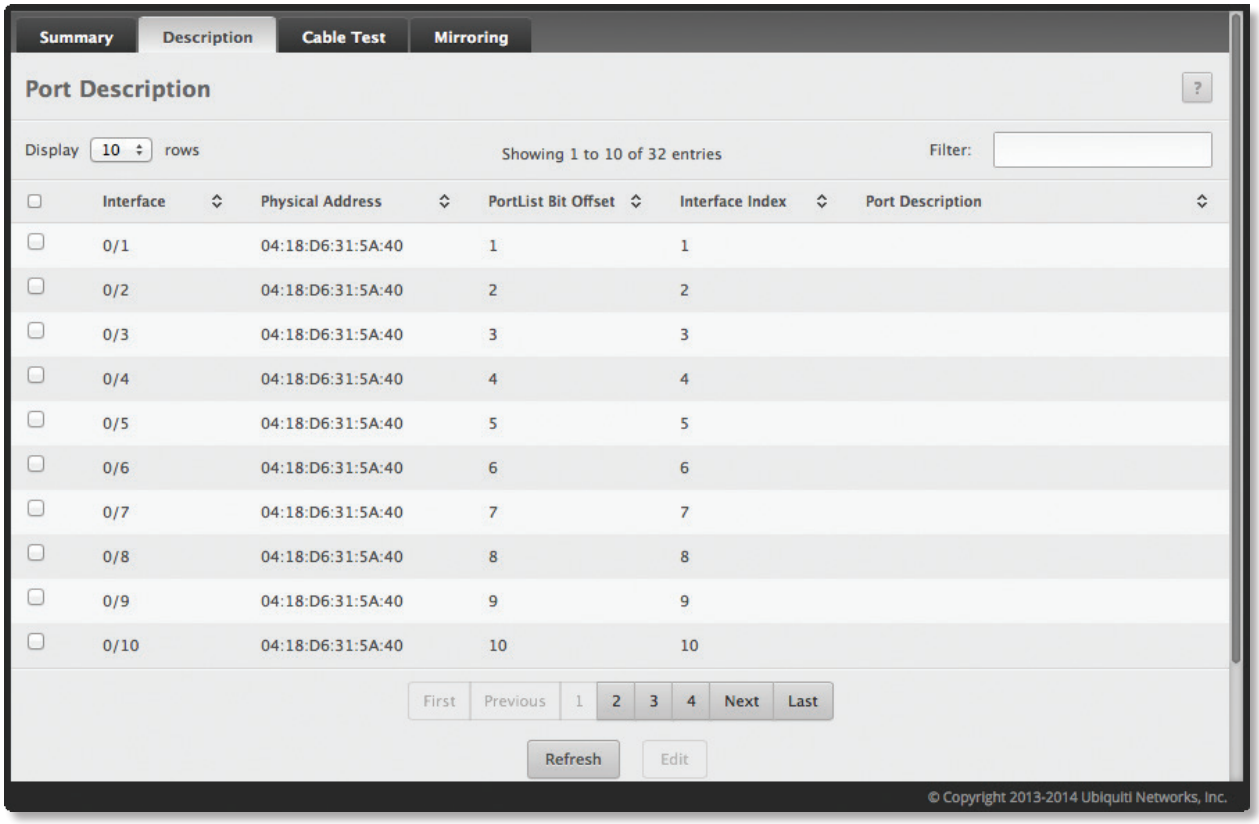

Port Description

Port Description Fields

Field	Description
Interface	Select the interface for which data is to be displayed or configured.
Physical Address	The MAC address of the specified interface.
PortList Bit Offset	The bit offset value which corresponds to the port when the MIB object type PortList is used to manage the switch in SNMP.
Interface Index	The interface index object value assigned by the IF-MIB. This value is used to identify the interface when managing the device by using SNMP.
Port Description	The description, if any, associated with the interface to help identify it. By default, there is no associated description.

Use the command buttons as follows:

- To edit a port's description, select the port and click **Edit**. In the *Edit Port Description* dialog box, type the description in the *Port Description* field, and click **Submit** to apply the changes.
- Click **Refresh** to redisplay the page with the latest information.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.


Cable Test

The cable test feature enables you to determine the cable connection status on a selected port. You can also obtain an estimate of the length of the cable connected to the port, if the PHY on the ports supports this functionality.

Note: The cable test feature is supported only for copper cable. It is not supported for optical fiber cable.

To access the *Cable Test* feature, click **System** > **Port** > **Cable Test**.

The page displays additional fields when you click **Test Cable**. The fields that are displayed depend on the cable test results.

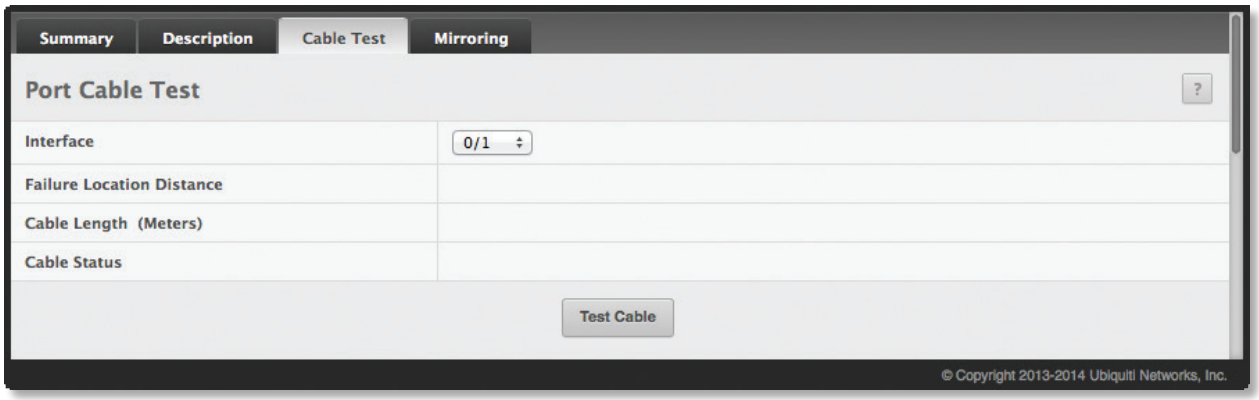

Cable Test

Cable Test Fields

Field	Description
Interface	Select the port (with connected cable) to be tested.
Failure Location Distance	The estimated distance from the end of the cable to the failure location. **Note:** This field displays a value only if the *Cable Status* is *Open* or *Short*; otherwise, this field is blank.
Cable Length	The estimated length of the cable in meters. If the cable length cannot be determined, *Unknown* is displayed. This field shows the range between the shortest estimated length and the longest estimated length. **Note:** This field displays a value only when the *Cable Status* is *Normal*; otherwise, this field is blank.
Cable Status	This field is displayed after you click **Test Cable** and test results are available. Values include. • **Normal** The cable is working correctly. • **Open** The cable is disconnected or there is a faulty connector. • **Open and Short** There is an electrical short in the cable. • **Cable status test failed** The cable status could not be determined. The cable may in fact be working.

Select a port from the *Interface* drop-down menu and click **Test Cable** to display its status.

If the port has an active link while the cable test is run, the link can go down for the duration of the test. The test may take several seconds to run. The command returns a cable length estimate if this feature is supported by the PHY for the current link speed.


Note: If the link is down and a cable is attached to a 10/100 Ethernet adapter, the displayed *Cable Status* may be *Open* or *Short* because some Ethernet adapters leave unused wire pairs unterminated or grounded.

Mirroring

Port mirroring selects the network traffic for analysis by a network analyzer. This is done for specific ports of the switch. As such, many switch ports are configured as source ports and one switch port is configured as a destination port. You have the ability to configure how traffic is mirrored on a source port. Packets that are received on the source port, that are transmitted on a port, or are both received and transmitted, can be mirrored to the destination port.

The packet that is copied to the destination port is in the same format as the original packet on the wire. This means that if the mirror is copying a received packet, the copied packet is VLAN tagged or untagged as it was received on the source port. If the mirror is copying a transmitted packet, the copied packet is VLAN tagged or untagged as it is being transmitted on the source port.

Use the *Multiple Port Mirroring* page to define port mirroring sessions. To access the *Multiple Port Mirroring* page, click **System** > **Port** > **Mirroring** in the navigation menu.

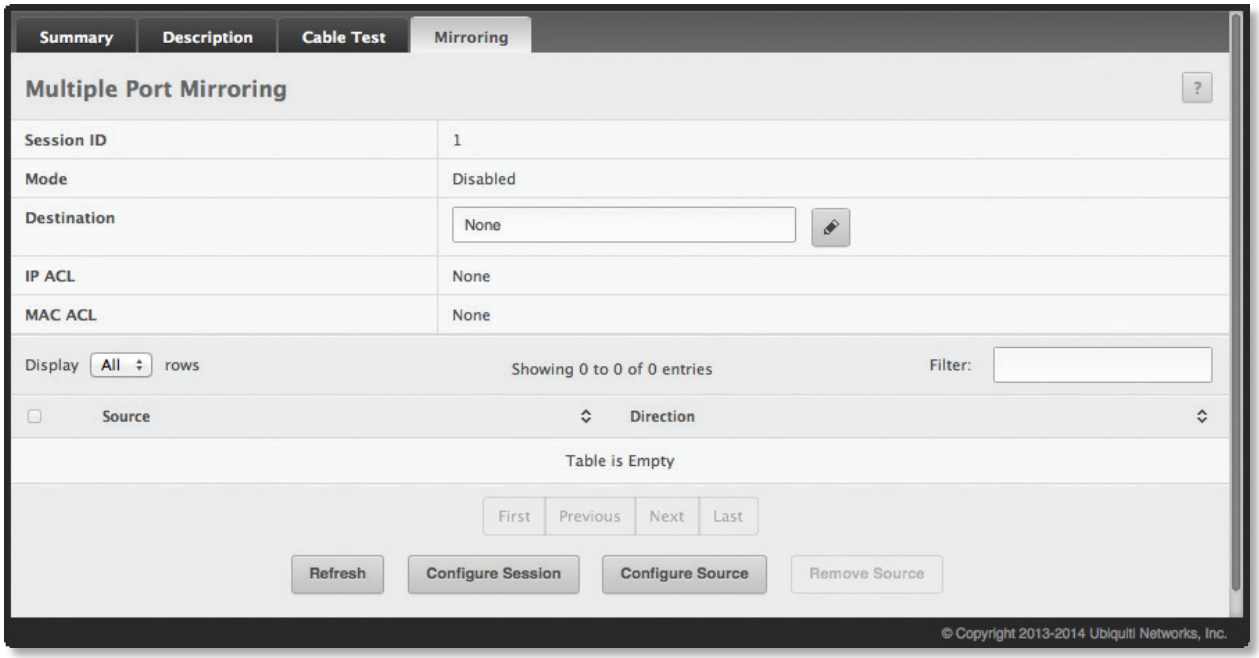

Multiple Port Mirroring

Multiple Port Mirroring Fields

Field	Description
Session ID	Specifies the monitoring session.
Mode	The administrative mode for the selected port mirroring session. If the mode is *Disabled*, the configured source is not mirroring traffic to the destination.
Destination	The interface that receives traffic from all configured source ports. To edit this field, click to open the *Destination Configuration* dialog box (see **"" on page 70** for more information).
IP ACL	The IP access-list ID or name attached to the port mirroring session.
MAC ACL	The MAC access-list name attached to the port mirroring session.
Source	Possible values are: • **VLAN** All the member ports of this VLAN are mirrored. • **Interface** The port(s) configured to send traffic to the destination port. You can configure up to 5 source ports for each port mirroring session.
Direction	The direction of traffic on the source port(s) that is sent to the probe port. Possible values are: • **Tx and Rx** Both ingress and egress traffic. • **Rx** Ingress traffic only. • **Tx** Egress traffic only.

Use the buttons to perform the following tasks:

- To configure the administrative mode for a port mirroring session or to select an ACL for flow-based mirroring, click **Configure Session**, configure the desired settings, and click **Submit** to apply the changes.
- To configure the destination as Remote VLAN or probe port, click in the *Destination* field and click **Submit** to apply the change.
- To configure a source, click **Configure Source**. You can configure the source as Remote VLAN, VLAN, or Interface, specify one or more source ports for the mirroring session, or determine which traffic is mirrored (Tx, Rx, or both). Then, click **Submit** to apply the changes.
- To remove one or more source ports from the port mirroring session, select the check box associated with each source port to remove, click **Remove Source**, and confirm the removal.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Configuring a Port Mirroring Session

Note: A port will be removed from a VLAN or LAG when it becomes a destination mirror.

1. From the *Port Mirroring* page, click **Configure Session** to display the *Session Configuration* dialog box.
2. In the *Mode* field, select **Enable** to enable port mirroring.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Configuring Port Mirroring Source Ports

1. From the *Port Mirroring* page, click **Configure Source** to display the *Source Configuration* dialog box.
2. Configure the fields shown in the table below.

Multiple Port Mirroring – Source Configuration Fields

Field	Description
Session ID	Specifies the monitoring session.
Type	The type of interface to use as the source: • **None** The source is not configured. • **Remote VLAN** The VLAN configured as the RSPAN VLAN is the source. In an RSPAN configuration, the remote VLAN is the source on the destination device that has a physical port connected to the network traffic analyzer. • **VLAN** Traffic to and from a configured VLAN is mirrored; that is, all packets sent and received on all physical ports that are members of the VLAN are mirrored. • **Interface** Traffic is mirrored from one or more physical ports on the device.
Remote VLAN	The VLAN that is configured as the RSPAN VLAN.
VLAN ID	The VLAN to use as the source. Traffic from all physical ports that are members of this VLAN is mirrored. This field is available only when the selected *Type* is *VLAN*.
Available Source Port(s)	The physical port or ports to use as the source. Press and hold CTRL to select multiple ports. This field is available only when the selected *Type* is *Interface*.
Direction	Select the type traffic monitored on the source port, which can be one of the following: • **Tx/Rx** Monitors transmitted and received packets. • **Rx** Monitors received packets only. • **Tx** Monitors transmitted packets only.

3. Click **Add** to apply the changes to the system.

   The new port mirroring session is enabled for the unit and port, and the device is updated. The source port appears in the *Source Port* list on the *Multiple Port Mirroring* page.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Configuring the Port Mirroring Destination

1. On the *Port Mirroring* page, click next to the *Destination* field text box.

   The *Destination Configuration* dialog box opens.

2. Configure the fields shown in the table below.

Multiple Port Mirroring – Add Source Ports Fields

Field	Description
Type	The type of interface to use as the destination: • **None** The destination is not configured. • **Remote VLAN** Traffic is mirrored to the VLAN on the system that is configured as the RSPAN VLAN. In an RSPAN configuration, the destination should be the Remote VLAN on any device that does not have a port connected to the network traffic analyzer. • **Interface** Traffic is mirrored to a physical port on the local device. The interface is the probe port that is connected to a network traffic analyzer.
Remote VLAN	The VLAN that is configured as the RSPAN VLAN.
Port	Click the drop-down box to select the port to which traffic is mirrored. If the *Type* is *Remote VLAN*, the selected port is a reflector port. The reflector port is a trunk port that carries the mirrored traffic towards the destination device. If the *Type* is *Interface*, the selected port is the probe port that is connected to a network traffic analyzer.

3. Click **Submit** to save the changes.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Removing Port Mirroring Sources

1. On the *Port Mirroring* page, select the source port to be removed.
2. Select one or more source ports to remove from the session.

   Use the **CTRL** key to select multiple ports to remove.

3. Click **Remove Source**, and then click **OK** to confirm the operation.

   The selected source ports are removed from the port mirroring session, and the device is updated.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Defining SNMP Parameters

Simple Network Management Protocol (SNMP) provides a method for managing network devices. The device supports SNMP version 1, SNMP version 2, and SNMP version 3.

SNMP v1 and v2

The SNMP agent maintains a list of variables, which are used to manage the device. The variables are defined in the Management Information Base (MIB). The MIB presents the variables controlled by the agent. The SNMP agent defines the MIB specification format, as well as the format used to access the information over the network. Access rights to the SNMP agent are controlled by access strings.

SNMP v3

SNMP v3 also applies access control and a new traps mechanism to SNMPv1 and SNMPv2 PDUs. In addition, the User Security Model USM) is defined for SNMPv3 and includes:

- **Authentication**: Provides data integrity and data origin authentication.
- **Privacy**: Protects against disclosure of message content. Cipher-Bock-Chaining (CBC) is used for encryption. Either authentication is enabled on an SNMP message, or both authentication and privacy are enabled on an SNMP message. However privacy cannot be enabled without authentication.
- **Timeliness**: Protects against message delay or message redundancy. The SNMP agent compares the incoming message to the message time information.
- **Key Management**: Defines key generation, key updates, and key use.

The device supports SNMP notification filters based on Object IDs (OID). OIDs are used by the system to manage device features. SNMP v3 supports the following features:

- Security
- Feature Access Control
- Traps


Authentication or Privacy Keys are modified in the SNMPv3 User Security Model (USM).

Use the *SNMP* page to define SNMP parameters. To display the *SNMP* page, click **System** > **SNMP** in the navigation menu.

SNMP Community Configuration

Access rights are managed by defining communities on the SNMPv1, 2 Community page. When the community names are changed, access rights are also changed. SNMP Communities are defined only for SNMP v1 and SNMP v2.

Use the *SNMP Community Configuration* page to enable SNMP and Authentication notifications. To display the page, click **System** > **Advanced Configuration** > **SNMP** > **Community** in the navigation menu.

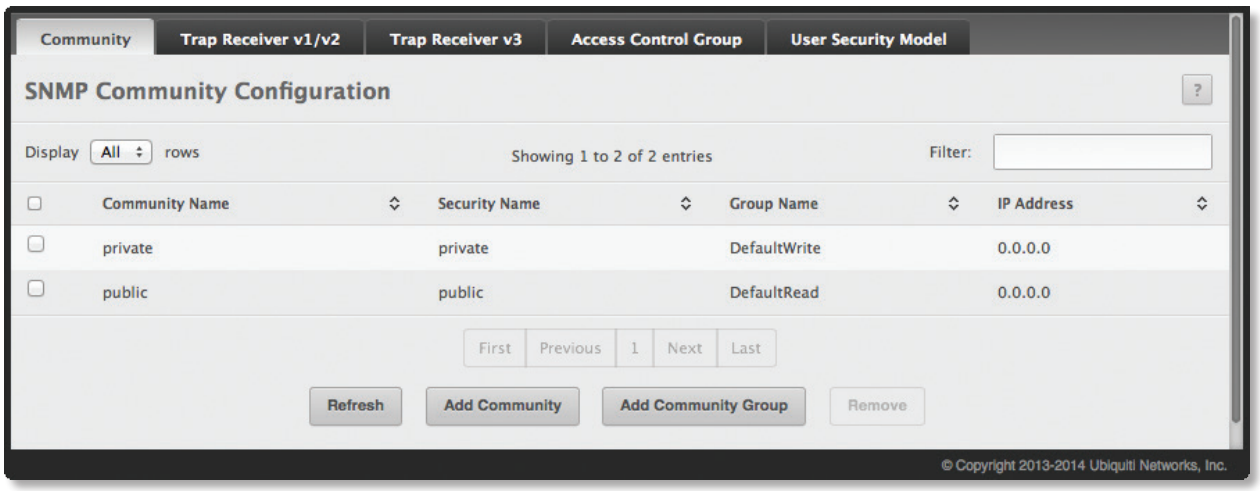

SNMP Community Configuration

SNMP Community Configuration Fields

Field	Description
Community Name	Community name used in SNMPv1/v2 packets. This is configured in the client and identifies the access the user may connect with.
Security Name	Identifies the Security entry that associates Communities and Groups for a specific access type.
Group Name	Identifies the Group associated with this Community entry.
IP Address	Specifies the IP address that can connect with this community.

Use the buttons to perform the following tasks:


- To add a community, click **Add Community**, configure the settings, and click **Submit** to apply the change.
- To add a community group, click **Add Community Group**, configure the settings, and click **Submit** to apply the change.
- To delete a configured community from the list, select the check box next to its entry, click **Remove**, and confirm the deletion.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

SNMP v1/v2 Trap Receivers Configuration

Use the *SNMP v1/v2 Trap Receivers* configuration page to configure settings for each SNMPv1 or SNMPv2 management host that will receive notifications about traps generated by the device. The SNMP management host is also known as the SNMP trap receiver.

To access the page, click **System** > **Advanced Configuration** > **SNMP** > **Trap Receiver V1/V2** from the navigation menu.

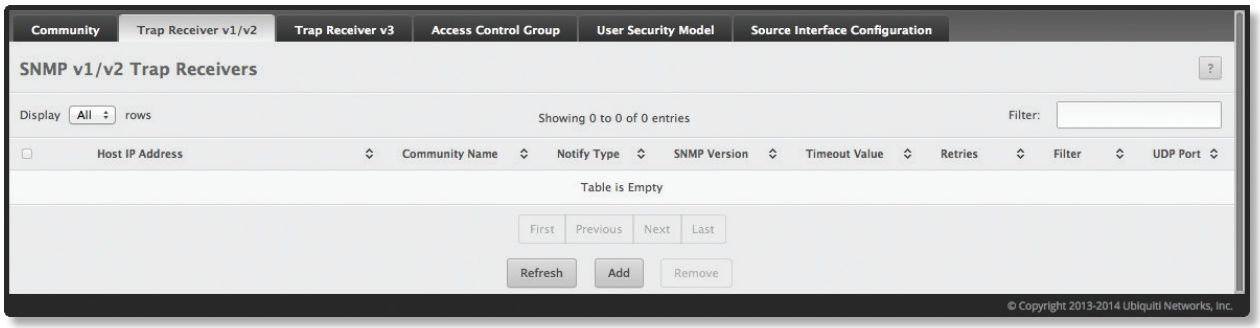

SNMP v1/v2 Trap Receivers

SNMP v1/v2 Trap Receivers Fields

Field	Description
Host IP Address	The IP address of the SNMP management host that will receive traps generated by the device.
Community Name	The name of the SNMP community that includes the SNMP management host and the SNMP agent on the device.
Notify Type	The type of SNMP notification to send the SNMP management host: • **Inform** An SNMP message that notifies the host when a certain event has occurred on the device. The message is acknowledged by the SNMP management host. This type of notification is not available for SNMPv1. • **Trap** An SNMP message that notifies the host when a certain event has occurred on the device. The message is not acknowledged by the SNMP management host.
SNMP Version	The version of SNMP to use, which is either SNMPv1 or SNMPv2.
Timeout Value	The number of seconds to wait for an acknowledgment from the SNMP management host before resending an inform message.
Retries	The number of times to resend an inform message that is not acknowledged by the SNMP management host.
Filter	The name of the filter for the SNMP management host. The filter is configured by using the CLI and defines which MIB objects to include or exclude from the view. This field is optional.
UDP Port	The UDP port on the SNMP management host that will receive the SNMP notifications. If no value is specified when configuring a receiver, the default UDP port value is used.

Use the buttons to perform the following tasks:


- To add an SNMP trap receiver and configure its settings, click **Add**. In the *Add SNMP v1/v 2 Host* dialog box, enter the required information, and then click **Submit** to apply the changes.
- To delete one or more SNMP trap receivers from the list, select each entry to delete, click **Remove**, and confirm the deletion.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

SNMP v3 Trap Receivers Configuration

Use the *Trap Receiver v3* page to configure settings for each SNMPv3 management host (also known as the SNMP trap receiver) that will receive notifications about traps generated by the device.

To access the *Trap Receiver v3* configuration page, click **System** > **Advanced Configuration** > **SNMP** > **Trap Receiver V3** from the navigation menu.

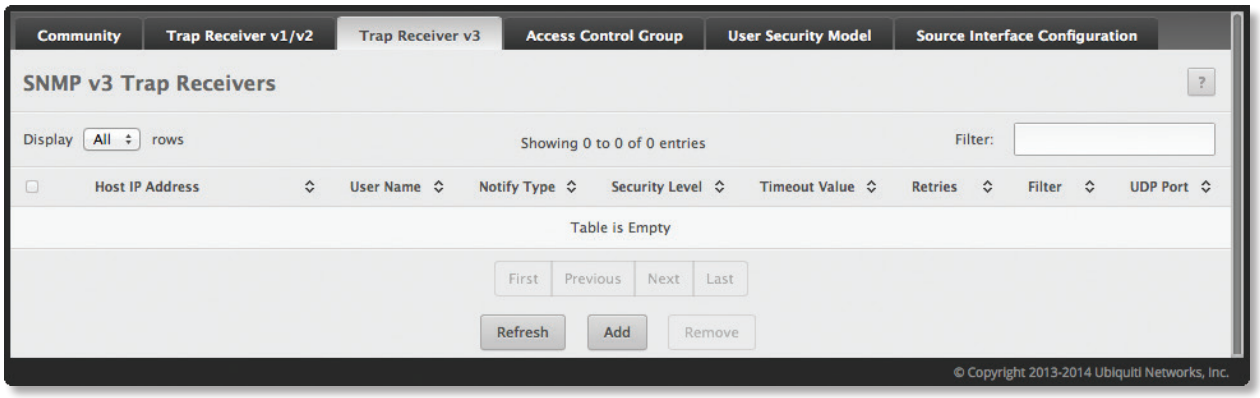

SNMP v3 Trap Receivers

SNMP v3 Trap Receivers Fields

Field	Description
Host IP Address	The IP address of the SNMP management host that will receive traps generated by the device.
User Name	The name of the SNMP user that is authorized to receive the SNMP notification.
Notify Type	The type of SNMP notification to send the SNMP management host: • **Inform** An SNMP message notifying the host when a certain event occurs on the device. The SNMP management host acknowledge the message. This notification type is not available for SNMPv1. • **Trap** An SNMP message that notifies the host when a certain event has occurred on the device. The message is not acknowledged by the SNMP management host.
Security Level	The security level associated with the SNMP user, which is one of the following: • **No Auth No Priv** No authentication and no data encryption (no security). • **Auth No Priv** Authentication, but no data encryption. With this security level, users send SNMP messages that use an MD5 key/password for authentication, but not a DES key/password for encryption. • **Auth Priv** Authentication and data encryption. With this security level, users send an MD5 key/password for authentication and a DES key/password for encryption.
Timeout Value	The number of seconds to wait for an acknowledgment from the SNMP management host before resending an inform message.
Retries	The number of times to resend an inform message that is not acknowledged by the SNMP management host.
Filter	The name of the filter for the SNMP management host. The filter is configured by using the CLI and defines which MIB objects to include or exclude from the view. This field is optional.
UDP Port	The UDP port on the SNMP management host that will receive the SNMP notifications. If no value is specified when configuring a receiver, the default UDP port value is used.

Use the buttons to perform the following tasks:


- To add an SNMP trap receiver and configure its settings, click **Add**. In the *Add SNMP v3 Host* dialog box, enter the required information, and then click **Submit** to appy the changes.
- To delete one or more SNMP trap receivers from the list, select each entry to delete and click **Remove**, and confirm the deletion.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

SNMP Access Control Group

Use the *SNMP Access Control Group* page to configure SNMP access control groups. These SNMP groups allow network managers to assign different levels of authorization and access rights to specific device features and their attributes. The SNMP group can be referenced by the SNMP community to provide security and context for agents receiving requests and initiating traps as well as for management systems and their tasks. An SNMP agent will not respond to a request from a management system outside of its configured group, but an agent can be a member of multiple groups at the same time to allow communication with SNMP managers from different groups. Several default SNMP groups are preconfigured on the system.

To access the page, click **System** > **Advanced Configuration** > **SNMP** > **Access Control Group** in the navigation menu.

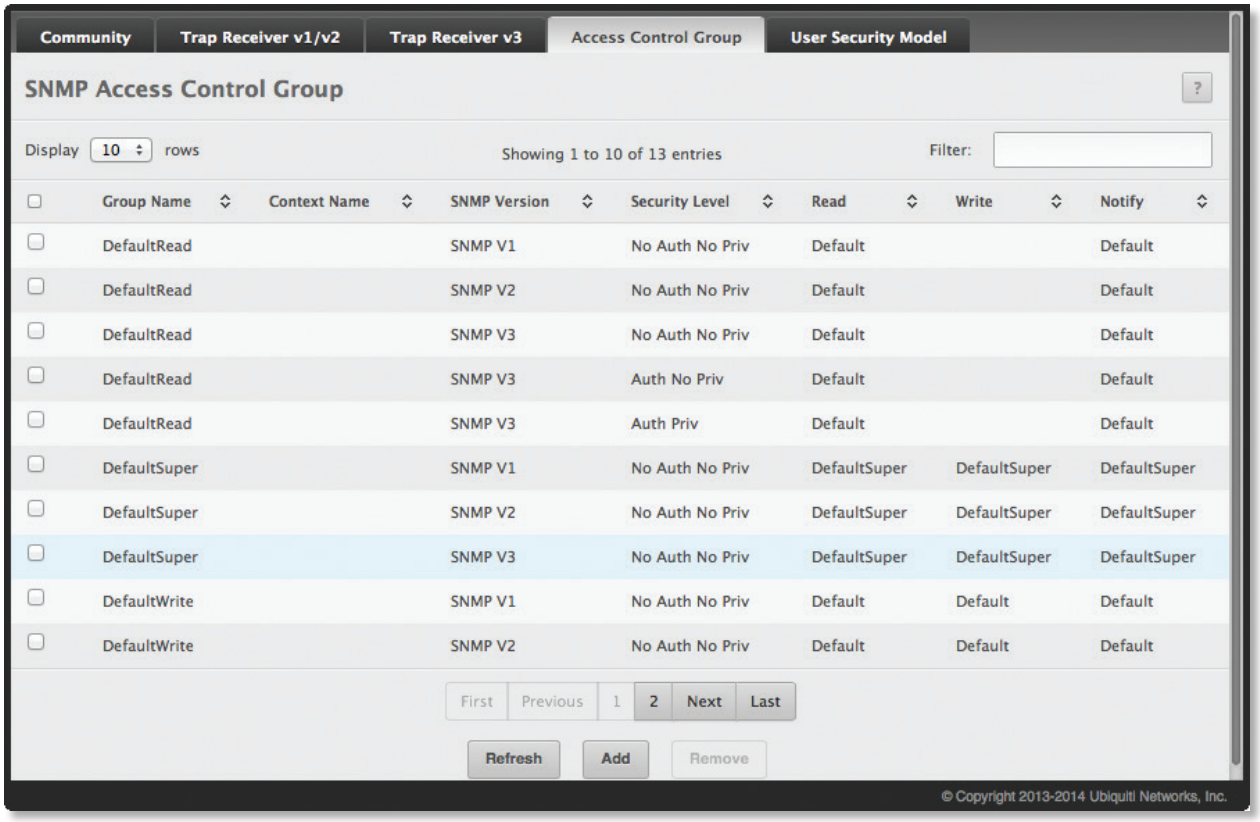

SNMP Access Control Group

SNMP Access Control Group Fields

Field	Description
Group Name	The name that identifies the SNMP group.
Context Name	The SNMP context associated with the SNMP group and its views. A user or a management application specifies the context name to get the performance information from the MIB objects associated with that context name. The Context EngineID identifies the SNMP entity that should process the request (the physical router), and the *Context Name* tells the agent in which context it should search for the objects requested by the user or the management application.
SNMP Version	The SNMP version associated with the group.
Security Level	The security level associated with the group, which is one of the following: • **No Auth No Priv** No authentication and no data encryption (no security). This is the only Security Level available for SNMPv1 and SNMPv2 groups. • **Auth No Priv** Authentication, but no data encryption. With this security level, users send SNMP messages that use an MD5 key/password for authentication, but no DES key/password for encryption. • **Auth Priv** Authentication and data encryption. With this security level, users send an MD5 key/password for authentication and a DES key/password for encryption.

SNMP Access Control Group Fields (Continued)

Field	Description
Read	The level of read access rights for the group. The menu includes the available SNMP views. When adding a group, select the check box to allow the field to be configured, then select the desired view that restricts management access to viewing the contents of the agent.
Write	The level of write access rights for the group. The menu includes the available SNMP views. When adding a group, select the check box to allow the field to be configured, then select the desired view that permits management read-write access to the contents of the agent but not to the community.
Notify	The level of notify access rights for the group. The menu includes the available SNMP views. When adding a group, select the check box to allow the field to be configured, then select the desired view that permits sending SNMP traps or informs.

Use the buttons to perform the following tasks:


- To add an SNMP group, click **Add**. In the *Add new Access Control Group* dialog box, enter the settings, and then click **Submit** to apply the changes.
- To remove one or more SNMP groups, select each entry to delete, click **Remove**, and confirm the deletion.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

SNMP User Security Model

The *SNMP User Security Model* page provides the capability to configure the SNMP V3 user accounts.

To access the page, click **System** > **Advanced Configuration** > **SNMP** > **User Security Model** in the navigation menu.

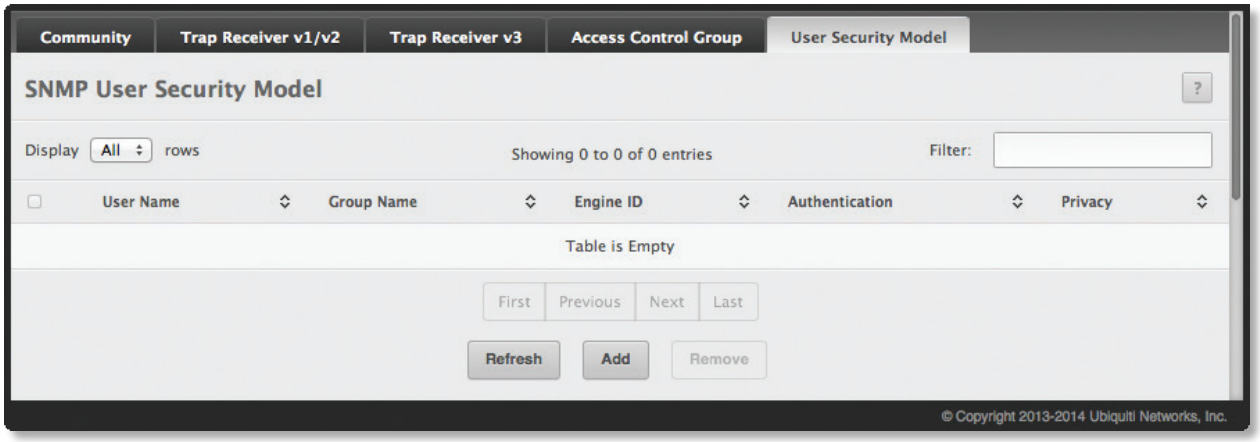

SNMP User Security Model

SNMP User Security Model Fields

Field	Description
Engine ID Type	(*Add New SNMP User* dialog box only) • **Local** The engine ID is the switch's own engine ID (the engine ID cannot be changed). • **Remote** The engine ID is for a remote device and needs to be entered.
Engine ID	Each SNMPv3 agent has an engine ID that uniquely identifies the agent in the device. If given this entry will be used only for packets whose engine ID is this. This field takes a hexadecimal string in the form *0102030405*.
User Name	Specifies the name of the SNMP user being added for the User-based Security Model (USM). Each user name must be unique within the SNMP agent user list. A user name cannot contain any leading or embedded blanks.

SNMP User Security Model Fields (Continued)

Field	Description
Group Name	An SNMP group is a group to which hosts running the SNMP service belong. A group name parameter is simply the name of that group by which SNMP communities are identified. The use of a group name provides some security and context for agents receiving requests and initiating traps and does the same for management systems and their tasks. An SNMP agent won't respond to a request from a management system outside its configured group, but an agent can be a member of multiple groups at the same time. This allows for communications with SNMP managers from different groups.
Authentication Method	Specifies the authentication protocol to be used on authenticated messages on behalf of the specified user. • **SHA** SHA protocol will be used. • **MD5** MD5 protocol will be used. • **None** No authentication will be used for this user.
Password	Specifies the password used to generate the key to be used in authenticating messages on behalf of this user. This parameter must be specified if the *Authentication Method* parameter is not set to *None*.
Privacy	Specifies the privacy protocol to be used on encrypted messages on behalf of the specified user. This parameter is only valid if the *Authentication Method* parameter is not set to *None*. • **DES** DES protocol will be used. • **None** No privacy protocol will be used.
Authentication Key	Specifies the password used to generate the key to be used in encrypting messages to and from this user. This parameter must be specified if the *Privacy* parameter is not set to *None*.

Use the buttons to perform the following tasks:


- To add a user, click **Add**. The *Add New SNMP User* dialog box opens. Specify the new account information in the available fields, and then click **Submit** to apply the changes.
- To remove a user, select one or more table entries, click **Remove**, and confirm the deletion.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

SNMP Trap Source Interface Configuration

Use this page to specify the physical or logical interface to use as the SNMP client source interface. When an IP address is configured on the source interface, this address is used for all SNMP communications between the local SNMP client and the remote SNMP server. The IP address of the designated source interface is used in the IP header of SNMP management protocol packets. This allows security devices, such as firewalls, to identify all source packets coming from a specific device.

To access the *SNMP Trap Source Interface Configuration* page, click **System** > **Advanced Configuration** > **SNMP** > **Source Interface Configuration** in the navigation menu.

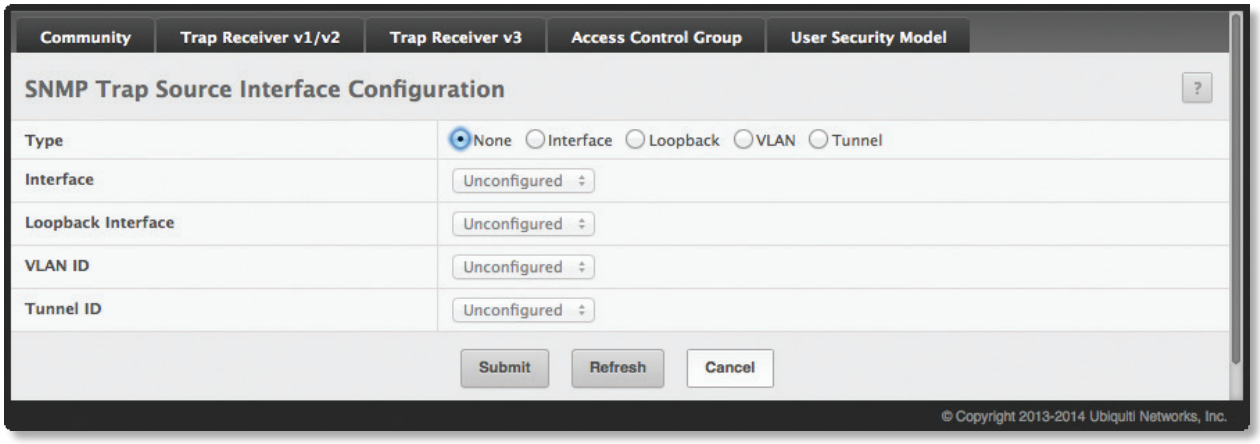

SNMP Trap Source Interface Configuration

SNMP Trap Source Interface Configuration Fields

Field	Description
Type	The type of interface to use as the source interface: • **None** The primary IP address of the originating (outbound) interface is used as the source address. • **Interface** The primary IP address of a physical port is used as the source address. • **VLAN** The primary IP address of a VLAN routing interface is used as the source address. • **Tunnel** The primary IP address of a tunnel interface is used as the source address.
Interface	When the selected *Type* is *Interface*, select the physical port to use as the source interface.
VLAN ID	When the selected *Type* is *VLAN*, select the VLAN to use as the source interface. The menu contains only the VLAN IDs for VLAN routing interfaces.
Tunnel ID	When the selected *Type* is *Tunnel*, select the tunnel interface to use as the source interface

Use the buttons to perform the following tasks:

- If you make any changes to the page, click **Submit** to apply the changes to the system.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.


Viewing System Statistics

The pages in the Statistics folder contain a variety of information about the number and type of traffic transmitted from and received on the switch.

Switch Detailed Statistics

The *Switch Statistics* page shows detailed statistical information about the traffic the switch handles.

To access the *Switch Statistics* page, click **System** > **Statistics** > **System** > **Switch** in the navigation menu.

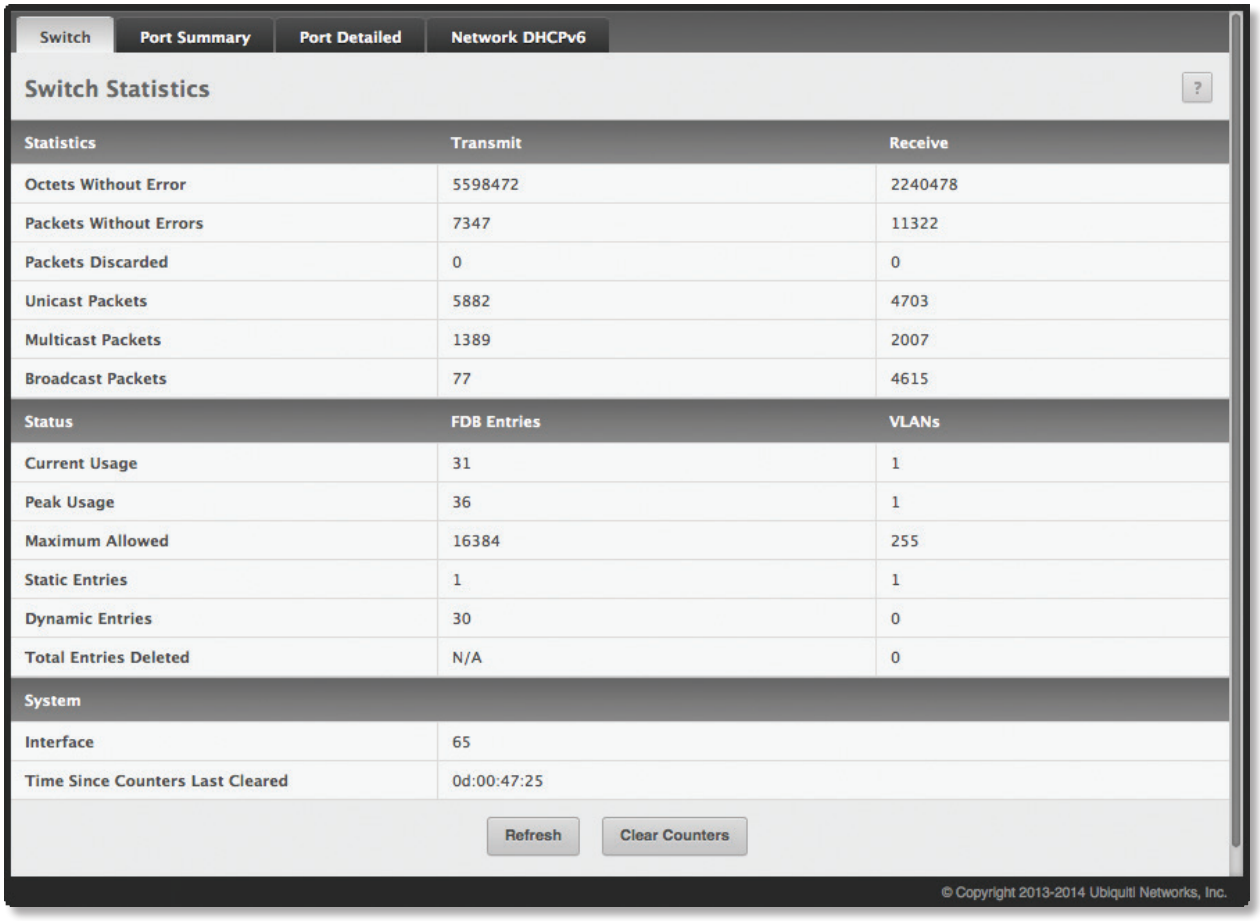

Switch Statistics

Switch Statistics Fields

Field	Description
Statistics section:	
Octets Without Error	The total number of octets (bytes) of data successfully transmitted or received by the processor (excluding framing bits but including FCS octets).
Packets Without Errors	The total number of packets including unicast, broadcast, and multicast packets, successfully transmitted or received by the processor.
Packets Discarded	The number of outbound (Transmit column) or inbound (Receive column) packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. A possible reason for discarding a packet could be to free up buffer space.
Unicast Packets	The number of subnetwork-unicast packets delivered to or received from a higher-layer protocol.
Multicast Packets	The total number of packets transmitted or received by the device that were directed to a multicast address. Note that this number does not include packets directed to the broadcast address.
Broadcast Packets	The total number of packets transmitted or received by the device that were directed to the broadcast address. Note that this number does not include multicast packets.

Switch Statistics Fields (Continued)

Field	Description
Status section:	
Current Usage	In the *FDB Entries* column, the value shows the number of learned and static entries in the MAC address table. In the VLANs column, the value shows the total number of static and dynamic VLANs that currently exist in the VLAN database.
Peak Usage	The highest number of entries that have existed in the MAC address table or VLAN database since the most recent reboot.
Maximum Allowed	The maximum number of statically configured or dynamically learned entries allowed in the MAC address table or VLAN database.
Static Entries	The current number of entries in the MAC address table or VLAN database that an administrator has statically configured.
Dynamic Entries	The current number of entries in the MAC address table or VLAN database that have been dynamically learned by the device.
Total Entries Deleted	The number of VLANs that have been created and then deleted since the last reboot. This field does not apply to the MAC address table entries.
System section:	
Interface	The interface index object value of the interface table entry associated with the Processor of this switch. This value is used to identify the interface when managing the device by using SNMP.
Time Since Counters Last Cleared	The amount of time in days, hours, minutes, and seconds, that has passed since the statistics for this device were last reset.

Use the command buttons to perform the following actions:


- Click **Refresh** to refresh the data on the screen with the present state of the data in the switch.
- Click **Clear Counters** to clear all the statistics counters, resetting all switch summary and detailed statistics to default values. The discarded packets count cannot be cleared.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Port Summary

The *Port Summary Statistics* page shows statistical information about the packets received and transmitted by each port and LAG.

To access the page, click **System** > **Statistics** > **System** > **Port Summary** in the navigation menu.

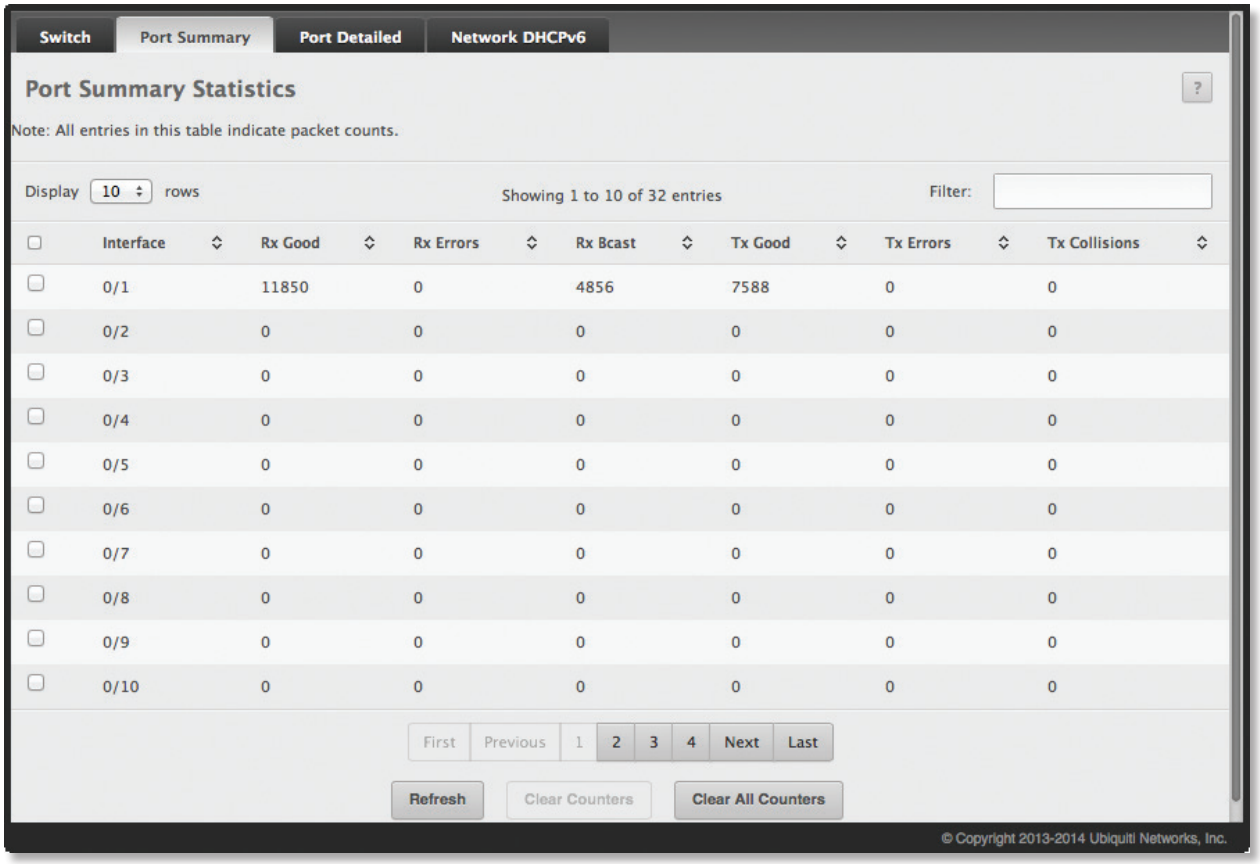

Port Summary Statistics

Port Summary Statistics Fields

Field	Description
Interface	Identifies the port or LAG.
Rx Good	The total number of inbound packets received by the interface without errors.
Rx Errors	The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.
Rx Bcast	The total number of good packets received that were directed to the broadcast address. Note that this number does not include multicast packets.
Tx Good	The total number of outbound packets transmitted by the interface to its Ethernet segment without errors.
Tx Errors	The number of outbound packets that could not be transmitted because of errors.
Tx Collisions	The best estimate of the total number of collisions on this Ethernet segment.

Use the buttons to perform the following tasks:


- Click **Clear Counters** to clear all the statistics counters, resetting all summary and detailed statistics for this switch to default values. The discarded packets count cannot be cleared.
- Click **Clear All Counters** to clear counters for all switches in the stack.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Port Detailed Statistics

The *Port Detailed Statistics* page displays a variety of per-port traffic statistics. To access the *Port Detailed* page, click **System** > **Statistics** > **System** > **Port Detailed** in the navigation menu.

The following illustration shows the fields on the *Port Detailed Statistics* page.

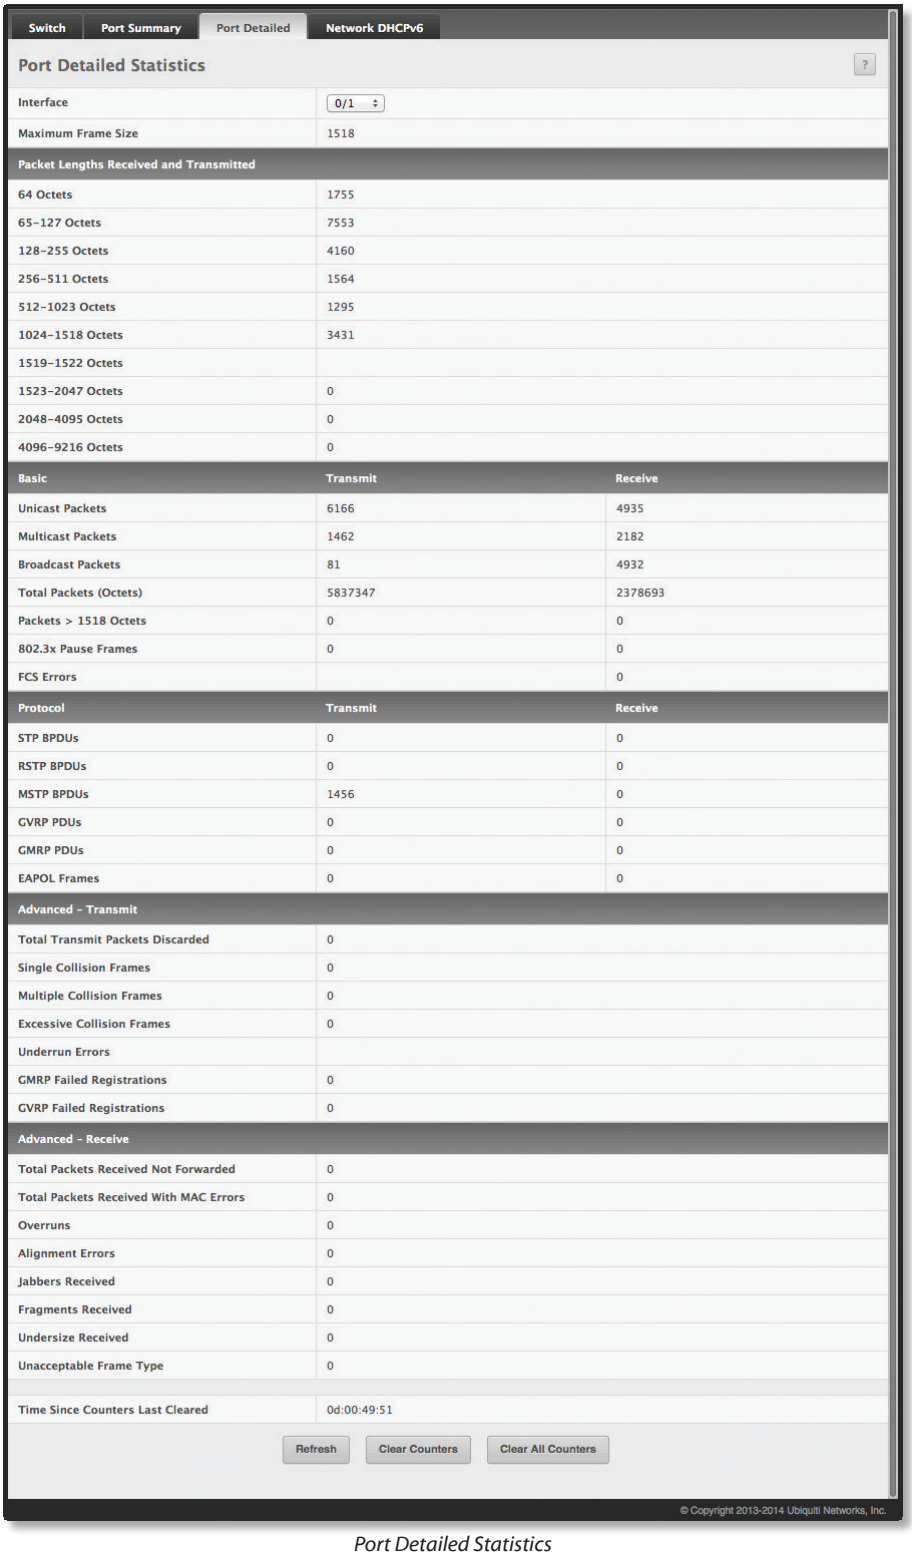

Port Detailed Statistics

Port Detailed Statistics Fields

Field	Description
Interface	Use the drop-down menu to select the interface for which data is to be displayed or configured. For non-stacking systems, this field is Slot/Port.
Maximum Frame Size	The maximum Ethernet frame size the interface supports or is configured to support. The maximum frame size includes the Ethernet header, CRC, and payload.
Packet Lengths Received and Transmitted section:	
64 Octets	The total number of packets (including bad packets) received or transmitted that were 64 octets in length (excluding framing bits but including FCS octets).
65-127 Octets	The total number of packets (including bad packets) received or transmitted that were between 65 and 127 octets in length inclusive (excluding framing bits but including FCS octets).
128-255 Octets	The total number of packets (including bad packets) received or transmitted that were between 128 and 255 octets in length inclusive (excluding framing bits but including FCS octets).
256-511 Octets	The total number of packets (including bad packets) received or transmitted that were between 256 and 511 octets in length inclusive (excluding framing bits but including FCS octets).
512-1023 Octets	The total number of packets (including bad packets) received or transmitted that were between 512 and 1023 octets in length inclusive (excluding framing bits but including FCS octets).
1024-1518 Octets	The total number of packets (including bad packets) received or transmitted that were between 1024 and 1518 octets in length inclusive (excluding framing bits but including FCS octets).
1519-1522 Octets	The total number of packets (including bad packets) received or transmitted that were between 1519 and 1522 octets in length inclusive (excluding framing bits but including FCS octets).
1523-2047 Octets	The total number of packets (including bad packets) received or transmitted that were between 1523 and 2047 octets in length inclusive (excluding framing bits but including FCS octets).
2048-4095 Octets	The total number of packets (including bad packets) received or transmitted that were between 2048 and 4095 octets in length inclusive (excluding framing bits but including FCS octets).
4096-9216 Octets	The total number of packets (including bad packets) received or transmitted that were between 4096 and 9216 octets in length inclusive (excluding framing bits but including FCS octets).
Basic section:	
Unicast Packets	The *Transmit* column shows the total number of packets that higher-level protocols requested be transmitted to a subnetwork unicast address, including those that were discarded or not sent. The *Receive* column shows the number of subnetwork unicast packets delivered to a higher-layer protocol.
Multicast Packets	The *Transmit* column shows the total number of packets that higher-level protocols requested be transmitted to a multicast address, including those that were discarded or not sent. The *Receive* column shows the number of multicast packets delivered to a higher-layer protocol.
Broadcast Packets	The *Transmit* column shows the total number of packets that higher-level protocols requested be transmitted to a broadcast address, including those that were discarded or not sent. The *Receive* column shows the number of broadcast packets delivered to a higher-layer protocol.
Total Packets (Octets)	The total number of octets of data (including those in bad packets) transmitted or received on the interface (excluding framing bits but including FCS octets). This object can be used as a reasonable estimate of Ethernet utilization. If greater precision is desired, the etherStatsPkts and etherStatsOctets objects should be sampled before and after a common interval.
Packets > 1518 Octets	The total number of packets transmitted or received by this interface that were longer than 1518 octets (excluding framing bits, but including FCS octets) and were otherwise well formed. This counter has a maximum increment rate of 815 counts per sec at 10 Mb/s.
802.3x Pause Frames	The number of MAC Control frames transmitted or received by this interface with an opcode indicating the PAUSE operation. This counter does not increment when the interface is operating in half-duplex mode.
FCS Errors	The total number of packets transmitted or received by this interface that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had a bad Frame Check Sequence (FCS) with an integral number of octets.
Protocol section:	
STP BPDUs	The number of Spanning Tree Protocol (STP) Bridge Protocol Data Units (BPDUs) transmitted or received by the interface.
RSTP BPDUs	The number of Rapid STP BPDUs transmitted or received by the interface.
MSTP BPDUs	The number of Multiple STP BPDUs transmitted or received by the interface.

Port Detailed Statistics Fields (Continued)

Field	Description
GVRP PDUs	The number of Generic Attribute Registration Protocol (GARP) VLAN Registration Protocol (GVRP) PDUs transmitted or received by the interface.
GMRP PDUs	The number of GARP Multicast Registration Protocol (GMRP) PDUs transmitted or received by the interface.
EAPOL Frames	The number of Extensible Authentication Protocol (EAP) over LAN (EAPOL) frames transmitted or received by the interface for IEEE 802.1X port-based network access control.
Advanced - Transmit section:	
Total Transmit Packets Discarded	The sum of single collision frames discarded, multiple collision frames discarded, and excessive frames discarded.
Single Collision Frames	A count of the number of successfully transmitted frames on a particular interface for which transmission is inhibited by exactly one collision.
Multiple Collision Frames	A count of the number of successfully transmitted frames on a particular interface for which transmission is inhibited by more than one collision.
Excessive Collision Frames	A count of frames for which transmission on a particular interface fails due to excessive collisions.
Underrun Errors	The total number of frames discarded because the transmit FIFO buffer became empty during frame transmission.
GMRP Failed Registrations	The number of times attempted GMRP registrations could not be completed.
GVRP Failed Registrations	The number of times attempted GVRP registrations could not be completed.
Advanced - Receive section:	
Total Packets Received Not Forwarded	The number of inbound packets which were chosen to be discarded to prevent them from being delivered to a higher-layer protocol, even though no errors had been detected. One possible reason for discarding such a packet is to free up buffer space.
Total Packets Received With MAC Errors	The total number of inbound packets that contained errors preventing them from being delivered to a higher-layer protocol.
Overruns	The total number of frames discarded as this port was overloaded with incoming packets, and could not keep up with the inflow.
Alignment Errors	The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had a bad Frame Check Sequence (FCS) with a non-integral number of octets.
Jabbers Received	The total number of packets received that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error). Note that this definition of jabber is different than the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition where any packet exceeds 20 ms. The allowed range to detect jabber is between 20 ms and 150 ms.
Fragments Received	The total number of packets received that were less than 64 octets in length with ERROR CRC (excluding framing bits but including FCS octets).
Undersize Received	The total number of packets received that were less than 64 octets in length with GOOD CRC (excluding framing bits but including FCS octets).
Unacceptable Frame Type	The number of frames discarded from this interface due to being a frame type that the interface cannot accept.
Time Since Counters Last Cleared	The amount of time in days, hours, minutes, and seconds, that has passed since the statistics for this interface were last reset.

Use the buttons to perform the following tasks:


- Click **Clear Counters** to clear all the counters. This resets all statistics for this port to the default values.
- Click **Clear All Counters** to clear all the counters for all ports on the switch. The button resets all statistics for all ports to default values.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Network Port DHCPv6 Client Statistics

The *Network Port DHCPv6 Client Statistics* page displays the DHCPv6 client statistics values for the network interface. The DHCPv6 client on the device exchanges several different types of UDP messages with one or more network DHCPv6 servers during the process of acquiring address, prefix, or other relevant network configuration information from the server. The values indicate the various counts that have accumulated since they were last cleared.

To access the page, click **System** > **Statistics** > **System** > **Network DHCPv6** in the navigation menu.

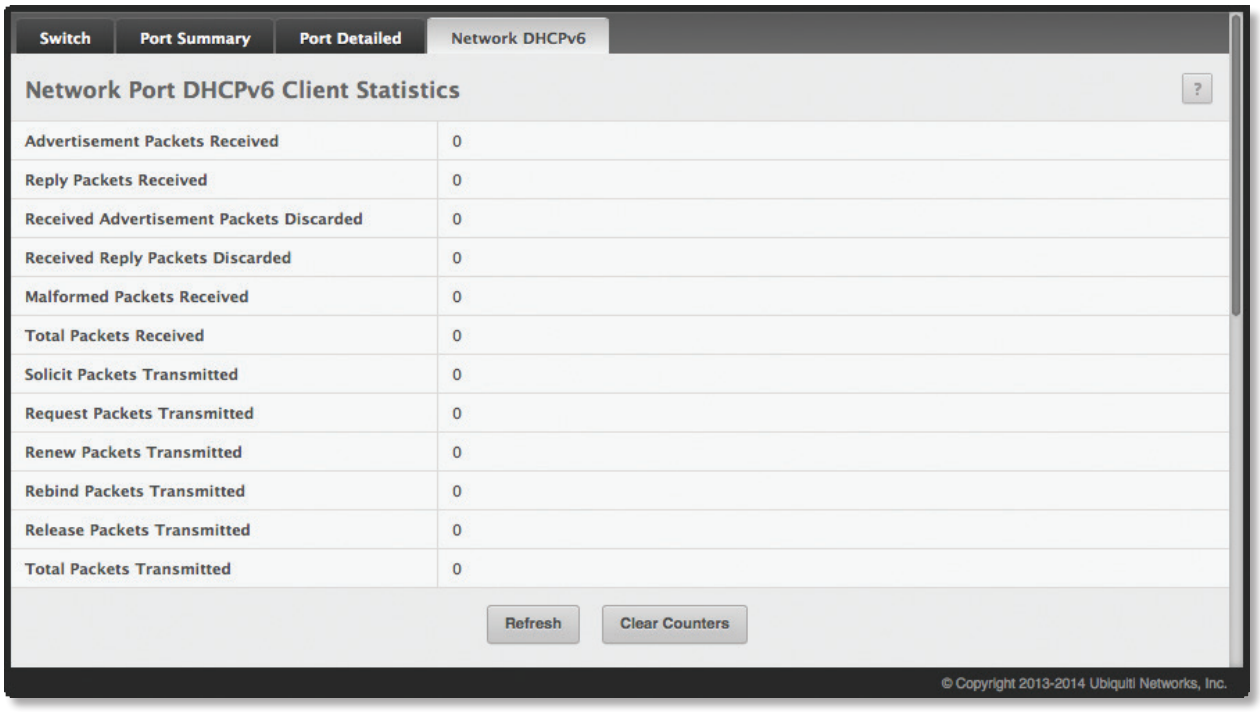

Network Port DHCPv6 Client Statistics

Network Port DHCPv6 Client Statistics Fields

Field	Description
Advertisement Packets Received	Number of DHCPv6 advertisement messages received from one or more DHCPv6 servers in response to the client's solicit message.
Reply Packets Received	Number of DHCPv6 reply messages received from one or more DHCPv6 servers in response to the client's request message.
Received Advertisement Packets Discarded	Number of DHCPv6 advertisement messages received from one or more DHCPv6 servers to which the client did not respond.
Received Reply Packets Discarded	Number of DHCPv6 reply messages received from one or more DHCPv6 servers to which the client did not respond.
Malformed Packets Received	Number of messages received from one or more DHCPv6 servers that were improperly formatted.
Total Packets Received	Total number of messages received from all DHCPv6 servers.
Solicit Packets Transmitted	Number of DHCPv6 solicit messages the client sent to begin the process of acquiring network information from a DHCPv6 server.
Request Packets Transmitted	Number of DHCPv6 request messages the client sent in response to a DHCPv6 server's advertisement message.
Renew Packets Transmitted	Number of renew messages the DHCPv6 client has sent to the server to request an extension of the lifetime of the information provided by the server. This message is sent to the DHCPv6 server that originally assigned the addresses and configuration information.
Rebind Packets Transmitted	Number of rebind messages the DHCPv6 client has sent to any available DHCPv6 server to request an extension of its addresses and an update to any other relevant information. This message is sent only if the client does not receive a response to the renew message.

Network Port DHCPv6 Client Statistics Fields (Continued)

Field	Description
Release Packets Transmitted	Number of release messages the DHCPv6 client has sent to the server to indicate that it no longer needs one or more of the assigned addresses.
Total Packets Transmitted	Total number of messages sent to all DHCPv6 servers.

Use the buttons to perform the following tasks:


- Click **Clear Counters** to clear all the counters. This resets all statistics for this port to the default values.
- Click **Refresh** to refresh the data on the screen and display the most current statistics.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Time-Based Group Statistics

Use the *Time-Based Group Statistics* page to define criteria for collecting time-based statistics for interface traffic. The time-based statistics can be useful for troubleshooting and diagnostics purposes. The statistics application uses the system clock for time-based reporting, so it is important to configure the system clock (manually or through SNTP) before using this feature.

To access the page, click **System** > **Statistics** > **Time Based** > **Group** in the navigation menu.

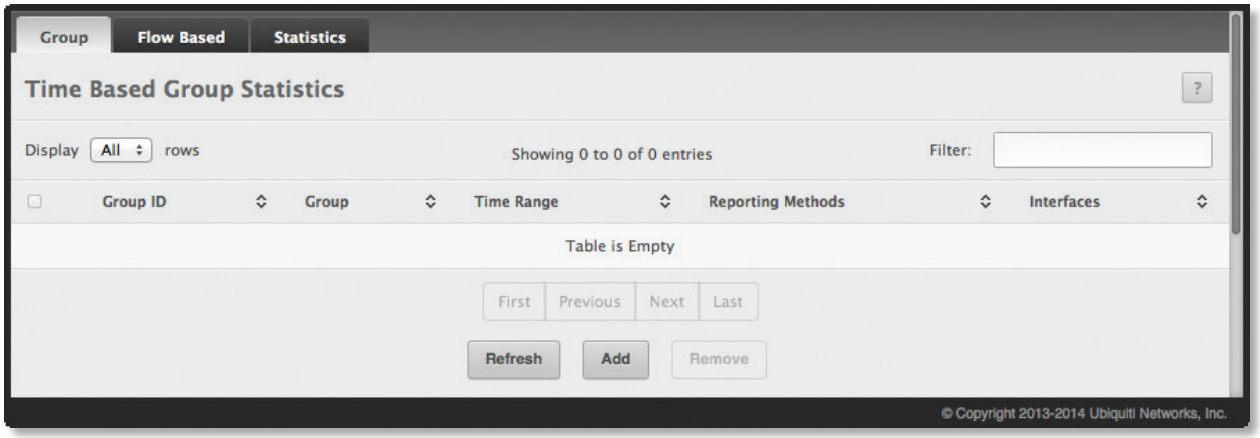

Time-Based Group Statistics

Time-Based Group Statistics Fields

Field	Description
Group	The type of traffic statistics to collect for the group, which is one of the following: • **Received** The number of packets received on the interfaces within the group. • **Received Errors** The number of packets received with errors on the interfaces within the group. • **Transmitted** The number of packets transmitted by the interfaces within the group. • **Received Transmitted** The number of packets received and transmitted by the interfaces within the group. • **Port Utilization** The percentage of total bandwidth used by the port within the specified time period. • **Congestion** The percentage of time within the specified time range that the ports experienced congestion.
Time Range	The name of the periodic or absolute time range to use for data collection. The time range is configured using the *Time Range Entry Summary* page (see **"Time Range Entry Configuration" on page 111**). The time range must be configured on the system before the time-based statistics can be collected.

Time-Based Group Statistics Fields (Continued)

Field	Description
Reporting Methods	The methods for reporting the collected statistics at the end of every configured time range interval. The available options are: • **None** The statistics are not reported to the console or an external server. They can be viewed only by using the EdgeSwitch UI or by issuing a CLI command. • **Console** The statistics are displayed on the console. • **E-Mail** The statistics are sent to an e-mail address. The SNTP server and e-mail address information is configured by using the appropriate Email Alerts pages. • **Syslog** The statistics are sent to a remote syslog server. The syslog server information is configured on the Logging Hosts page.
Interfaces	The interface or interfaces on which data is collected. To select multiple interfaces when adding a new group, press and hold CTRL, and then click each interface to include in the group.

Use the buttons to perform the following tasks:


- To add a set of time-based traffic group statistics to collect, click **Add**, configure the desired settings, and then click **Submit** to apply the changes.
- To delete one or more time-based statistics groups, select each entry to delete and click **Remove**.
- Click **Refresh** to refresh the data on the screen with the present state of the data in the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Time-Based Flow Statistics

Use this page to define criteria for collecting time-based statistics for specific traffic flows. The statistics include a per-interface hit count based on traffic that meets the match criteria configured in a rule for the interfaces included in the rule. The hit count statistics are collected only during the specified time range. The statistics application uses the system clock for time-based reporting. Configure the system clock (manually or through SNTP) before using the time-based statistics feature.

To access the *Time-Based Flow Statistics* page, click **System** > **Statistics** > **Time Based** > **Flow Based** in the navigation menu.

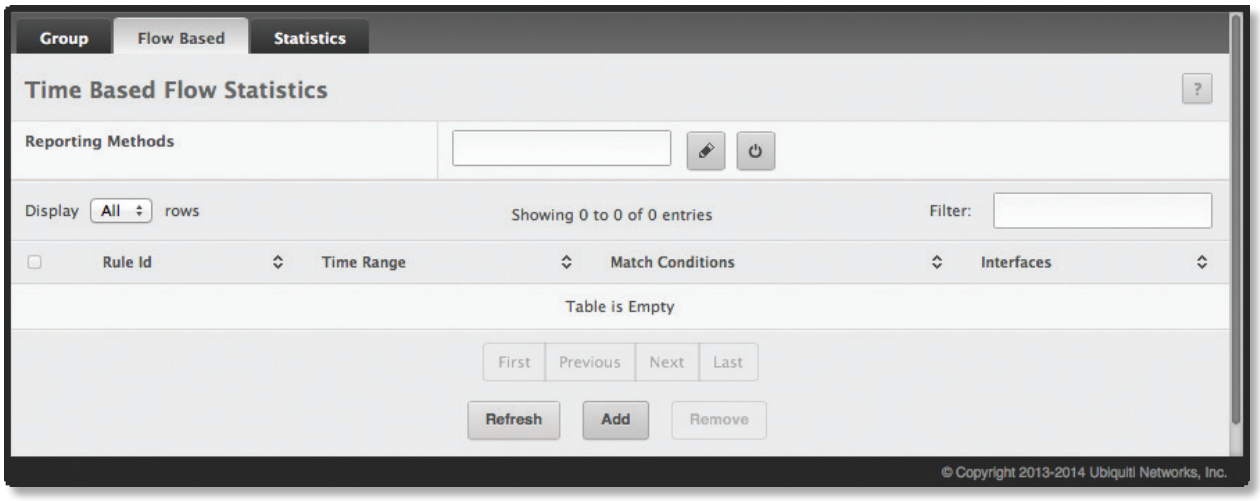

Time-Based Flow Statistics

Time-Based Flow Statistics Fields

Field	Description
Reporting Methods	The methods for reporting the collected statistics at the end of every configured interval: • **None** The statistics are not reported to the console or an external server. They can be viewed only by using the EdgeSwitch UI or by issuing a CLI command. • **Console** The statistics are displayed on the console. • **E-Mail** The statistics are sent to an e-mail address. The SNTP server and e-mail address information is configured by using the appropriate *Email Alerts* pages. • **Syslog** The statistics are sent to a remote syslog server. The syslog server information is configured on the *Logging Hosts* page. To change the reporting methods for all flow-based statistics rules, click this button and select one or more methods. Click this button to reset the field to the default value.
Rule Id	The number that identifies the flow-based statistics collection rule.
Time Range	The name of the periodic or absolute time range to use for data collection. The time range is configured using the *Time Range Entry Summary* page (see **"Time Range Entry Configuration" on page 111**). The time range must be configured on the system before the time-based statistics can be collected.
Match Conditions	The criteria that a packet must meet to match the rule.
Interfaces	The interface or interfaces on which the flow-based rule is applied. Only traffic on the specified interfaces is checked against the rule.
When you click **Add**, the *Time Based Flow Configuration* dialog box opens and allows you to configure a rule for traffic flow statistics. The match conditions are optional, but the rule must specify at least one match condition. The match conditions are as follows:	
Match All	Select this option to indicate that all traffic matches the rule and is counted in the statistics. This option is exclusive to all other match criteria, so if *Match All* is selected, no other match criteria can be configured.
Source IP	The source IP address to match in the IPv4 packet header.
Destination IP	The destination IP address to match in the IPv4 packet header.
Source MAC	The source MAC address to match in the ingress frame header.
Destination MAC	The destination MAC address to match in the ingress frame header.
Source TCP Port	The TCP source port to match in the TCP header.
Destination TCP Port	The TCP destination port to match in the TCP header.
Source UDP Port	The UDP source port to match in the UDP header.
Destination UDP Port	The UDP destination port to match in the UDP header.

Use the buttons to perform the following tasks:


- To add a rule and define criteria for flow-based statistics that are collected within a time range, click **Add**. In the *Time Based Flow Configuration* dialog box, configure the settings, and then click **Submit** to apply the changes.
- To delete one or more flow-based rules for time-based statistics, select each entry to delete and click **Remove**.
- Click **Refresh** to refresh the data on the screen with the present state of the data in the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Time-Based Statistics

Use this page to view time-based statistics collected for the configured traffic groups and flow-based rules.

To access the *Time-Based Statistics* page, click **System** > **Statistics** > **Time Based** > **Statistics** in the navigation menu.

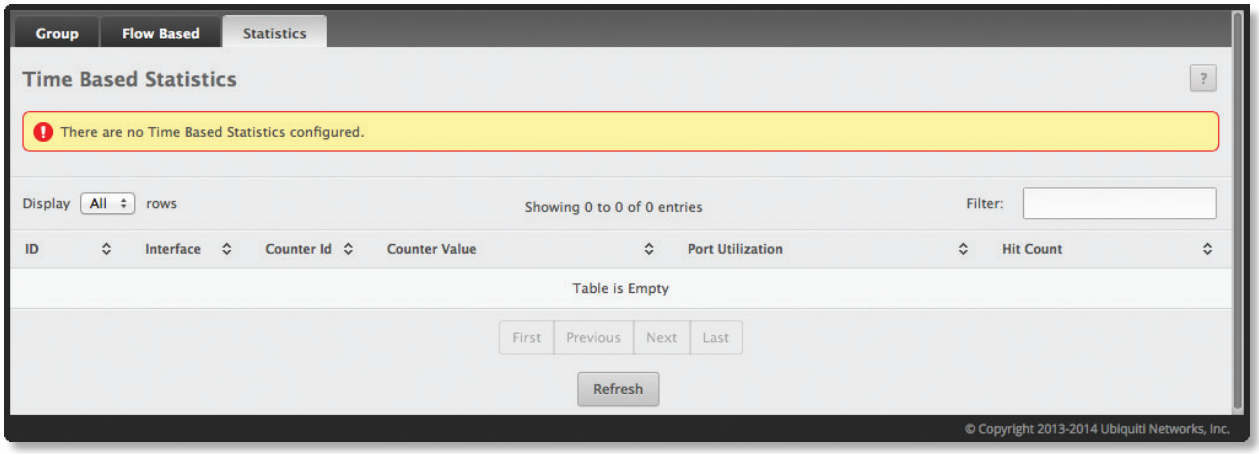

Time-Based Statistics

Time-Based Statistics Fields

Field	Description
ID	The traffic group name or flow-based rule ID associated with the rest of the statistics in the row.
Interface	The interface on which the statistics were reported.
Counter Id	For traffic group statistics, this field identifies the type of traffic.
Counter Value	For traffic group statistics, this field shows the number of packets of the type identified by the *Counter Id* field that were reported on the interface during the time range.
Port Utilization	For a port utilization traffic group, this field reports the percentage of the total available bandwidth used on the interface during the time range.
Hit Count	For flow-based statistics, this field reports the number of packets that matched the flow-based rule criteria during the time range.


Click **Refresh** to refresh the data on the screen with the present state of the data in the switch.

Using System Utilities

The System Utilities feature menu contains links to UI pages that help you configure features that help you manage the switch.

System Reset

Use the *System Reset* page to reboot the system. To access the *System Reset* page, click **System** > **Utilities** > **System Reset** in the navigation menu.

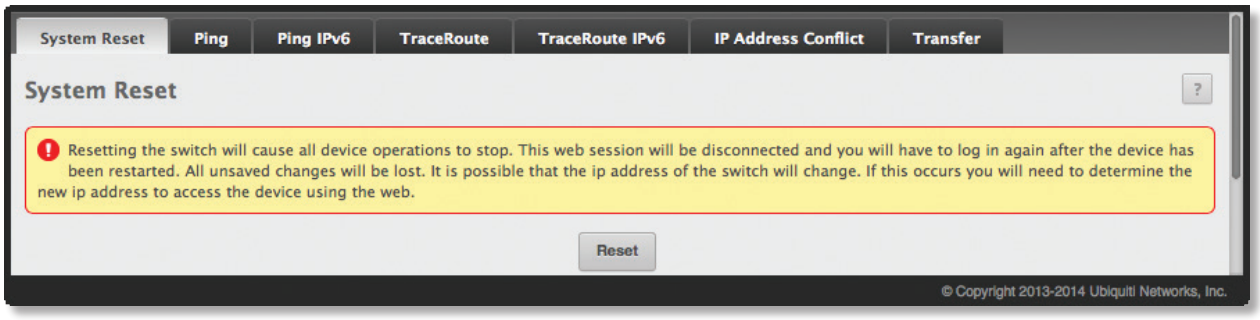


System Reset

Click **Reset** to initiate the system reset. If you have not saved the changes that you submitted since the last system reset, the changes will not be applied to the system after the reset.

Ping

Use the *Ping* page to tell the switch to send a Ping request to a specified IP address. You can use this feature to check whether the switch can communicate with a particular network host.

To access the *Ping* page, click **System** > **Utilities** > **Ping** in the navigation menu.

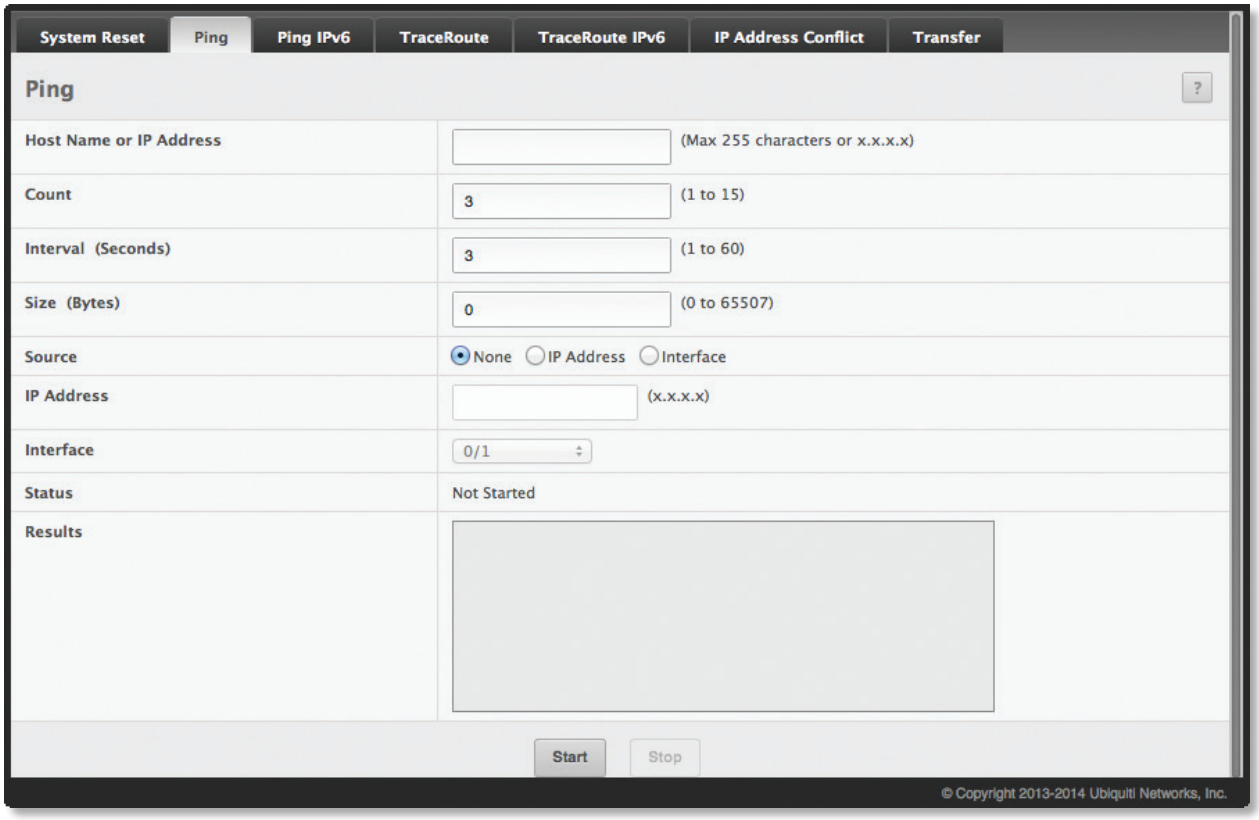

Ping

Ping Fields

Field	Description
Host Name or IP Address	Enter the IP address or the host name of the station you want the switch to ping. The initial value is blank. This information is not retained across a power cycle.
Count	The number of ICMP echo request packets to send to the host.
Interval	The number of seconds to wait between sending ping packets.
Size	The size of the ping packet, in bytes. Changing the size allows you to troubleshoot connectivity issues with a variety of packet sizes, such as large or very large packets.
Source	The source IP address or interface to use when sending the echo request packets. If source is not required, select **None** as the *Source* option.
IP Address	The source IP address to use when sending the Echo requests packets. This field is enabled when the *Source* option is set to *IP Address*.
Interface	The interface to use when sending the Echo requests packets. This field is enabled when the *Source* option is set to *Interface*.
Status	Displays the results of the ping.
Results	The results of the ping test, which includes information about the reply (if any) received from the host.


Use the buttons to perform the following tasks:

- Click **Start** to initiate the ping test. The device sends the specified number of ping packets to the host.
- Click **Stop** to interrupt the current ping test.
- Click **Refresh** to refresh the data on the screen with the present state of the data in the switch.

Ping IPv6

Use the *Ping IPv6* page to tell the device to send one or more ping requests to a specified IPv6 host. You can use the ping request to check whether the device can communicate with a particular host on an IPv6 network. A ping request is an Internet Control Message Protocol version 6 (ICMPv6) echo request packet. The information you enter on this page is not saved as part of the device configuration.

To access the *Ping IPv6* page, click **System** > **Utilities** > **Ping IPv6** in the navigation menu.

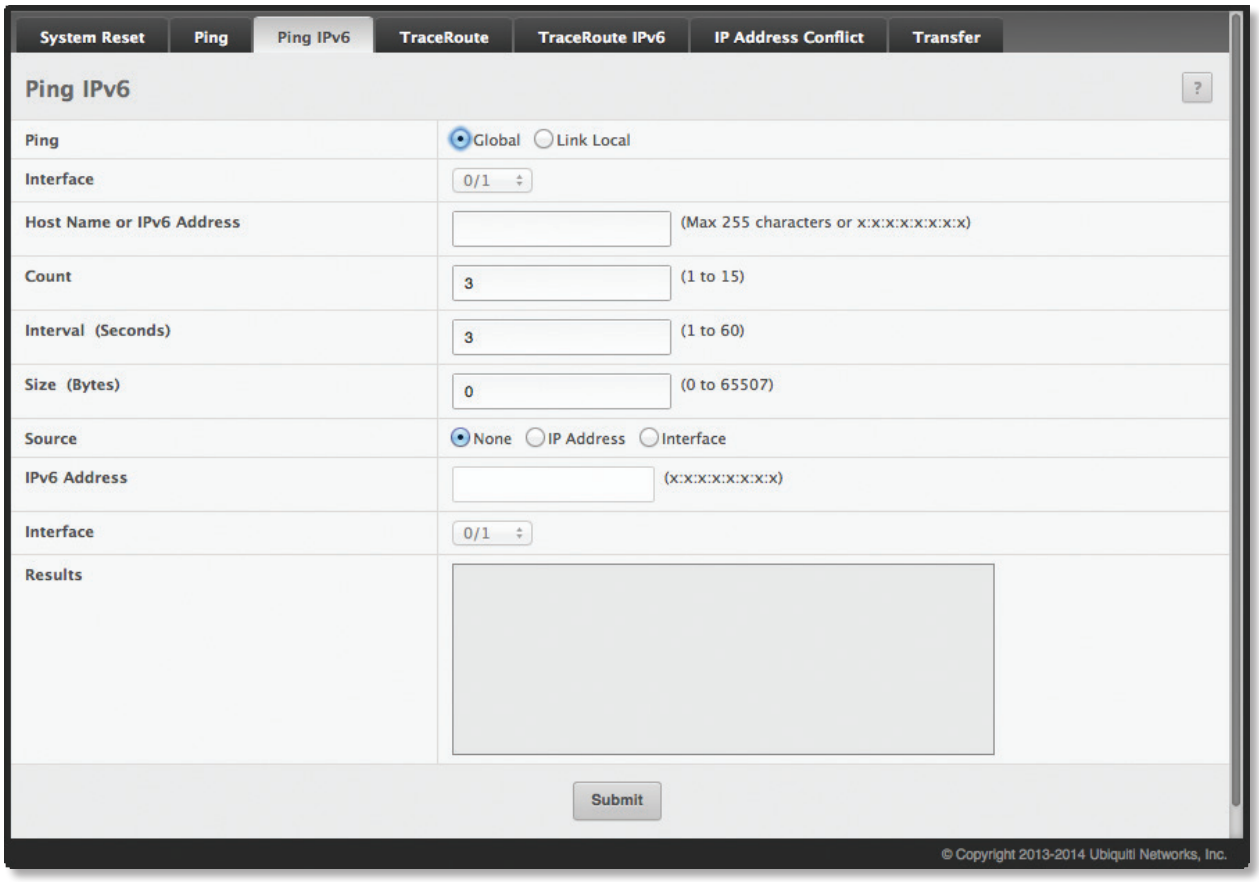

Ping IPv6

Ping IPv6 Fields


Field	Description
Ping	Select either a *Global* IPv6 address or a *Link Local* address to ping. A global address is routable over the Internet, while a link-local address is intended for communication only within the local network. Link local addresses have a prefix of *fe80::/64*.
Interface	This field is displayed only when *Link Local* is selected. Select an IPv6 interface to initiate the ping.
Host Name or IPv6 Address	Enter the global or link-local IPv6 address, or the DNS-resolvable host name of the station to ping. If the ping type is *Link Local*, you must enter a link-local address and cannot enter a host name.
Count	Enter the number of ICMP echo request packets to send to the host.
Interval	Enter the number of seconds to wait between sending ping packets.
Size	The size of the ping packet, in bytes. Changing the size allows you to troubleshoot connectivity issues with a variety of packet sizes, such as large or very large packets.
Source	The source IP address or interface to use when sending the echo request packets. If source is not required, select **None** as the *Source* option.
IPv6 Address	The source IPv6 address to use when sending the Echo requests packets. This field is enabled when the *Source* option is set to *IP Address*.
Interface	The interface to use when sending the Echo requests packets. This field is enabled when the *Source* option is set to *Interface*.
Results	The results of the ping test, which includes information about the reply (if any) received from the host.

Click **Submit** to send the specified number of pings. The results are displayed in the *Results* box.

TraceRoute

Use this page to determine the Layer-3 path a packet takes from the device to a specific IP address or hostname. When you initiate the traceroute command by clicking the **Start** button, the device sends a series of traceroute probes toward the destination. The results list the IP address of each Layer-3 device a probe passes through until it reaches its destination – or fails to reach its destination and is discarded. The information you enter on this page is not saved as part of the device configuration.

To access the *TraceRoute* page, click **System** > **Utilities** > **TraceRoute** in the navigation menu.

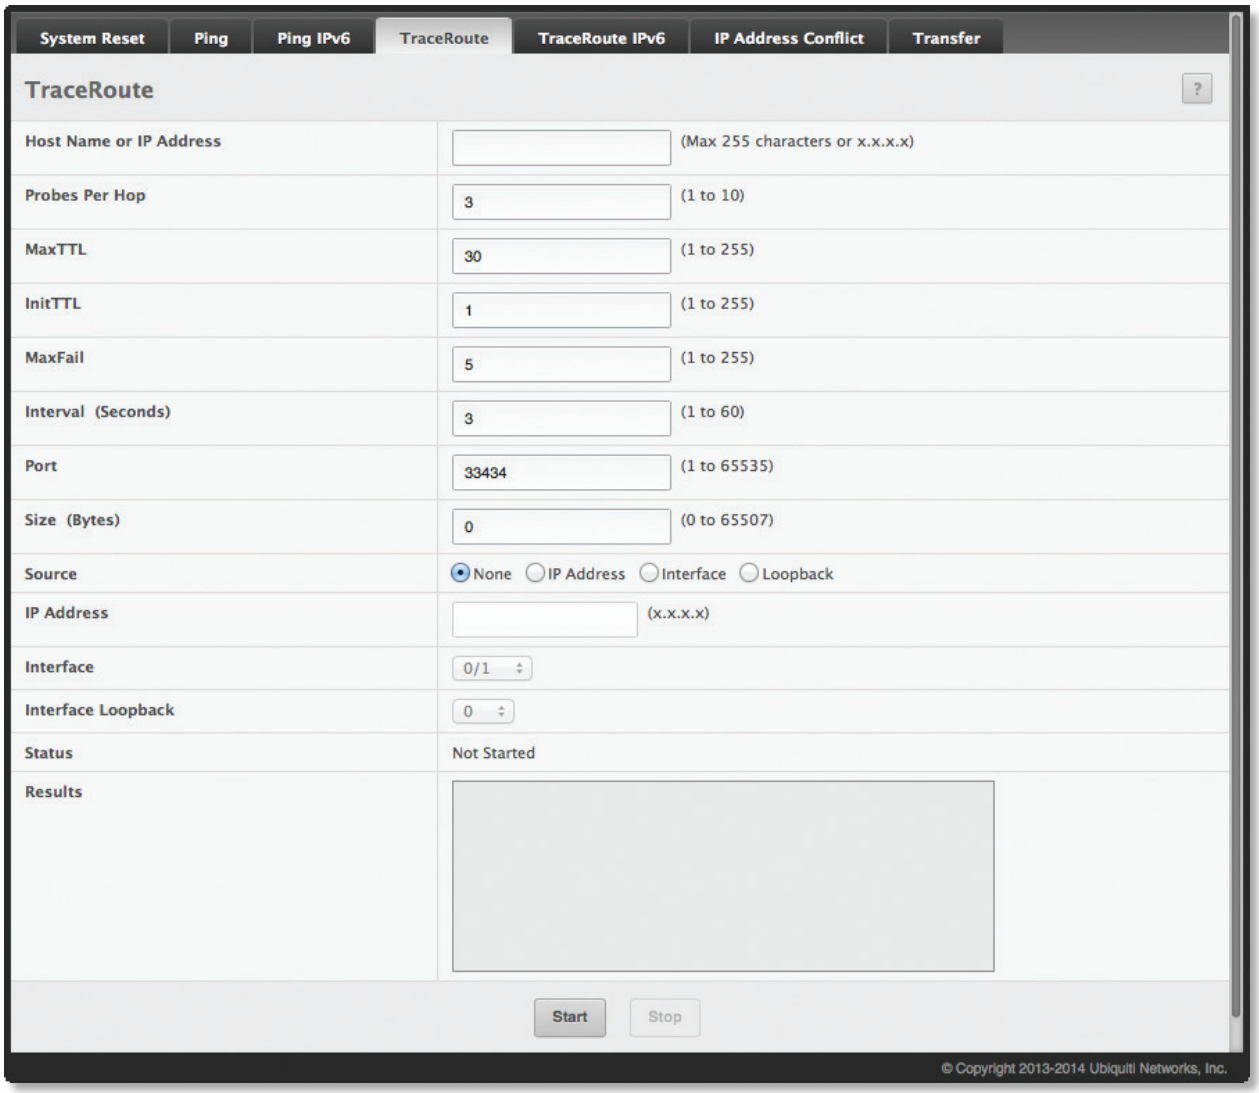

TraceRoute

Traceroute Fields

Field	Description
Host Name or IP Address	The DNS-resolvable hostname or IP address of the system to attempt to reach.
Probes Per Hop	Traceroute works by sending UDP packets with increasing Time-To-Live (TTL) values. Specify the number of probes sent with each TTL.
MaxTTL	The maximum Time-To-Live (TTL). The traceroute terminates after sending probes that can be Layer-3 forwarded this number of times. If the destination is further away, the traceroute will not reach it.
InitTTL	The initial Time-To-Live (TTL). This value controls the maximum number of Layer-3 hops that the first set of probes may travel.

Traceroute Fields (Continued)

Field	Description
MaxFail	The number of consecutive failures that terminate the traceroute. If the device fails to receive a response for this number of consecutive probes, the traceroute terminates.
Interval	The number of seconds to wait between sending probes.
Port	The UDP destination port number to be used in probe packets. The port number should be a port that the target host is not listening on, so that when the probe reaches the destination, it responds with an *ICMP Port Unreachable* message.
Size	The size of probe payload in bytes.
Source	Select *None*, *IP Address*, or *Interface* as a source.
IP Address	When the selected *Source* is *IP Address*, specify the IP address to use as the source interface.
Interface	When the selected *Source* is *Interface*, select the physical port to use as the source interface.
Status	The current status of the traceroute, which can be: • **Not Started** The traceroute has not been initiated since viewing the page. • **In Progress** The traceroute has been initiated and is running. • **Stopped** The traceroute was interrupted by clicking **Stop**. • **Done** The traceroute has completed, and information about the traceroute is displayed in the *Results* area.
Results	Displays the results of the traceroute.


Use the buttons to perform the following tasks:

- Click **Start** to initiate the traceroute.
- Click **Stop** to interrupt the running traceroute.
- Click **Refresh** to refresh the data on the screen with the present state of the data in the switch.

IP Address Conflict Detection

Use the *IP Address Conflict Detection* page to determine whether the IP address configured on the device is the same as the IP address of another device on the same LAN (or on the Internet, for a routable IP address) and to help you resolve any existing conflicts. An IP address conflict can make both this system and the system with the same IP address unusable for network operation.

To access the *IP Address Conflict Detection* page, click **System** > **Utilities** > **IP Address Conflict** in the navigation menu.

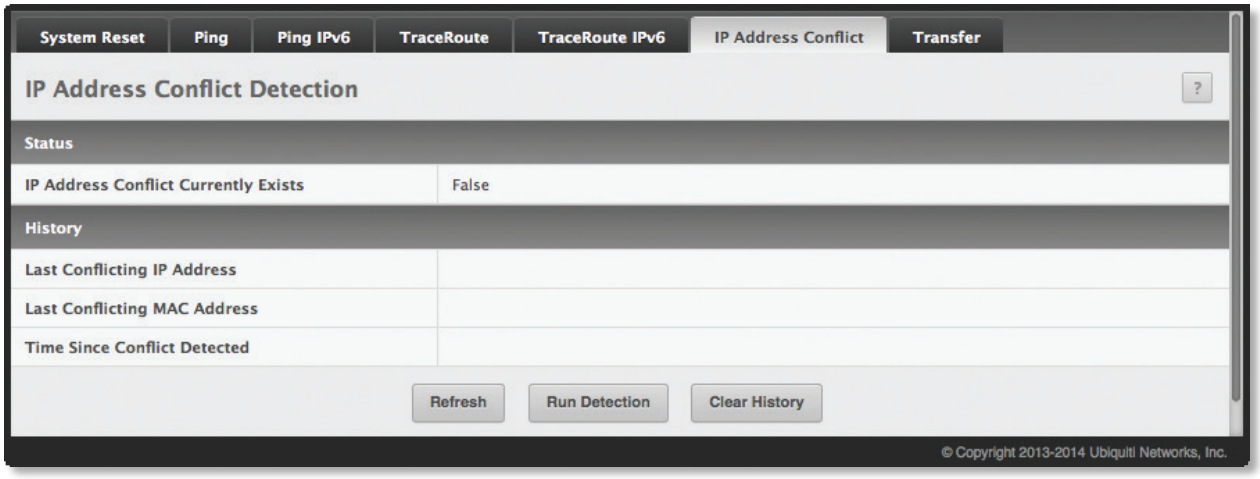

IP Address Conflict Detection

IP Address Conflict Detection Fields

Field	Description
IP Address Conflict Currently Exists	Indicates whether a conflicting IP address has been detected since this status was last reset. • **False** No conflict detected (the subsequent fields on this page display as N/A). • **True** Conflict was detected (the subsequent fields on this page show the relevant information).
Last Conflicting IP Address	The device interface IP address that is in conflict. If multiple conflicts were detected, only the most recent occurrence is displayed.
Last Conflicting MAC Address	The MAC address of the remote host associated with the IP address that is in conflict. If multiple conflicts are detected, only the most recent occurrence is displayed.
Time Since Conflict Detected	The elapsed time (displayed in days, hours, minutes, and seconds) since the last address conflict was detected, provided that you have not yet clicked **Clear History**.


Use the buttons to perform the following tasks:

- Click **Run Detection** to activate the IP address conflict detection operation in the system.
- Click **Clear History** to reset the IP address conflict detection status information that was last seen by the device.
- Click **Refresh** to refresh the data on the screen with the present state of the data in the switch.

File Transfer

Use the *File Transfer* page to upload files from the device to a remote system and to download files from a remote system to the device.

To access the *File Transfer* page, click **System** > **Utilities** > **Transfer** in the navigation menu.

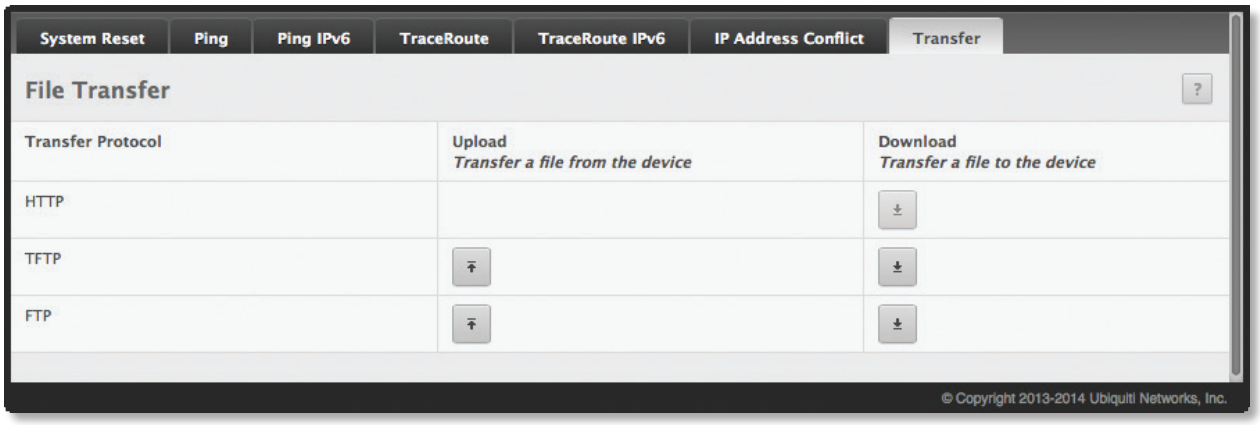

File Transfer

File Transfer Fields

Field	Description
Transfer Protocol	The protocol to use to transfer the file. Files can be transferred from the device to a remote system using *TFTP* or *FTP*. Files can be transferred from a remote system to the device using *HTTP*, *TFTP*, or *FTP*.
Upload	To transfer a file from the device to a remote system using TFTP or FTP, click in the same row as the desired transfer protocol. The *File Upload* window appears. Configure the information for the file transfer (described below), and click **Begin Transfer** to begin the transfer.
Download	To transfer a file from a remote system to the device using HTTP, TFTP or FTP, click in the same row as the desired transfer protocol. The *File Download* window appears. Configure the information for the file transfer (described below), and click **Begin Transfer** to begin the transfer.

Uploading Files

When you click , the *File Upload* window appears. The following information describes the fields in the *File Upload* window for all protocols.

File Upload Fields

Field	Description
File Type	Specify the type of file to transfer from the device to a remote system. • **Code** Select this option to transfer an image. • **Configuration** Select this option to transfer a copy of the stored configuration file (startup-config) to a remote system. • **Backup Configuration** Select this option to transfer a copy of the stored backup configuration (backup-config) from the device to a remote system. • **Script File** Select this option to transfer a custom text configuration script from the device to a remote system. • **CLI Banner** Select this option to transfer the file containing the text to be displayed on the CLI before the login prompt to a remote system. • **Crash Log** Select this option to transfer the system crash log to a remote system. • **Operational Log** Select this option to transfer the system operational log to a remote system. • **Startup Log** Select this option to transfer the system startup log to a remote system. • **Trap Log** Select this option to transfer the system trap records to a remote system. • **Factory Defaults** Select this option to transfer the factory default configuration file to a remote system. • **Error Log** Select this option to transfer the system error (persistent) log, which is also known as the event log, to a remote system. • **Buffered Log** Select this option to transfer the system buffered (in-memory) log to a remote system.
Image	If the selected *File Type* is *Code*, specify whether to transfer the *Active* or *Backup* image to a remote system.
Server Address	Specify the IPv4 address, IPv6 address, or DNS-resolvable hostname of the remote server that will receive the file.
File Path	Specify the path on the server where you want to put the file.
File Name	Specify the name that the file will have on the remote server.
User Name	For FTP transfers, if the server requires authentication, specify the user name for remote login to the server that will receive the file.
Password	For FTP transfers, if the server requires authentication, specify the password for remote login to the server that will receive the file.
Progress	Represents the completion percentage of the file transfer. The file transfer begins after you complete the required fields and click to the right of this field.
Digital Signature Verification	For *Code* and *Configuration* file types this option, when checked, will verify the file download with the digital signature.
Status	Provides information about the status of the file transfer.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Downloading Files

When you click , the *File Download* window appears. The following information describes the fields in the *File Download* window for all protocols.

File Download Fields

Field	Description
File Type	Specify the type of file to transfer to the device: • **Code** Select this option to transfer a new image to the device. The code file is stored as the backup image. • **Configuration** Select this option to update the stored configuration file (startup-config). If the file has errors, the update will be stopped. • **Script File** Select this option to transfer a text-based configuration script to the device. You must use the command-line interface (CLI) to validate and activate the script. • **CLI Banner** Select this option to transfer the CLI banner file to the device. This file contains the text to be displayed on the CLI before the login prompt. • **IAS Users** Select this option to transfer an Internal Authentication Server (IAS) users database file to the device. The IAS user database stores a list of user name and (optional) password values for local port-based user authentication. • **SSH-1 RSA Key File** Select this option to transfer an SSH-1 Rivest-Shamir-Adleman (RSA) key file to the device. SSH key files contain information to authenticate SSH sessions for remote CLI-based access to the device. • **SSH-2 RSA Key PEM File** Select this option to transfer an SSH-2 Rivest-Shamir-Adleman (RSA) key file (PEM Encoded) to the device. • **SSH-2 DSA Key PEM File** Select this option to transfer an SSH-2 Digital Signature Algorithm (DSA) key file (PEM Encoded) to the device. • **SSL Trusted Root Certificate PEM File** Select this option to transfer an SSL Trusted Root Certificate file (PEM Encoded) to the device. SSL files contain information to encrypt, authenticate, and validate HTTPS sessions. • **SSL Server Certificate PEM File** Select this option to transfer an SSL Server Certificate file (PEM Encoded) to the device. • **SSL DH Weak Encryption Parameter PEM File** Select this option to transfer an SSL Diffie-Hellman Weak Encryption Parameter file (PEM Encoded) to the device. • **SSL DH Strong Encryption Parameter PEM File** Select this option to transfer an SSL Diffie-Hellman Strong Encryption Parameter file (PEM Encoded) to the device. **Note:** • To download SSH key files, SSH must be administratively disabled, and there can be no active SSH sessions. • To download SSL related files, HTTPS must be administratively disabled.
Select File	If the *Transfer Protocol* is set to *HTTP*, browse to the directory where the file is located and select the file to transfer to the device. This field is not present if the *Transfer Protocol* is **TFTP** or **FTP**.
Server Address	For TFTP or FTP transfers, specify the IPv4 address, IPv6 address, or DNS-resolvable hostname of the remote server.
File Path	For TFTP or FTP transfers, specify the path on the server where the file is located.
File Name	For TFTP or FTP transfers, specify the name of the file you want to transfer to the device.
User Name	For FTP transfers, if the server requires authentication, specify the user name for remote login to the server where the file resides.
Password	For FTP transfers, if the server requires authentication, specify the password for remote login to the server that will receive the file.
Progress	Represents the completion percentage of the file transfer. The file transfer begins after you complete the required fields and click to the right of this field.
Digital Signature Verification	For *Code* and *Configuration* file types this option, when checked, will verify the file download with the digital signature.
Status	Provides information about the status of the file transfer.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

AutoInstall


The AutoInstall feature enables the configuration of a switch automatically whenever the device is turned on and no configuration file is found in device storage during the boot process. By communicating with a DHCP server, AutoInstall obtains an IP address for the switch and an IP address for a TFTP server. AutoInstall attempts to download a configuration file from the TFTP server and install it on the switch.

The DHCP server that the switch communicates with must provide the following information:

- The IP address and subnet mask (option 1) to be assigned to the switch.
- The IP address of a default gateway (option 3), if needed for IP communication.
- The identification of the TFTP server from which to obtain the boot file. This is given by any of the following fields, in the priority shown (highest to lowest):
  - The sname field of the DHCP reply.
  - The hostname of the TFTP server (option 66). Either the TFTP address or name is specified – not both – in most network configurations. If a TFTP hostname is given, a DNS server is required to translate the name to an IP address.
  - The IP address of the TFTP server (option 150).
  - The address of the TFTP server supplied in the siaddr field.
  - The name of the configuration file (boot file or option 67) to be downloaded from the TFTP server. **The boot file name must have a file type of *.cfg**.
- The IP addresses of DNS name servers (option 6). The IP addresses of DNS name servers should be returned from the DHCP server only if the DNS server is in the same LAN as the switch performing AutoInstall. A DNS server is needed to resolve the IP address of the TFTP server if only the "sname" or option 66 values are returned to the switch.

After obtaining IP addresses for both the switch and the TFTP server, the AutoInstall feature attempts to download a host-specific configuration file using the boot file name specified by the DHCP server. If the switch fails to obtain the file, it will retry indefinitely.

To display the *AutoInstall Configuration* page, click **System** > **Firmware**> **AutoInstall**.

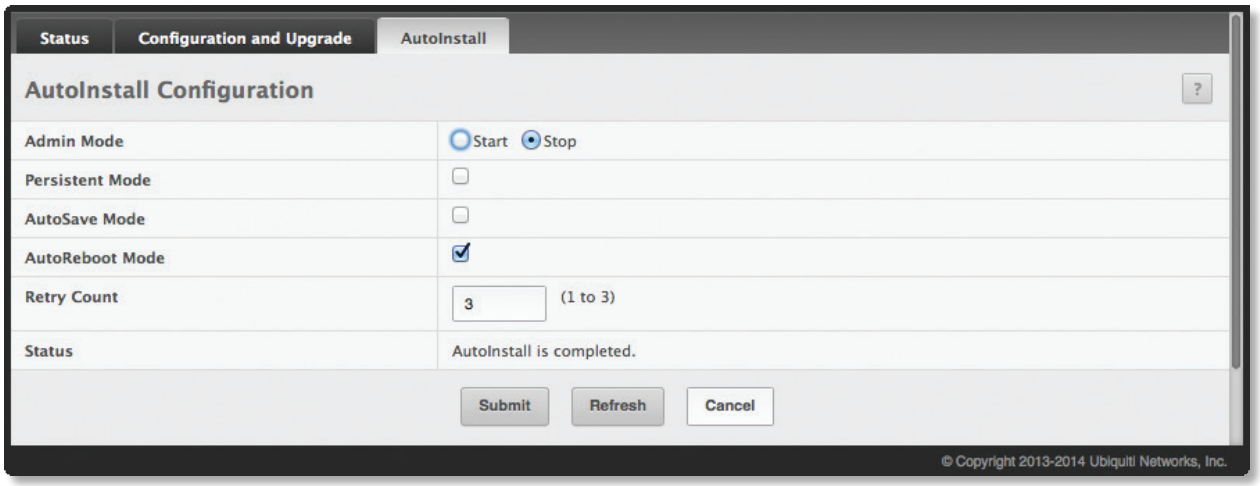

AutoInstall Configuration

Autoinstall Configuration Fields

Field	Description
Admin Mode	The current administrative mode of the AutoInstall feature: • **Start** AutoInstall is enabled, and the feature will attempt to automatically configure the device during the next boot cycle. • **Stop** AutoInstall is disabled. The automatic process will begin only if no configuration file is located during the next boot cycle.
Persistent Mode	If this option is selected, the settings you configure on this page are automatically saved to persistent memory in the startup-config file when you apply the changes. If this option is cleared, the device treats these settings like any other applied changes (i.e., the changes are not retained across a reboot unless you save the configuration).
AutoSave Mode	If this option is selected, the downloaded configuration is automatically saved to persistent storage. If this option is cleared, you must explicitly save the downloaded configuration in non-volatile memory for the configuration to be available for the next reboot.
AutoReboot Mode	If this option is selected, the switch automatically reboots after a new image is successfully downloaded and makes the downloaded image the active image. If this option is cleared, the device continues to boot with the current image. The downloaded image will not become the active image until the device reboots.
Retry Count	When attempting to retrieve the DHCP-specified configuration file, this value represents the number of times the TFTP client on the device tries to use unicast requests before reverting to broadcast requests.
Status	The current status of the AutoInstall process.

Use the buttons to perform the following tasks:

- If you change any settings on this page, click **Submit** to apply the changes.
- To reset the fields to their original values, click **Cancel**.
- Click **Refresh** to display the most recently configured AutoInstall state from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.


Managing SNMP Traps

The pages in the Trap Manager folder allow you to view and configure information about SNMP traps the system generates.

System Trap Log

Use the *System Trap Log* page to view the entries in the trap log.

To access the *System Trap Log* page, click **System** > **Advanced Configuration** > **Trap Manager** > **Trap Log** in the navigation menu.

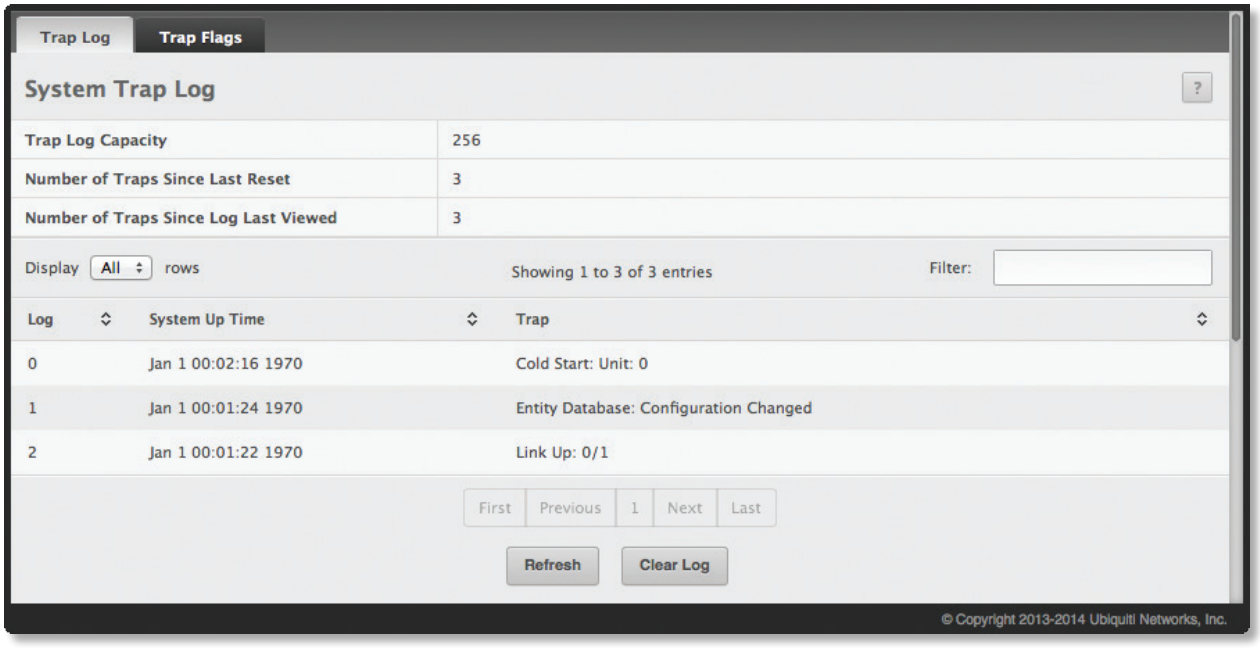

System Trap Log

System Trap Log Fields

Field	Description
Trap Log Capacity	The maximum number of traps stored in the log. If the number of traps exceeds the capacity, the entries will overwrite the oldest entries.
Number of Traps Since Last Reset	The number of traps generated since the trap log entries were last cleared.
Number of Traps Since Log Last Viewed	The number of traps that have occurred since the traps were last displayed. Displaying the traps by any method (terminal interface display, web display, upload file from switch, etc.) will cause this counter to be cleared to 0.
Log	The sequence number of this trap.
System Up Time	The time at which this trap occurred, expressed in days, hours, minutes and seconds since the last reboot of the switch.
Trap	Displays the information identifying the trap.


Use the buttons to perform the following tasks:

- Click **Clear Log** to clear all entries in the log. Subsequent displays of the log will only show new log entries.
- Click **Refresh** to refresh the data on the screen with the present state of the data in the switch.

System Trap Flags

Use the *System Trap Flags* page to enable or disable traps the switch can send to an SNMP manager. When the condition identified by an active trap is encountered by the switch, a trap message is sent to any enabled SNMP Trap Receivers, and a message is written to the trap log.

To access the page, click **System** > **Advanced Configuration** > **Trap Manager** > **Trap Flags** page.

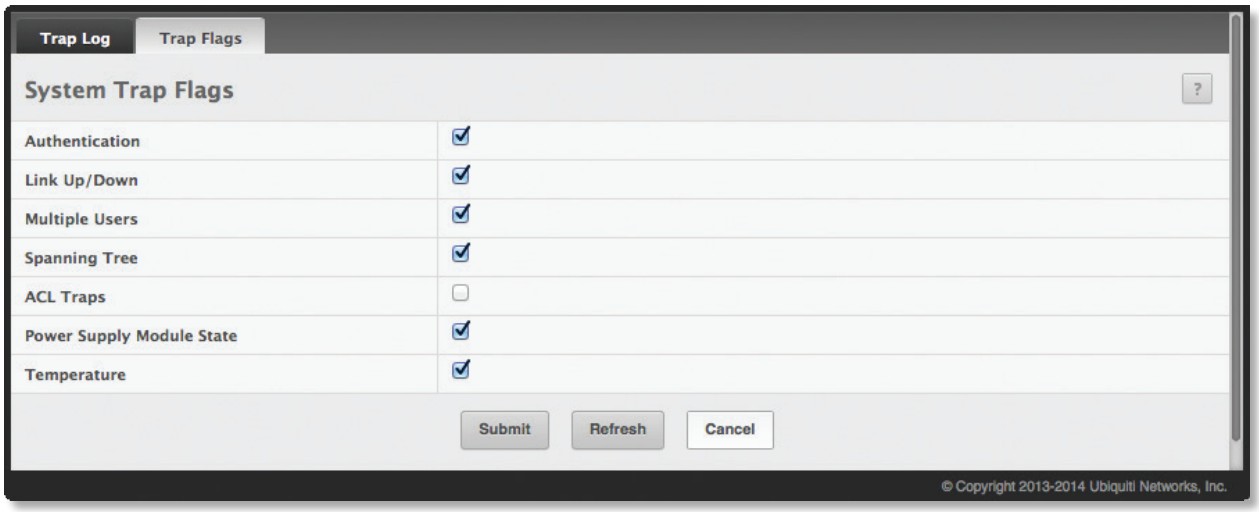

System Trap Flags

The fields available on the *System Trap Flags* page depends on the packages installed on your system. For example, if your system does not have the BGP4 package installed, the *BGP Traps* field is not available. The illustration above and the table below show the fields that are available on a system with all packages installed.

System Trap Flags Fields

Field	Description
Authentication	When selected, this option enables activation of authentication failure traps by selecting the corresponding line on the pulldown entry field. This feature is enabled by default.
Link Up/Down	When selected, this option enables activation of link status traps by selecting the corresponding line on the pulldown entry field. This feature is enabled by default.
Multiple Users	When selected, this option enables activation of multiple user traps by selecting the corresponding line on the pulldown entry field. This feature is enabled by default. This trap is triggered when the same user ID is logged into the switch more than once at the same time (either via Telnet or the serial port).
Spanning Tree	When selected, this option enables activation of spanning tree traps by selecting the corresponding line on the pulldown entry field. This feature is enabled by default.
ACL Traps	When selected, this option enables activation of ACL traps by selecting the corresponding line on the pulldown entry field. This feature is disabled by default.
Power Supply Module State	When selected, this option enables SNMP notifications when power supply events occur.
Temperature	When selected, this option enables SNMP notifications when temperature events occur.

Use the buttons to perform the following tasks:

- If you make any changes to this page, click **Submit** to apply the changes to the system.
- Click **Refresh** to refresh the data on the screen with the present state of the data in the switch.


Managing the DHCP Server

DHCP is generally used between clients (e.g., hosts) and servers (e.g., routers) for the purpose of assigning IP addresses, gateways, and other networking definitions such as DNS, NTP, and/or SIP parameters. The DHCP Server folder contains links to UI pages that define and display DHCP parameters and data.

DHCP Server Global Configuration

Use the *DHCP Server Global Configuration* page to configure DHCP global parameters.

To display the page, click **System** > **Advanced Configuration** > **DHCP Server** > **Global** in the navigation menu.

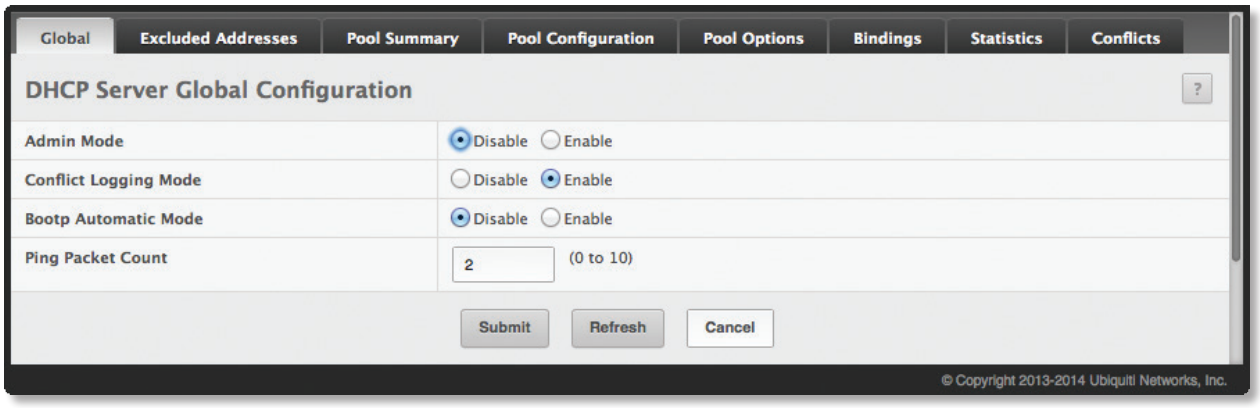

DHCP Server Global Configuration

DHCP Server Global Configuration Fields

Field	Description
Admin Mode	Used to *Enable* or *Disable* the DHCP server administrative mode. When enabled, the device can be configured to automatically allocate TCP/IP configurations for clients.
Conflict Logging Mode	Used to *Enable* or *Disable* the logging mode for IP address conflicts. When enabled, the system stores information IP address conflicts that are detected by the DHCP server.
Bootp Automatic Mode	Used to *Enable* or *Disable* the BOOTP automatic mode. When enabled, the DHCP server supports the allocation of automatic addresses for BOOTP clients. When disabled the DHCP server supports only static addresses for BOOTP clients.
Ping Packet Count	The number of packets the server sends to a pool address to check for duplication as part of a ping operation. If the server receives a response to the ping, the address is considered to be in conflict and is removed from the pool.

Use the buttons to perform the following tasks:


- If you change any settings on this page, click **Submit** to apply the changes.
- To reset the fields to their original values, click **Cancel**.
- Click **Refresh** to refresh the data on the screen with the present state of the data in the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

DHCP Server Pool Configuration

Use the *DHCP Server Pool Configuration* page to create the pools of addresses that can be assigned by the server.

To access the *DHCP Server Pool Configuration* page, click **System** > **Advanced Configuration** > **DHCP Server** > **Pool Configuration** in the navigation menu.

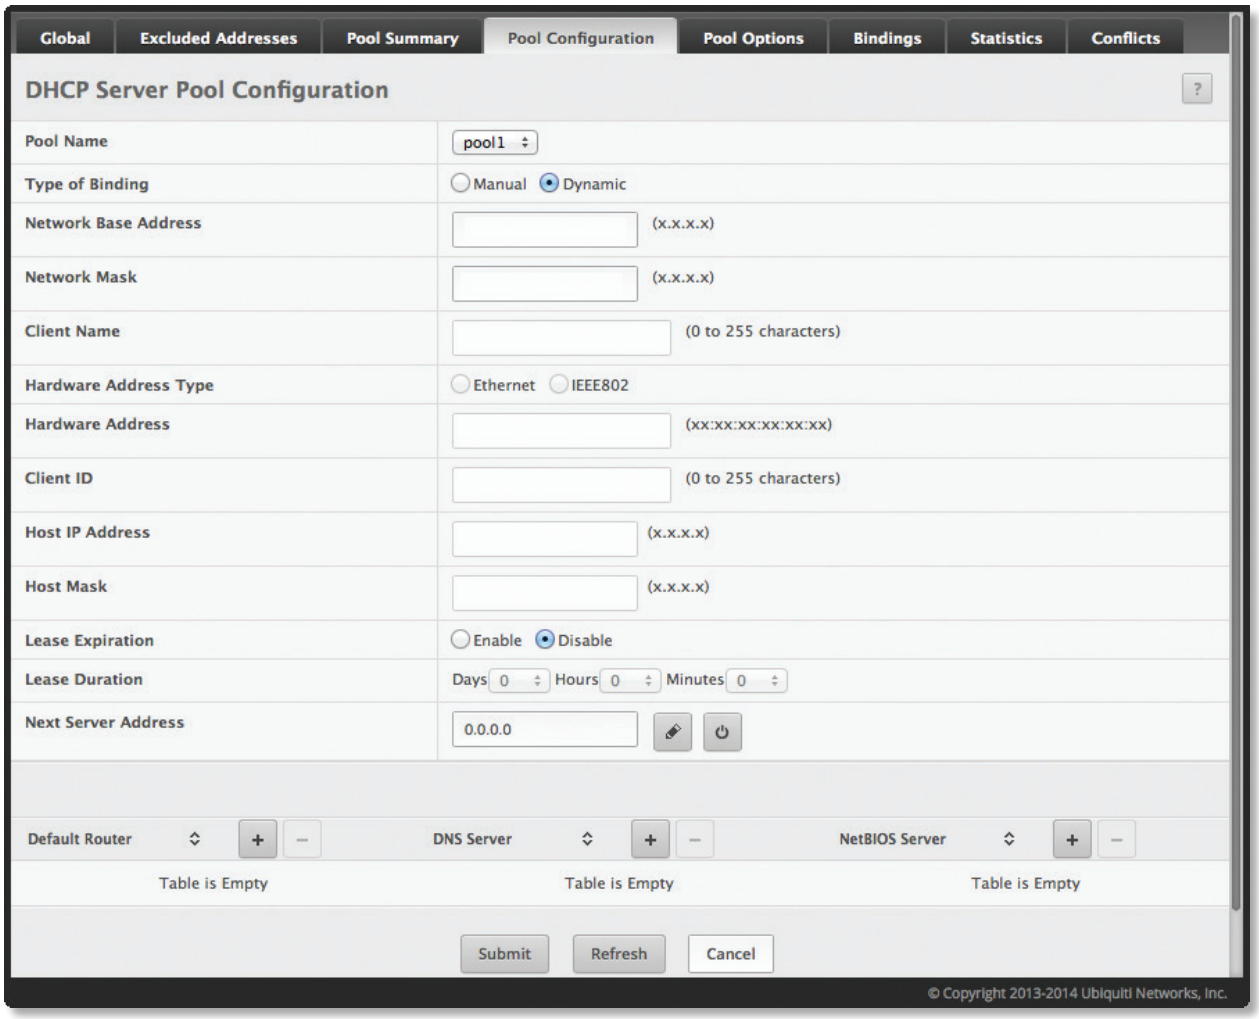

DHCP Server Pool Configuration

If you select **Dynamic** or **Manual** from the *Type of Binding* drop-down menu, the screen refreshes and a slightly different set of fields appears.

DHCP Server Pool Configuration Fields

Field	Description
Pool Name	Select the pool to configure. The menu includes all pools that have been configured on the device.
Type of Binding	Specifies the type of binding for the pool. The options are: • **Manual** You statically assign an IP address to a client based on the client's MAC address. • **Dynamic** The DHCP server can assign the client any available IP address within the pool. This type is also known as Automatic.
Network Base Address	Dynamic pools only – The network portion of the IP address. A DHCP client can be offered any available IP address within the defined network as long as it has not been configured as an excluded address.
Network Mask	Dynamic pools only – The subnet mask associated with the Network Base Address that separates the network bits from the host bits.

DHCP Server Pool Configuration Fields (Continued)

Field	Description
Client Name	Manual pools only – The system name of the client. The Client Name should not include the domain name. This field is optional.
Hardware Address Type	Manual pools only – The protocol type (*Ethernet* [default] or *IEEE802*) used by the client's hardware platform. This value is used in response to requests from BOOTP clients.
Hardware Address	Manual pools only – The MAC address of the DHCP client.
Client ID	Manual pools only – The value some DHCP clients send in the *Client Identifier* field of DHCP messages. This value is typically identical to the *Hardware Address* value. In some systems, such as Microsoft DHCP clients, the client identifier is required instead of the hardware address. If the client's DHCP request includes the client identifier, the *Client ID* field on the DHCP server must contain the same value, and the *Hardware Address Type* field must be set to the appropriate value. Otherwise, the DHCP server will not respond to the client's request.
Host IP Address	Manual pools only – The IP address to offer the client.
Host Mask	Manual pools only – This field specifies the subnet mask to be statically assigned to a DHCP client.
Lease Expiration	Indicates whether the information the server provides to the client should expire. • **Enable** Allows the lease to expire. If you select this option, you can specify the amount of time the lease is valid in the *Lease Duration* field. • **Disable** Sets an infinite lease time. For *Dynamic* bindings, an infinite lease time implies a lease period of 60 days. For a *Manual* binding, an infinite lease period never expires.
Lease Duration	The number of *Days*, *Hours*, and *Minutes* the lease is valid. This field cannot be configured if the *Lease Expiration* is disabled.
Next Server Address	The IP address of the next server the client should contact in the boot process. For example, the client might be required to contact a TFTP server to download a new image file. Use the buttons as follows: Click this button to configure the *Next Server Address* field. Click this button to reset the field to the default value.
Default Router, DNS Server, NetBIOS Server – To configure settings for one or more default routers, DNS servers, or NetBIOS servers that can be used by the client(s) in the pool, use the buttons available in the appropriate table to perform the following tasks: To add an entry to the server list, click this button and enter the IP address of the server to add. To edit the address of a configured server, click this button associated with the entry to edit and update the address. To delete an entry from the list, click this button associated with the entry to remove. To delete *all* entries from the list, click this button in the heading row.	
Default Router	Lists the IP address of each router to which the client(s) in the pool should send traffic. The default router should be in the same subnet as the client.
DNS Server	Lists the IP address of each DNS server the client(s) in the pool can contact to perform address resolution.
NetBIOS Server	Lists the IP address of each NetBIOS Windows Internet Naming Service (WINS) name server that is available for the selected pool.

Use the buttons to perform the following tasks:


- After you configure values for the DHCP address pool, click **Submit** to create the pool and apply the changes to the system.
- To reset the fields to their original values, click **Cancel**.
- To delete a pool, select the pool from the *Pool Name* drop-down menu and click **Delete**.
- Click **Refresh** to refresh the data on the screen with the present state of the data in the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

DHCP Server Pool Options

Use the *DHCP Server Pool Options* page to configure additional DHCP pool options, including vendor-defined options. DHCP options are collections of data with type codes that indicate how the options should be used. When a client broadcasts a request for information, the request includes the option codes that correspond to the information the client wants the DHCP server to supply.

To access the page, click **System** > **Advanced Configuration** > **DHCP Server** > **Pool Options** in the navigation menu. The page displays the fields shown below only if DHCP pools are configured on the system.

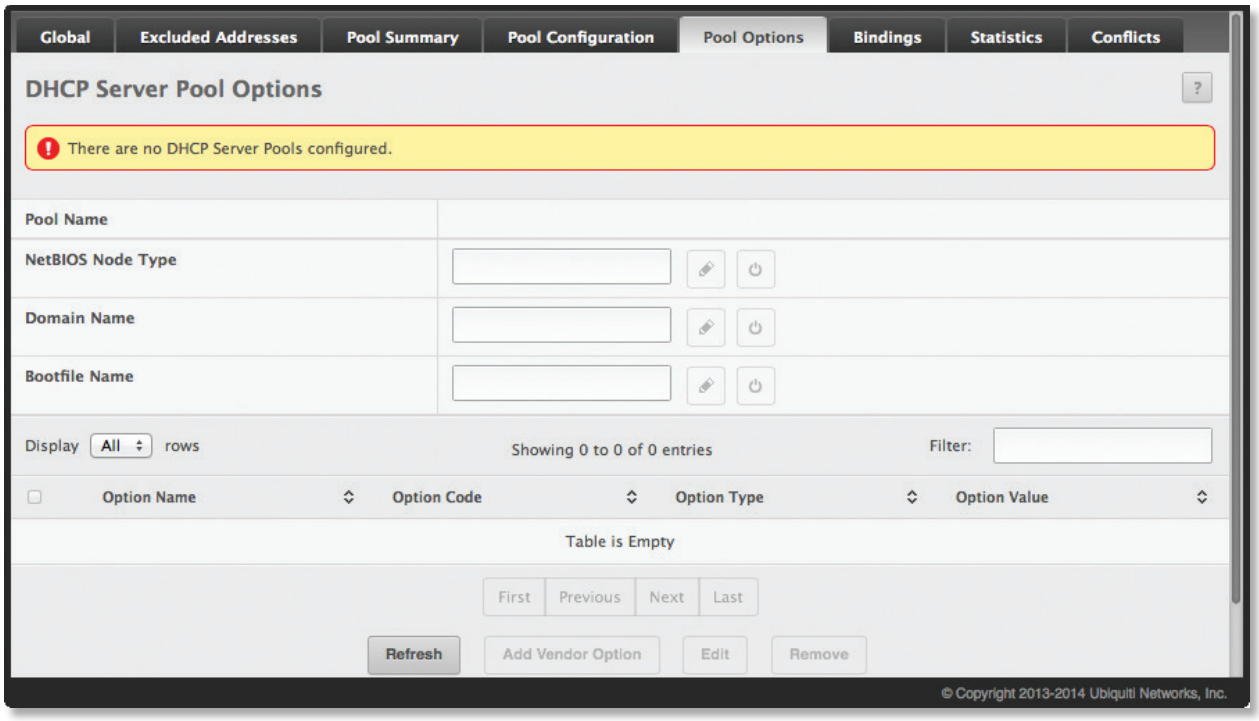

DHCP Server Pool Options

DHCP Server Pool Options Fields

Field	Description
Pool Name	Select the DHCP pool to view or configure. The menu lists all pools that are configured on the switch.
NetBIOS Node Type	The method the client should use to resolve NetBIOS names to IP addresses. The options are: • **B-Node Broadcast** Broadcast only • **P-Node Peer-to-Peer** NetBIOS name server only • **M-Node Mixed** Broadcast, then NetBIOS name server • **H-Node Hybrid** NetBIOS name server, then broadcast Use the buttons as follows: Click this button to configure the field. Click this button to reset the field to the default value.
Domain Name	The default domain name to configure for all clients in the selected pool. Use the buttons as follows: Click this button to configure the field. Click this button to reset the field to the default value.
Bootfile Name	The name of the default boot image that the client should attempt to download from a specified boot server. Use the buttons as follows: Click this button to configure the field. Click this button to reset the field to the default value.
The lower section of the page contains the option table which shows the Vendor Options that have been added to the selected pool.	
Option Name	Identifies whether the entry is a fixed option or a vendor-defined option (*Vendor*).
Option Code	The number that uniquely identifies the option.
Option Type	Specifies the type of option associated with the option code configured for the selected pool: • **ASCII** The option type is a text string. • **HEX** The option type is a hexadecimal number. • **IP Address** The option type is an IP address.
Option Value	The data associated with the *Option Code*. When adding or editing a vendor option, the field(s) available for configuring the value depend on the selected *Option Type*. If the value you configure contains invalid characters for the selected *Option Type*, the configuration cannot be applied.

Use the buttons to perform the following tasks:


- To add a vendor option, click **Add Vendor Option**, configure the available fields, and click **Submit** to apply the changes.
- To edit a vendor option, select the entry to change and click **Edit**. Change the settings as needed (*Pool Name* and *Option Code* are not configurable) and click **Submit** to apply the changes.
- To remove a vendor option, select each entry to delete and click **Remove**. You must confirm the action before the entry is deleted.
- Click **Refresh** to refresh the data on the screen with the present state of the data in the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

DHCP Server Bindings Information

Use the *DHCP Server Bindings* page to view information about the IP address bindings in the DHCP server database.

To access the *DHCP Server Bindings* page, click **System** > **Advanced Configuration** > **DHCP Server** > **Bindings** in the navigation menu.

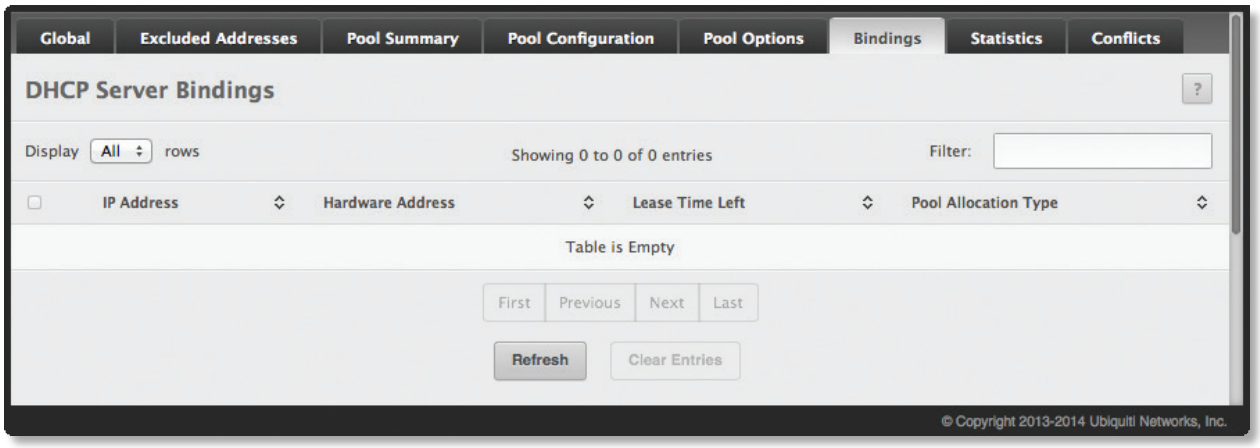

DHCP Server Bindings

DHCP Server Bindings Fields


Field	Description
IP Address	The IP Address of the DHCP client.
Hardware Address	The MAC address of the DHCP client.
Lease Time Left	The amount of time left until the lease expires in days, hours, and minutes.
Pool Allocation Type	The type of binding used: • **Dynamic** The address was allocated dynamically from a pool that includes a range of IP addresses. • **Manual** A static IP address was assigned based on the MAC address of the client. • **Inactive** The pool is not in use.

If you change any settings, click **Submit** to apply the changes to the system.

- To remove an entry from the table, select each entry to delete and click **Clear Entries**. You must confirm the action before the binding is deleted.
- Click **Refresh** to refresh the data on the screen with the present state of the data in the switch.

DHCP Server Statistics

Use the *DHCP Server Statistics* page to view information about the DHCP server bindings and messages. To access the page, click **System** > **Advanced Configuration** > **DHCP Server** > **Statistics** in the navigation menu.

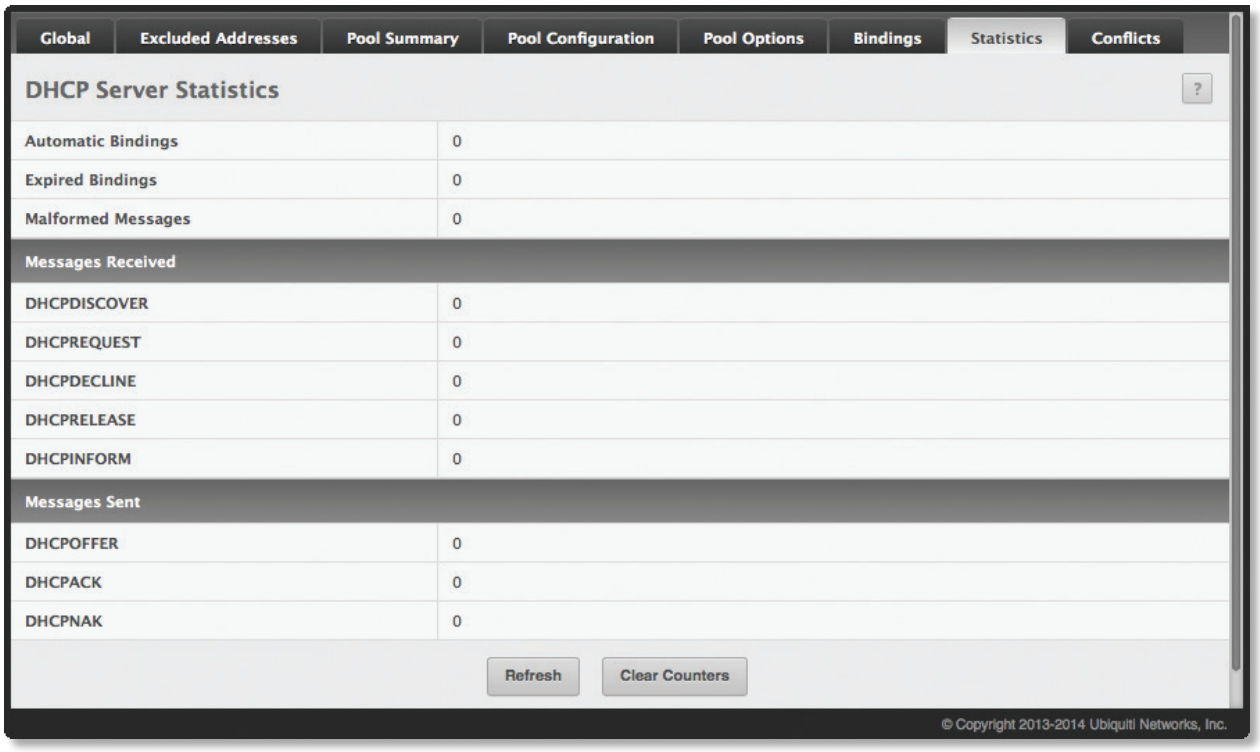

DHCP Server Statistics

DHCP Server Statistics Fields

Field	Description
Automatic Bindings	Shows the number of automatic bindings on the DHCP server.
Expired Bindings	Shows the number of expired bindings on the DHCP server.
Malformed Messages	Shows the number of the malformed messages.
Message Received section:	
DHCPDISCOVER	Shows the number of DHCPDISCOVER messages received by the DHCP server.
DHCPREQUEST	Shows the number of DHCPREQUEST messages received by the DHCP server.
DHCPDECLINE	Shows the number of DHCPDECLINE messages received by the DHCP server.
DHCPRELEASE	Shows the number of DHCPRELEASE messages received by the DHCP server.
DHCPINFORM	Shows the number of DHCPINFORM messages received by the DHCP server.
DHCPOFFER	Shows the number of DHCPOFFER messages sent by the DHCP server.
DHCPACK	Shows the number of DHCPACK messages sent by the DHCP server.
DHCPNAK	Shows the number of DHCPNAK messages sent by the DHCP server.
Message Sent section:	
DHCPOFFER	The number of DHCP offer messages the DHCP server has sent to DHCP clients in response to DHCP discovery messages it has received.
DHCPACK	The number of DHCP acknowledgement messages the DHCP server has sent to DHCP clients in response to DHCP request messages. The server sends this message after a client accepts the server's offer. The message includes information about the lease time and any other configuration information that the DHCP client has requested.
DHCPNAK	The number of negative DHCP acknowledgement messages the DHCP server has sent to DHCP clients. This type of message is sent if the client requests an IP address already in use or if the server does not renew the lease.


Use the buttons to perform the following tasks:

- Click **Clear Server Statistics** to reset all DHCP server statistics counters to zero.
- Click **Refresh** to update the information on the screen.

DHCP Server Conflicts Information

Use the *DHCP Server Conflicts Information* page to view information on hosts that have address conflicts; i.e., when the same IP address is assigned to two or more devices on the network.

To access the *DHCP Server Conflicts Information* page, click **System** > **Advanced Configuration** > **DHCP Server** > **Conflicts** in the navigation menu.

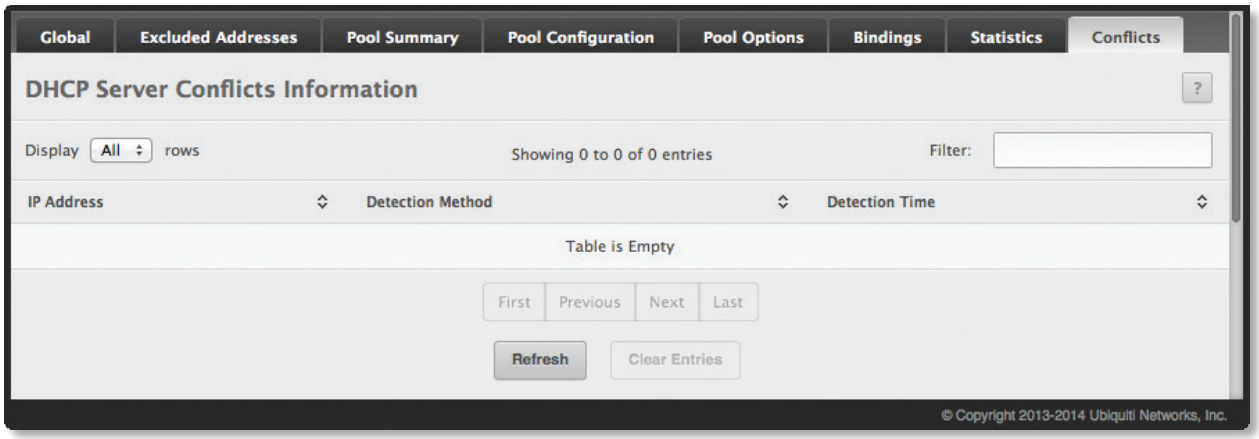

DHCP Server Conflicts Information

DHCP Server Conflicts Information Fields

Field	Description
IP Address	The IP address that has been detected as a duplicate.
Detection Method	The method used to detect the conflict, which is one of the following: • **Gratuitous ARP** The DHCP client detected the conflict by broadcasting an ARP request to the address specified in the DHCP offer message sent by the server. If the client receives a reply to the ARP request, it declines the offer and reports the conflict. • **Ping** The server detected the conflict by sending an ICMP echo message (ping) to the IP address before offering it to the DHCP client. If the server receives a response to the ping, the address is considered to be in conflict and is removed from the pool. • **Host Declined** The server received a DHCPDECLINE message from the host. A DHCPDECLINE message indicates that the host has discovered that the IP address is already in use on the network.
Detection Time	The time when the conflict was detected in days, hours, minutes, and seconds since the system was last reset (i.e., system up time).

Use the buttons to perform the following tasks:

- Click **Clear Entries** to clear all of the address conflict entries.
- Click **Refresh** to update the information on the screen.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.


Configuring Time Ranges

You can use these pages to configure time ranges to use in time-based access control list (ACL) rules. Time-based ACLs allow one or more rules within an ACL to be based on a periodic or absolute time. Each ACL rule within an ACL except for the implicit *deny all* rule can be configured to be active and operational only during a specific time period. The time range pages allow you to define specific times of the day and week in order to implement time-based ACLs. The time range is identified by a name and can then be referenced by an ACL rule defined with in an ACL.

Time Range Configuration

Use the *Time Range Summary* page to create a named time range. Each time range can consist of one absolute time entry and/or one or more periodic time entries.

To access this page, click **System** > **Advanced Configuration** > **Time Range** > **Configuration**.

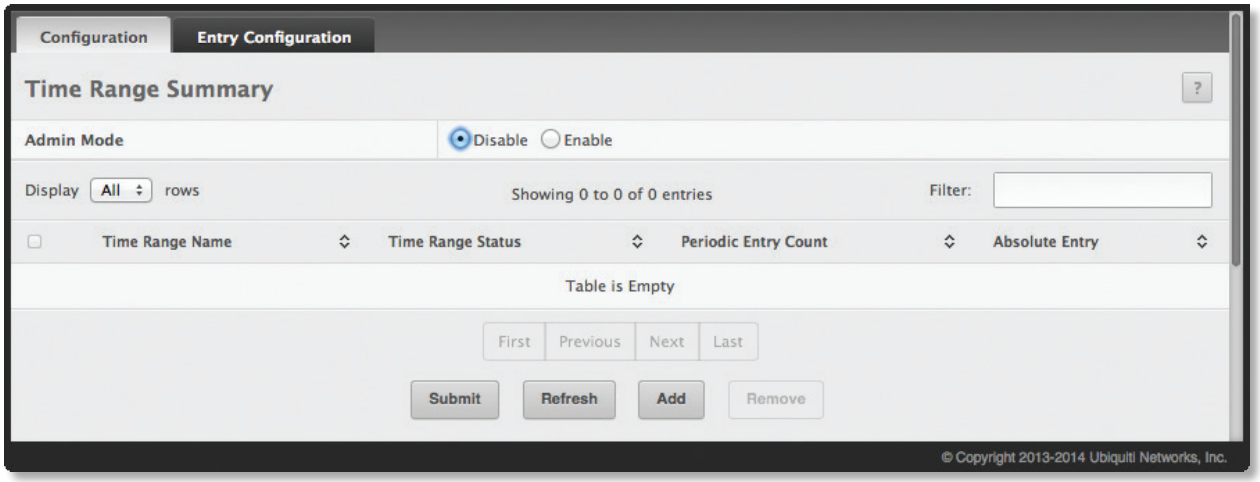

Time Range Summary

Time Range Summary Fields

Field	Description
Admin Mode	Used to *Enable* or *Disable* the Time Range administrative mode. When enabled, actions with subscribed components are performed for existing time range entries.
Time Range Name	The unique ID or name that identifies this time range. A time-based ACL rule can reference the name configured in this field.
Time Range Status	Shows whether the time range is *Active* or *Inactive*. A time range is *Inactive* if the current day and time do not fall within any time range entries configured for the time range.
Periodic Entry Count	The number of periodic time range entries currently configured for the time range.
Absolute Entry	Shows whether an absolute time entry is currently configured for the time range.

Use the buttons to perform the following tasks:

- To add a time range, click **Add**, enter a name for the time range configuration, and click **Submit** to create the time range.
- To delete a configured time range, select each entry to delete, click **Remove**, and confirm the action.
- If you change the *Admin Mode* setting on this page, click **Submit** to apply the change.
- Click **Refresh** to update the information on the screen.


To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Time Range Entry Configuration

Use the *Time Range Entry Summary* page to configure periodic and absolute time range entries and add them to named time ranges.

Note: The time range entries use the system time for the time periods in which they take effect. Make sure you configure the SNTP server settings so that the SNTP client on the switch can obtain the correct date and time from the server.

To access this page, click **System** > **Advanced Configuration** > **Time Ranges** > **Entry Configuration**.

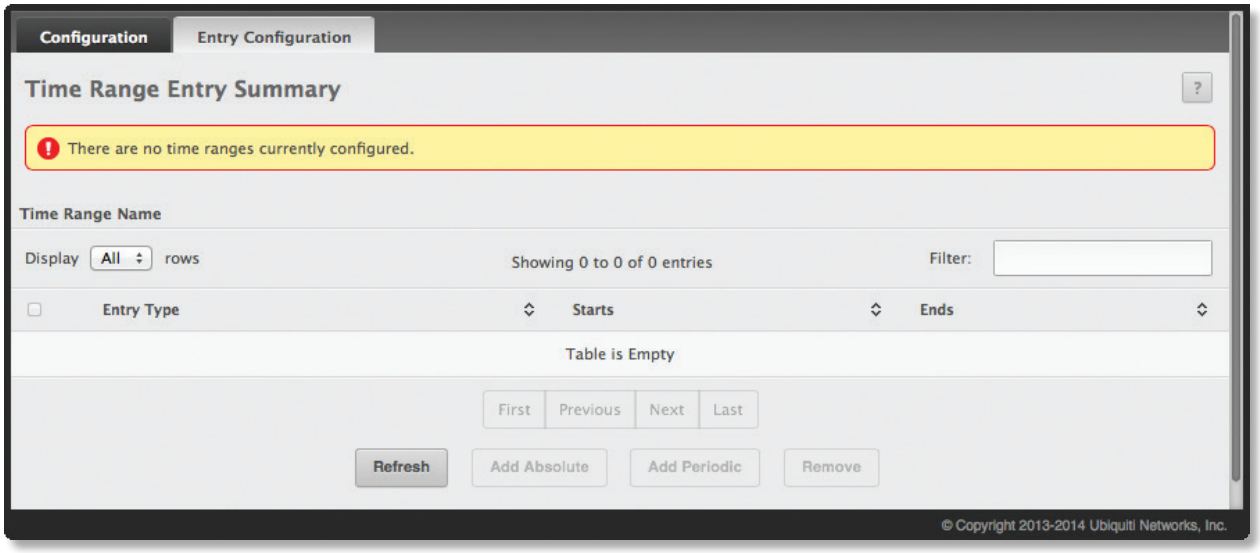

Time Range Entry Summary

Time Range Entry Summary Fields

Field	Description
Time Range Name	Lists the available time ranges or blank if no time ranges have been defined yet.
Entry Type	The type of time range entry, which is one of the following: • **Absolute** Occurs once or has an undefined start or end period. The duration of an absolute entry can be hours, days, or even years. Each time entry configuration can have only one absolute entry. • **Periodic** Recurring entry that takes place at fixed intervals. This type of entry occurs at the same time on one or more days of the week.
Starts	For an absolute entry, indicates the time, day, month, and year that the entry begins. If this field is blank, the absolute entry became active when it was configured. For a periodic entry, indicates the time and day(s) of the week that the entry begins.
Ends	For an absolute entry, indicates the time, day, month, and year that the entry ends. If this field is blank, the absolute entry does not have a defined end. For a periodic entry, indicates the time and day(s) of the week that the entry ends.
Add Absolute Time Range dialog box – When you click **Add Absolute**, this dialog box appears with the following fields:	
Time Range Name	The time range configuration that will include the absolute time range entry.
Start Time	Select this option to configure values for the *Start Date* and the *Starting Time of Day*. If this option is not selected, the entry becomes active immediately.
Start Date	Click to select the day, month, and year when this entry becomes active. This field can be configured only if the *Start Time* option is selected.
Starting Time of Day	Specify the time of day that the entry becomes active by entering the information in the field or by using the scroll bar in the *Choose Time* pop-up window. Click **Now** to use the current time of day. Click **Done** to close the *Choose Time* window. This field can be configured only if the *Start Time* option is selected.

Time Range Entry Summary Fields (Continued)

Field	Description
End Time	Select this option to configure values for the *End Date* and the *Ending Time of Day*. If this option is not selected, the entry does not have an end time; after the configured *Start Time* begins, the entry will remain active indefinitely.
End Date	Click to select the day, month, and year when this entry should no longer be active. This field can be configured only if the *End Time* option is selected.
Ending Time of Day	Specify the time of day that the entry becomes inactive by entering the information in the field or by using the scroll bar in the *Choose Time* pop-up window. Click **Now** to use the current time of day. Click **Done** to close the *Choose Time* pop-up window. This field can be configured only if the *End Time* option is selected.
Add Periodic Time Range dialog box – When you click **Add Periodic**, this dialog box appears, with the following fields:	
Time Range Name	The time range configuration that will include the Periodic time range entry.
Applicable Days	Select the days on which the Periodic time range entry is active: • **Daily** Every day of the week • **Weekdays** Monday through Friday • **Weekend** Saturday and Sunday • **Days of Week** User-defined start days
Start Days	Indicates on which days the time entry becomes active. If the selected option in the *Applicable Days* field is *Days of Week*, select one or more days on which the entry becomes active. To select multiple days, press and hold CTRL and select each desired start day.
Starting Time of Day	Specify the time of day that the entry becomes active by entering the information in the field or by using the scroll bar in the *Choose Time* pop-up window. Click **Now** to use the current time of day. Click **Done** to close the *Choose Time* pop-up window
End Days	Indicates on which days the time entry ends. If the selected option in the *Applicable Days* field is *Days of Week*, select one or more days on which the entry ends. To select multiple days, press and hold CTRL and select each desired end day.
Ending Time of Day	Specify the time of day that the entry becomes inactive by entering the information in the field or by using the scroll bar in the *Choose Time* pop-up window. Click **Now** to use the current time of day. Click **Done** to close the *Choose Time* pop-up window.

To configure the time range entries for a time range configuration, select the time range configuration from the *Time Range Name* menu and use the buttons to perform the following tasks:

- To add an absolute time range entry, click **Add Absolute**, configure the settings to define the absolute time range, and then click **Submit** to apply the changes. If the **Add Absolute** button is not available, an absolute entry already exists for the time range specified by *Time Range Name*.
- To add a periodic time range entry, click **Add Periodic** and specify the days and times that the entry is in effect.
- To delete a time range entry, select each entry to delete, click **Remove**, and confirm the action.
- Click **Refresh** to update the information on the screen.


To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Configuring DNS

You can use these pages to configure information about DNS servers the network uses and how the switch/router operates as a DNS client.

DNS Global Configuration

Use the *DNS Global Configuration* page to configure global DNS settings and to view DNS client status information. To access this page, click **System** > **Advanced Configuration** > **DNS** > **Configuration**.

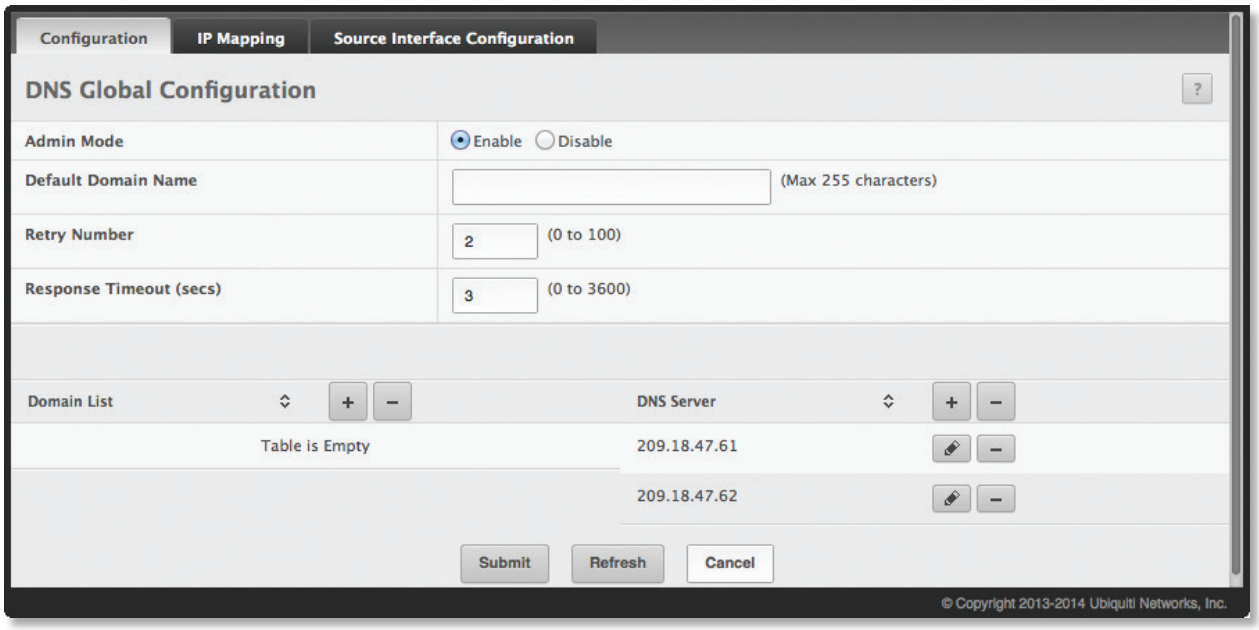

DNS Global Configuration

DNS Global Configuration Fields

Field	Description
Admin Mode	The administrative mode, *Enable* or *Disable* (default), of the DNS client.
Default Domain Name	The default domain name (255 characters maximum) that the DNS client uses to complete unqualified host names. After a default domain name is configured (default: not configured), a host name entered without domain name information is appended with the default domain name. For example, if the default domain name is *.com* and the user enters **hotmail** as the host name, then the host name is changed to *hotmail.com*.
Retry Number	The number of times to resend DNS queries to a DNS server on the network. Range is *0* to *100*. The default is *2*.
Response Timeout	The number of seconds to allow a DNS server to respond to a request before a retry. Range is *0* to *3600*. Default is *3*.
Domain List	The domain names that have added to the DNS client's domain list. If a DNS query that includes the default domain name is not resolved, the DNS client uses these domain names, in the order they appear in this list, to extend the hostname into a fully-qualified domain name. Use the buttons as follows: + To create a new list of domain names, click this button, enter the name of the list, and click **Submit**. Repeat this step to add multiple domains to the default domain list. − To remove a domain from the domain list, click this button and then confirm the action.
DNS Server	A unique IPv4 or IPv6 address used to identify a DNS server. The order in which you add servers determines the precedence of the server. The DNS server that you add first has the highest precedence and will be used before other DNS servers that you add. Use the buttons as follows: Click this button to configure the associated DNS server. − To delete the associated DNS server entry, Click this button and then confirm the action.


Use the buttons to perform the following tasks:

- If you change any settings on this page, click **Submit** to apply the changes.
- Click **Refresh** to update the information on the screen.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

DNS IP Mapping Configuration

Use the *DNS IP Mapping* page to view and manage the Static and Dynamic entries in the DNS IP mapping table. To access this page, click **System** > **Advanced Configuration** > **DNS** > **IP Mapping** in the menu.

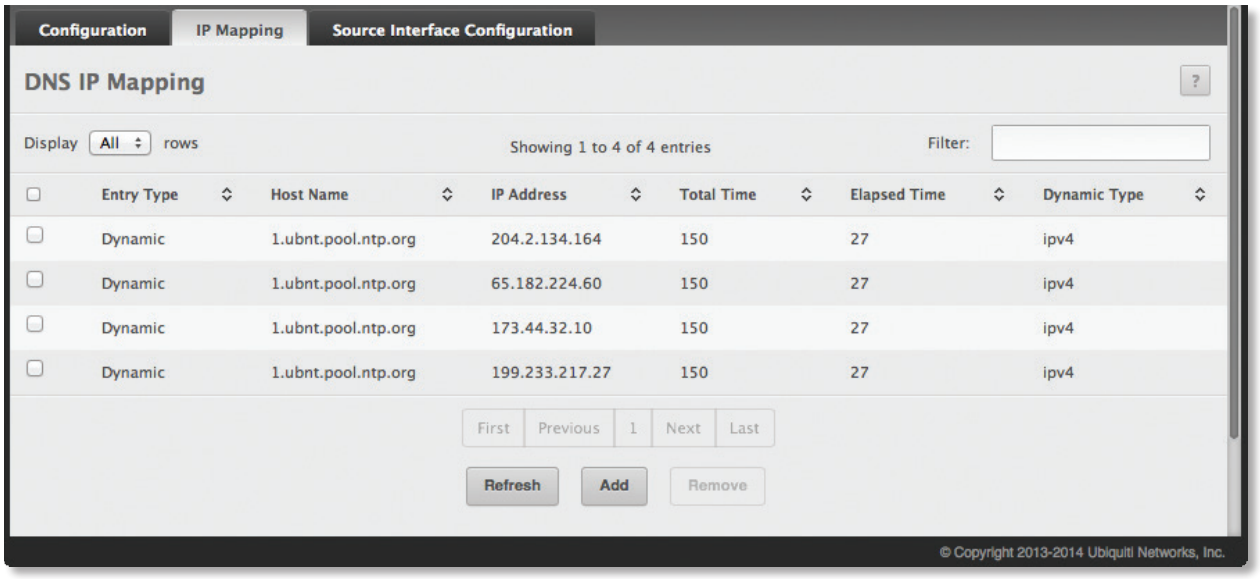

DNS IP Mapping

DNS IP Mapping Fields

Field	Description
Entry Type	Type of DNS entry: • **Static** An entry that has been manually configured on the device. • **Dynamic** An entry that the device has learned by using a configured DNS server to resolve a hostname.
Host Name	The name that identifies the system. For *Static* entries, specify the *Host Name* after you click **Add**. A host name can contain up to 255 characters if it contains multiple levels in the domain hierarchy, but each level (the portion preceding a period) can contain a maximum of 63 characters. If the host name you specify is a single level (does not contain any periods), the maximum number of allowed characters is 63.
IP Address	The IPv4 or IPv6 address associated with the configured *Host Name*. For *Static* entries, specify the *IP Address* after you click **Add**. You can specify either an IPv4 or an IPv6 address.
Dynamic Entry fields – The following fields include values for Dynamic entries only. For Static entries, these fields are blank.	
Total Time	The number of seconds that the entry will remain in the table.
Elapsed Time	The number of seconds that have passed since the entry was added to the table. When the *Elapsed Time* reaches the *Total Time*, the entry times out and is removed from the table.
Dynamic Type	The type of address in the entry; for example IP, or X.121 (less common).

Use the buttons to perform the following tasks:


- To statically map an IP address to a hostname, click **Add**, configure the *Host Name* and *IP Address* fields in the *Add DNS Entry* dialog box, and then click **Submit** to apply the changes.
- To delete one or more entries, select each entry to delete, click **Remove**, and confirm the deletion.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

DNS Source Interface Configuration

Use this page to specify the physical or logical interface to use as the DNS client source interface. When an IP address is configured on the source interface, this address is used for all DNS communications between the local DNS client and the remote DNS server. The IP address of the designated source interface is used in the IP header of DNS management protocol packets. This allows security devices, such as firewalls, to identify all source packets coming from a specific device.

To access the *DNS Source Interface Configuration* page, click **System** > **Advanced Configuration** > **DNS** > **Source Interface Configuration** in the menu.

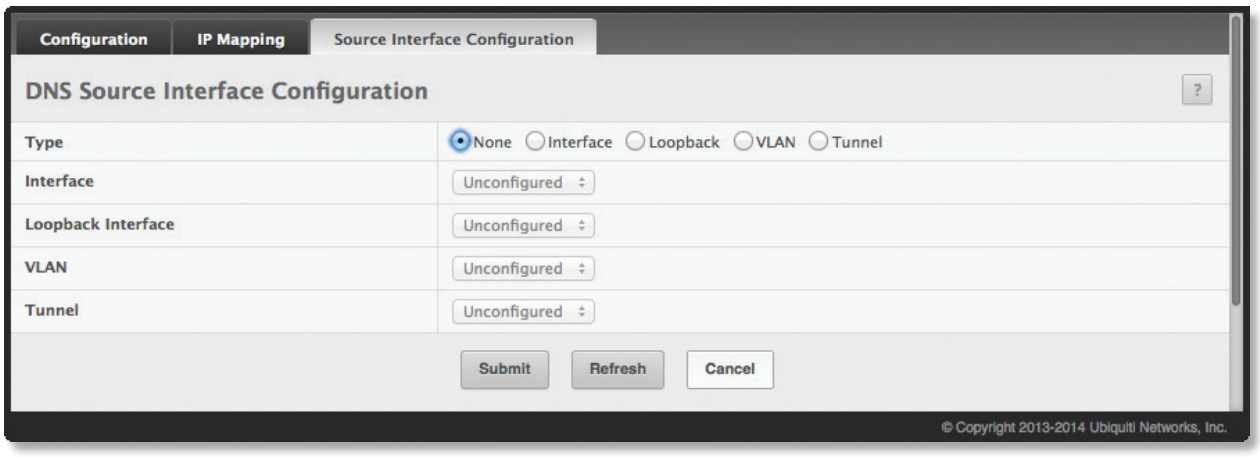

DNS Source Interface Configuration

DNS Source Interface Configuration Fields

Field	Description
Type	The type of interface to use as the source interface: • **None** The primary IP address of the originating (outbound) interface is used as the source address. • **Interface** The primary IP address of a physical port is used as the source address. • **VLAN** The primary IP address of a VLAN routing interface is used as the source address. • **Tunnel** The primary IP address of a tunnel interface is used as the source address.
Interface	When the selected *Type* is *Interface*, select the physical port to use as the source interface.
VLAN	When the selected *Type* is *VLAN*, select the VLAN to use as the source interface. The menu contains only the VLAN IDs for VLAN routing interfaces.
Tunnel	When the selected *Type* is *Tunnel*, select the tunnel interface to use as the source interface.

Use the buttons to perform the following tasks:

- If you change any of the settings on the page, click **Submit** to apply the changes to system.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Configuring SNTP Settings

The EdgeSwitch software supports the Simple Network Time Protocol (SNTP). SNTP assures accurate network device clock time synchronization up to the millisecond. Time synchronization is performed by a network SNTP server. The EdgeSwitch software operates only as an SNTP client and cannot provide time services to other systems.

Time sources are established by Stratums. Stratums define the accuracy of the reference clock. The higher the stratum (where zero is the highest), the more accurate the clock. The device receives time from stratum 1 and above since it is itself a stratum 2 device.

The following is an example of stratums:

- **Stratum 0**: A real-time clock is used as the time source, for example, a GPS system.
- **Stratum 1**: A server that is directly linked to a Stratum 0 time source is used. Stratum 1 time servers provide primary network time standards.
- **Stratum 2**: The time source is distanced from the Stratum 1 server over a network path. For example, a Stratum 2 server receives the time over a network link, via NTP, from a Stratum 1 server.

Information received from SNTP servers is evaluated based on the time level and server type.

SNTP time definitions are assessed and determined by the following time levels:

T1: Time at which the original request was sent by the client.

T2: Time at which the original request was received by the server.

T3: Time at which the server sent a reply.

T4: Time at which the client received the server's reply.

The device can poll Unicast and Broadcast server types for the server time.

Polling for Unicast information is used for polling a server for which the IP address is known. SNTP servers that have been configured on the device are the only ones that are polled for synchronization information. T1 through T4 are used to determine server time. This is the preferred method for synchronizing device time because it is the most secure method. If this method is selected, SNTP information is accepted only from SNTP servers defined on the device using the SNTP Server Configuration page.

Broadcast information is used when the server IP address is unknown. When a Broadcast message is sent from an SNTP server, the SNTP client listens to the message. If Broadcast polling is enabled, any synchronization information is accepted, even if it has not been requested by the device. This is the least secure method.


The device retrieves synchronization information, either by actively requesting information or at every poll interval. If Unicast and Broadcast polling are enabled, the information is retrieved in this order:

- Information from servers defined on the device is preferred. If Unicast polling is not enabled or if no servers are defined on the device, the device accepts time information from any SNTP server that responds.
- If more than one Unicast device responds, synchronization information is preferred from the device with the lowest stratum.
- If the servers have the same stratum, synchronization information is accepted from the SNTP server that responded first.

MD5 (Message Digest 5) Authentication safeguards device synchronization paths to SNTP servers. MD5 is an algorithm that produces a 128-bit hash. MD5 is a variation of MD4, and increases MD4 security. MD5 verifies the integrity of the communication, authenticates the origin of the communication.

SNTP Global Configuration

Use the *SNTP Global Configuration* page to view and adjust SNTP parameters. To display the page, click **System** > **Advanced Configuration** > **SNTP** > **Global Configuration** in the navigation menu.

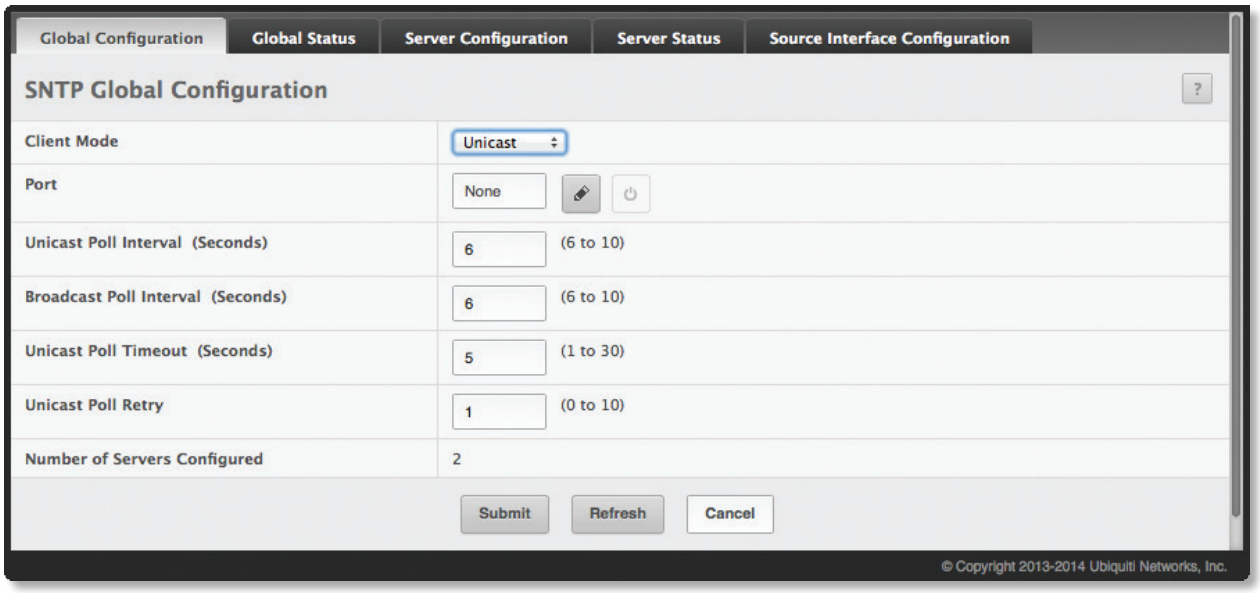

SNTP Global Configuration

SNTP Global Configuration Fields

Field	Description
Client Mode	Use drop-down list specify the SNTP client mode, which is one of the following modes: • **Disable** SNTP is not operational. No SNTP requests are sent from the client nor are any received SNTP messages processed. • **Unicast** SNTP operates in a point to point fashion. A unicast client sends a request to a designated server at its unicast address and expects a reply from which it can determine the time and, optionally the round-trip delay and local clock offset relative to the server. • **Broadcast** SNTP operates in the same manner as multicast mode but uses a local broadcast address instead of a multicast address. The broadcast address has a single subnet scope while a multicast address has Internet wide scope.
Port	Specifies the local UDP port to listen for responses/broadcasts. Allowed range is *1* to *65535*. Default value is *None*. Use the buttons as follows: Click this button to change the field's setting. Click this button to reset the field to the default value.
Unicast Poll Interval	Specifies the interval, in seconds, between unicast poll requests expressed as a power of two when configured in unicast mode. Allowed range is *6* to *10*. Default value is *6*.
Broadcast Poll Interval	Specifies the interval, in seconds, between broadcast poll requests expressed as a power of two when configured in broadcast mode. Broadcasts received prior to the expiry of this interval are discarded. Allowed range is *6* to *10*. Default value is *6*.
Unicast Poll Timeout	Specifies the number of seconds to wait for an SNTP response when configured in unicast mode. Allowed range is *1* to *30*. Default value is *5*.
Unicast Poll Retry	Specifies the number of times to retry a request to an SNTP server after the first timeout before attempting to use the next configured server when configured in unicast mode. Allowed range is *0* to *10*. Default value is *1*.
Number of Servers Configured	Specifies the number of current valid unicast server entries configured for this client.


Use the buttons to perform the following tasks:

- If you change any of the settings on the page, click **Submit** to apply the changes to system.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

SNTP Global Status

Use the *SNTP Global Status* page to view information about the system's SNTP client. To access the page, click **System** > **Advanced Configuration** > **SNTP** > **Global Status** in the navigation menu.

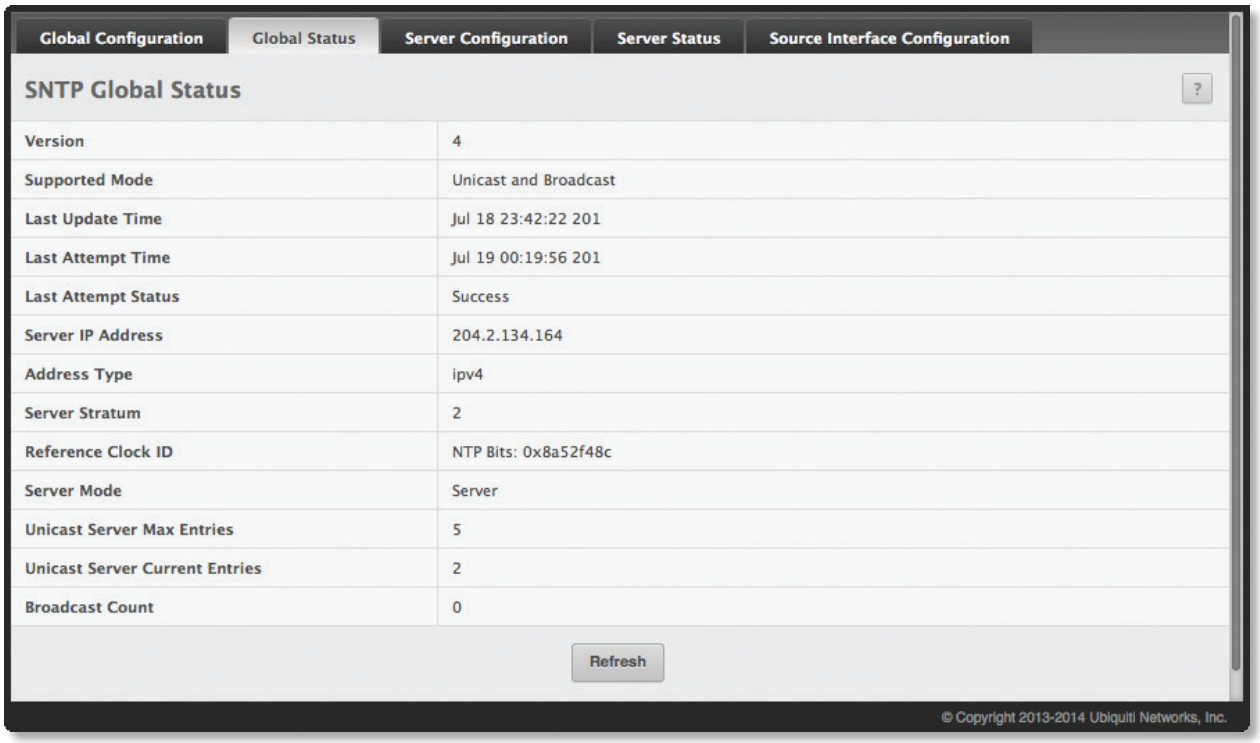

SNTP Global Status

SNTP Global Status Fields

Field	Description
Version	The SNTP Version the client supports.
Supported Mode	The SNTP modes the client supports. Multiple modes may be supported by a client.
Last Update Time	The local date and time (UTC) the SNTP client last updated the system clock.
Last Attempt Time	The local date and time (UTC) of the last SNTP request or receipt of an unsolicited message.
Last Attempt Status	The status of the last SNTP request or unsolicited message for both unicast and broadcast modes. If no message has been received from a server, a status of *Other* is displayed. These values are appropriate for all operational modes: • **Other** None of the following enumeration values. • **Success** The SNTP operation was successful and the system time was updated. • **Request Timed Out** A directed SNTP request timed out without a response from the SNTP server. • **Bad Date Encoded** The time provided by the SNTP server is not valid. • **Version Not Supported** The SNTP version supported by the server is not compatible with the version supported by the client. • **Server Unsynchronized** The SNTP server is not synchronized with its peers. This is indicated via the *leap indicator* field on the SNTP message. • **Server Kiss Of Death** The SNTP server indicated that no further queries were to be sent to this server. This is indicated by a stratum field equal to 0 in a message received from a server.
Server IP Address	The IP address of the server for the last received valid packet. If no message has been received from any server, an empty string is shown.
Address Type	The address type of the SNTP Server address for the last received valid packet.
Server Stratum	The claimed stratum of the server for the last received valid packet.
Reference Clock Id	The reference clock identifier of the server for the last received valid packet.
Server Mode	The mode of the server for the last received valid packet.


SNTP Global Status Fields (Continued)

Field	Description
Unicast Sever Max Entries	The maximum number of unicast server entries that can be configured on this client.
Unicast Server Current Entries	The number of current valid unicast server entries configured for this client.
Broadcast Count	The number of unsolicited broadcast SNTP messages that have been received and processed by the SNTP client since last reboot.

Click **Refresh** to display the latest information from the router.

SNTP Server Configuration

Use the *SNTP Server Configuration* page to view and modify information for adding and modifying Simple Network Time Protocol SNTP servers. To display the *SNTP Server Configuration* page, click **System** > **Advanced Configuration** > **SNTP** > **Server Configuration** in the navigation menu.

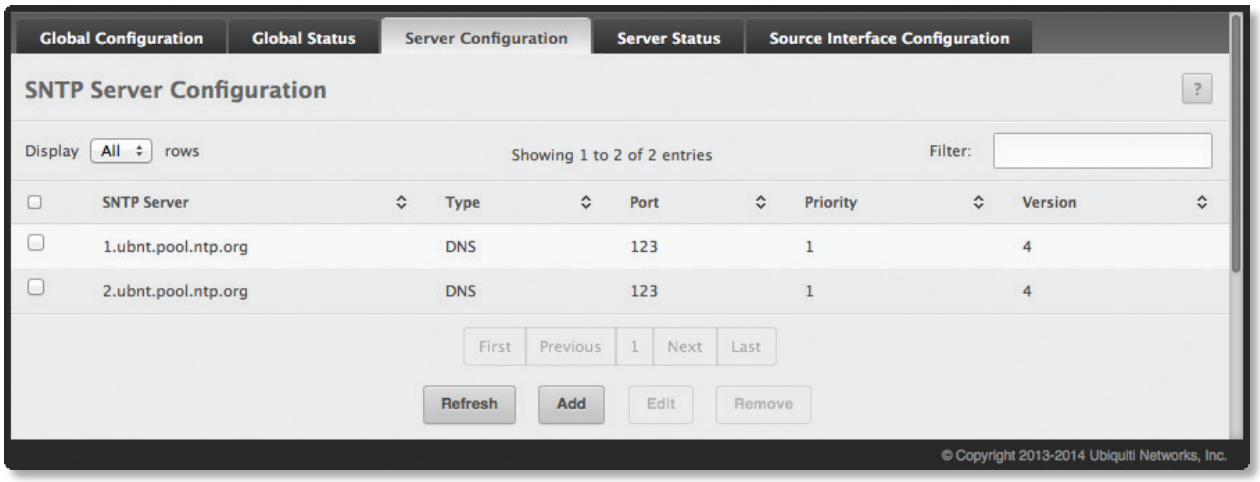

SNTP Server Configuration

SNTP Server Configuration Fields

Field	Description
SNTP Server	Select the IP address of a user-defined SNTP server to view or modify information about an SNTP server, or click **Add** to configure a new SNTP server. You can define up to three SNTP servers.
Type	Select **IPv4** if you entered an IPv4 address, **DNS** if you entered a hostname.
Port	Enter a port number from *1* to *65535*. The default is *123*.
Priority	Enter a priority from *1* to *3*, with 1 being the highest priority. The switch will attempt to use the highest priority server and, if it is not available, will use the next highest server.
Version	Enter the protocol version number.
Add SNTP Server Dialog Box – When you click **Add**, this dialog box appears, containing the following additional field:	
Host Name or IP Address	Specify the IPv4 address, IPv6 address, or DNS-resolvable host name of the SNTP server. Unicast SNTP requests will be sent to this address. The address you enter is displayed in the SNTP Server field on the main page. The address type is automatically detected.

Use the buttons to perform the following tasks:


- To add an SNTP server, click **Add**, configure the fields as needed, and click **Submit** to apply the changes. The SNTP server is added and appears in the *SNTP Server* list.
- To modify settings for an existing SNTP server, select the entry to update, click **Edit**, update the fields as needed, and click **Submit** to apply the changes. You cannot edit the host name of address of a server.
- To remove an SNTP server from the list, select each entry to delete, click **Remove**, and confirm the deletion.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

SNTP Server Status

The *SNTP Server Status* page displays status information about the SNTP servers configured on your switch.

To access the *SNTP Server Status* page, click **System** > **Advanced Configuration** > **SNTP** > **Server Status** in the navigation menu.

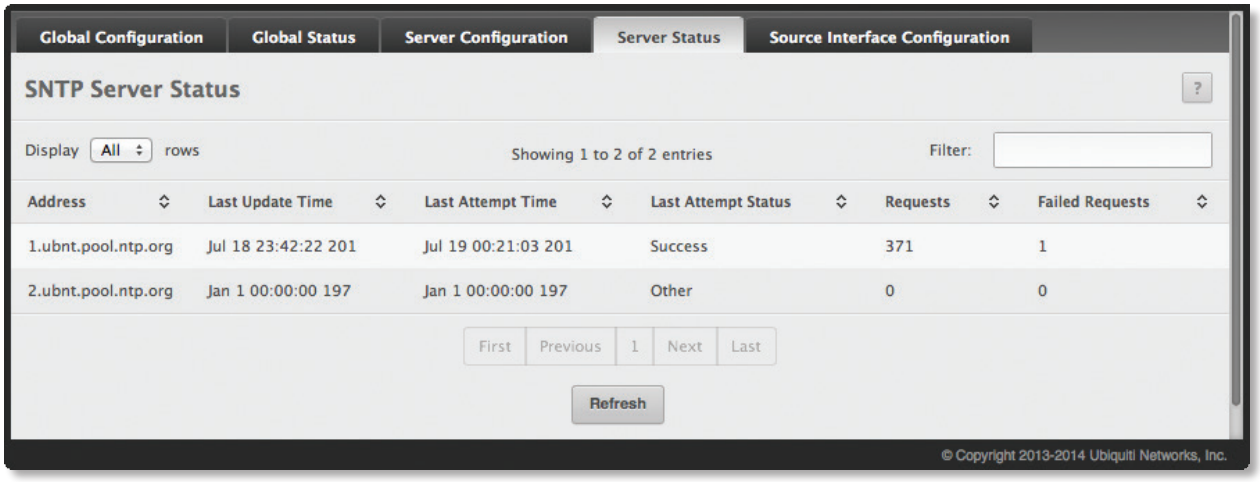

SNTP Server Status

SNTP Server Status Fields


Field	Description
Address	The existing server addresses. If no server configuration exists, *No SNTP server exists* is displayed on-screen.
Last Update Time	The local date and time (UTC) that the response from this server was used to update the system clock.
Last Attempt Time	The local date and time (UTC) that this SNTP server was last queried.
Last Attempt Status	The status of the last SNTP request to this server. If no packet has been received from this server, a status of *Other* is displayed: • **Other** None of the following enumeration values. • **Success** The SNTP operation was successful and the system time was updated. • **Request Timed Out** A directed SNTP request timed out without receiving a response from the SNTP server. • **Bad Date Encoded** The time provided by the SNTP server is not valid. • **Version Not Supported** The SNTP version supported by the server is not compatible with the version supported by the client. • **Server Unsynchronized** The SNTP server is not synchronized with its peers. This is indicated via the 'leap indicator' field on the SNTP message. • **Server Kiss Of Death** The SNTP server indicated that no further queries were to be sent to this server. This is indicated by a stratum field equal to 0 in a message received from a server.
Requests	The number of SNTP requests made to this server since last agent reboot.
Failed Requests	The number of failed SNTP requests made to this server since last reboot.

Click **Refresh** to display the latest information from the switch.

SNTP Source Interface Configuration

Use this page to specify the physical or logical interface to use as the SNTP client source interface. When an IP address is configured on the source interface, this address is used for all SNTP communications between the local SNTP client and the remote SNTP server. The IP address of the designated source interface is used in the IP header of SNTP management protocol packets. This allows security devices, such as firewalls, to identify all source packets coming from a specific device.

To access the *SNTP Source Interface Configuration* page, click **System** > **Advanced Configuration** > **SNTP** > **Source Interface Configuration** in the navigation menu.

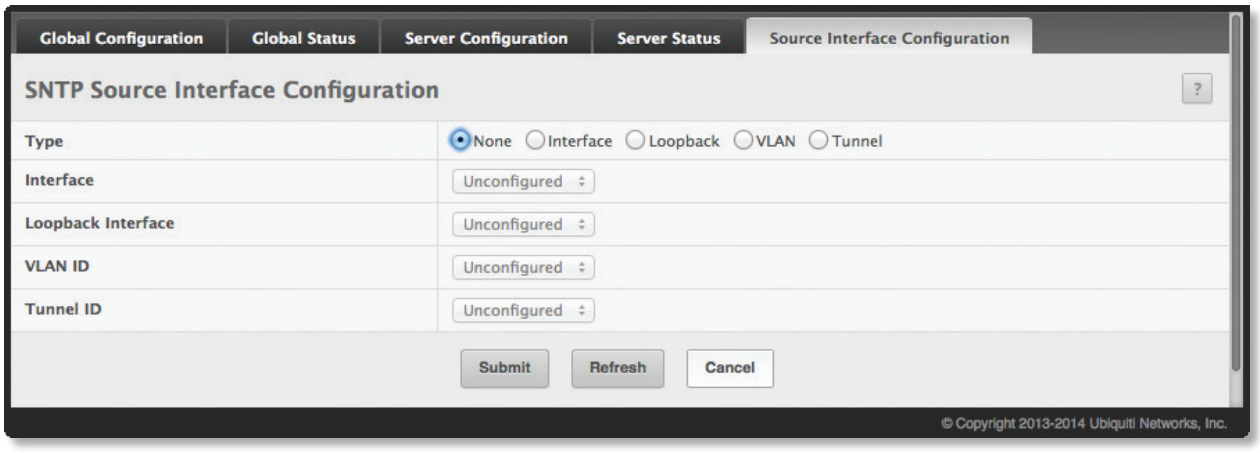

SNTP Source Interface Configuration

SNTP Source Interface Configuration Fields

Field	Description
Type	The type of interface to use as the source interface: • **None** The primary IP address of the originating (outbound) interface is used as the source address. • **Interface** The primary IP address of a physical port is used as the source address. • **VLAN** The primary IP address of a VLAN routing interface is used as the source address. • **Tunnel** The primary IP address of a tunnel interface is used as the source address.
Interface	When the selected *Type* is *Interface*, select the physical port to use as the source interface.
VLAN ID	When the selected *Type* is *VLAN*, select the VLAN to use as the source interface. The menu contains only the VLAN IDs for VLAN routing interfaces.
Tunnel ID	When the selected *Type* is *Tunnel*, select the tunnel interface to use as the source interface.

Use the buttons to perform the following tasks:


- If you make any changes to the page, click **Submit** to apply the settings.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Configuring the Time Zone

The *Time Zone Summary* page displays information about the current system time, the time zone, and the daylight saving time (also known as summer time) settings configured on the device.

To access the page, click **System** > **Advanced Configuration** > **Time Zone** > **Summary** in the navigation menu.

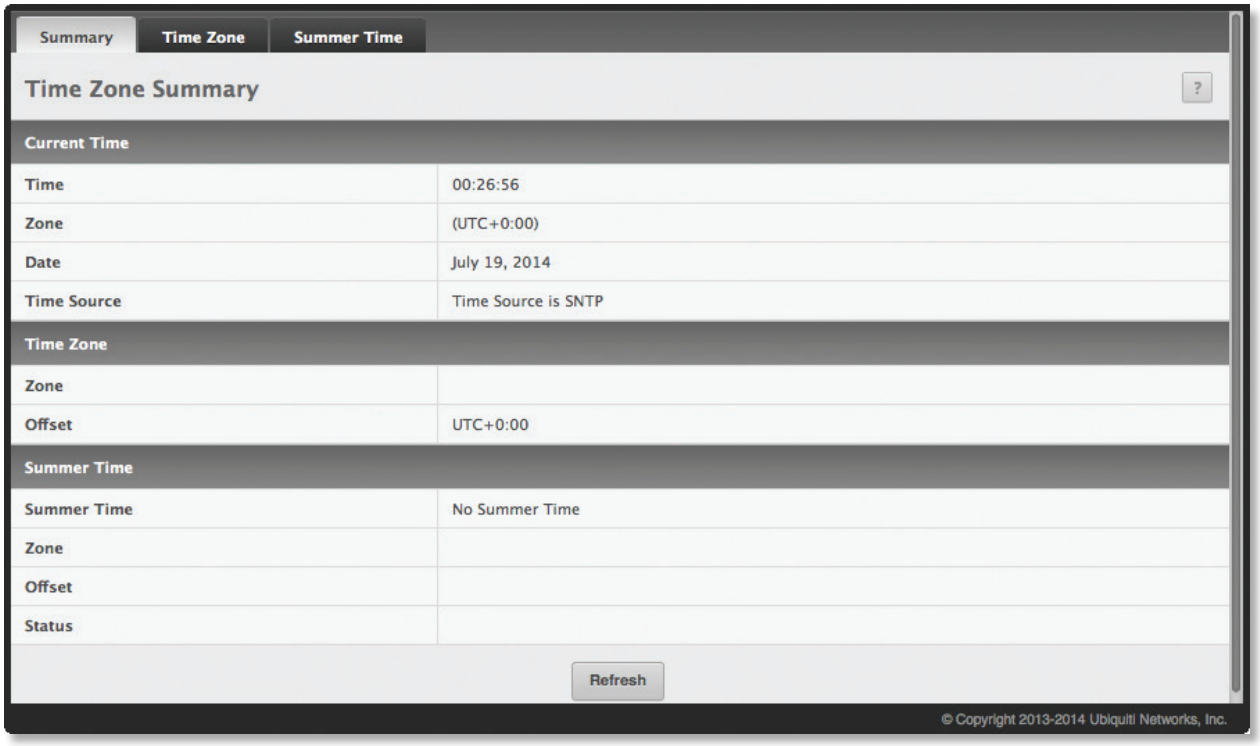

Time Zone Summary

Time Zone Summary Fields

Field	Description
Current Time – Information on the system time and date on the device. If the current time has not been acquired by the SNTP client on the device or configured manually, this section shows the default time and date plus the time elapsed since the last system reset.	
Time	The current time on the system clock. This time is used to provide time stamps on log messages.
Zone	The acronym that represents the time zone.
Date	The current date on the system.
Time Source	The time source from which the time update is taken: • **SNTP** The time has been acquired from an SNTP server. • **No Time Source** The time has either been manually configured or not configured at all.
Time Zone – This section contains information about the time zone and offset.	
Zone	The acronym that represents the time zone.
Offset	The offset in hours from Coordinated Universal Time (UTC), also known as Greenwich Mean Time (GMT).
Summer Time – This section contains information on Summer Time (Daylight Saving Time).	
Summer Time	The summer time mode on the system: • **Disable** Summer time is not active, and the time does not shift based on the time of year. • **Recurring** Summer time occurs every year at the manually configured start and end dates and times. • **EU** The system clock uses the standard recurring summer time settings for the European Union. All fields on the page except *Offset* and *Zone* are automatically populated and are not editable. • **USA** The system clock uses the standard recurring daylight saving time settings for the United States. All fields on the page except *Offset* and *Zone* are automatically populated and are not editable. • **Non-Recurring** Summer time settings are in effect only between the start date and end date of the specified year. If this mode is selected, the summer time settings do not repeat on an annual basis.
Zone	The acronym that represents the time zone of the summer time.

Time Zone Summary Fields (Continued)


Field	Description
Offset	The offset in hours from Coordinated Universal Time (UTC), also known as Greenwich Mean Time (GMT).
Status	Indicates if summer time is currently active.

Click **Refresh** to display the latest information from the router.

Time Zone Configuration

Use the *Time Zone Configuration* page to manually configure the system clock settings. The SNTP client must be disabled to allow manual configuration of the system time and date.

To access the page, click **System** > **Advanced Configuration** > **Time Zone** > **Time Zone** in the navigation menu.

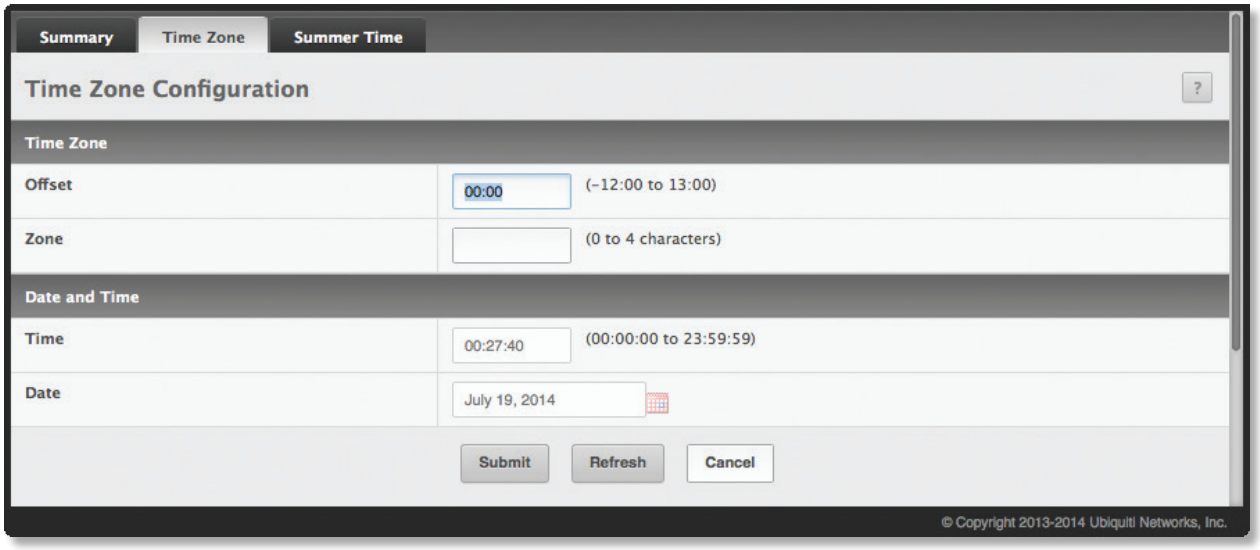

Time Zone Configuration

Time Zone Configuration Fields

Field	Description
Time Zone – This section contains the following time zone settings:	
Offset	The system clock's offset from UTC, which is also known as Greenwich Mean Time (GMT).
Zone	The acronym that represents the time zone. This field is not validated against an official list of time zone acronyms.
Date and Time – Use the fields in this section to manually configure the system time and date. If the SNTP client is enabled (Unicast mode or Broadcast mode), these fields cannot be configured.	
Time	The current time in hours, minutes, and seconds on the system clock.
Date	The current date in month, day, and year on the system clock. To change the date, click next to the field, select the year from the menu, browse to the desired month, and click the date.

Use the buttons to perform the following tasks:


- If you make any change to the page, click **Submit** to apply the settings.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Summer Time Configuration

Use this page to configure settings for summer time, which is also known as daylight saving time. Used in some countries around the world, summer time is the practice of temporarily advancing clocks during the summer months. Typically clocks are adjusted forward one or more hours near the start of spring and are adjusted backward in autumn.

To access the *Summer Time Configuration* page, click **System** > **Advanced Configuration** > **Time Zone** > **Summer Time** in the navigation menu.

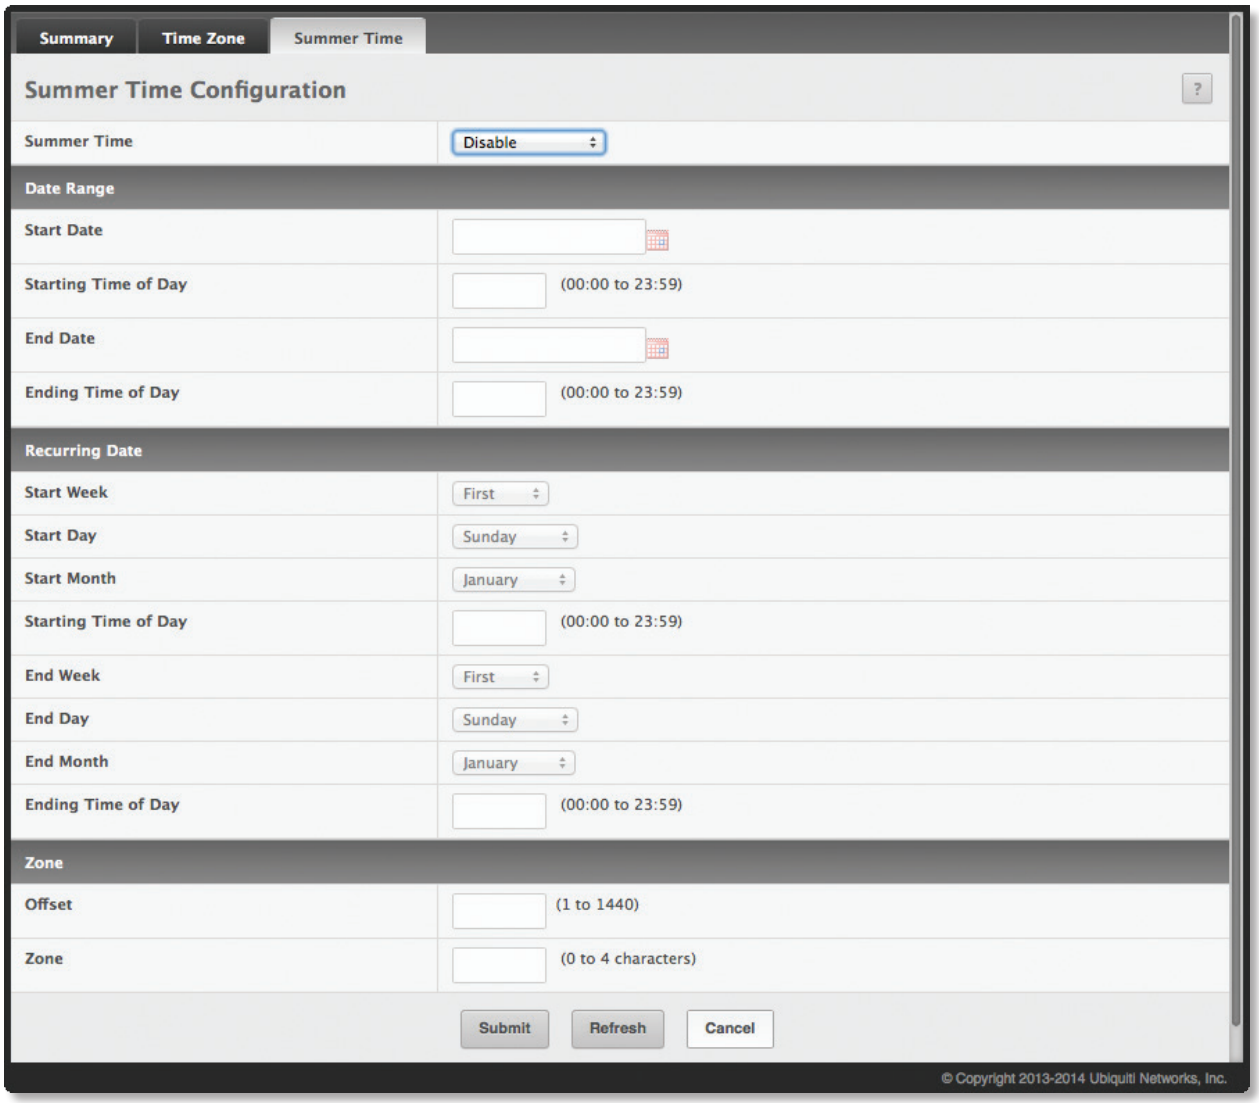

Summer Time Configuration

Summer Time Configuration Fields

Field	Description
Summer Time	The summer time mode on the system: • **Disable** Summer time is not active, and the time does not shift based on the time of year. • **Recurring** Summer time occurs at the same time every year. The start and end times and dates for the time shift must be manually configured. • **EU** The system clock uses the standard recurring summer time settings used in countries in the European Union. When this field is selected, the rest of the applicable fields on the page except *Offset* and *Zone* are automatically populated and cannot be edited. • **USA** The system clock uses the standard recurring daylight saving time settings used in the United States. When this field is selected, the rest of the applicable fields on the page except *Offset* and *Zone* are automatically populated and cannot be edited. • **Non-Recurring** Summer time settings are in effect only between the start date and end date of the specified year. When this mode is selected, the summer time settings do not repeat on an annual basis.
Date Range – The fields in this section are available only if the *Summer Time* field is set to **Non-Recurring** mode.	
Start Date	The day, month, and year that summer time begins. To change the date, click next to the field, select the year from the menu, browse to the desired month, and click the date.
Starting Time and Day	The time, in hours and minutes, to start summer time on the specified day.
End Date	The day, month, and year that summer time ends. To change the date, click next to the field, select the year from the menu, browse to the desired month, and click the date.
Ending Time of Day	The time, in hours and minutes to end summer time on the specified day.
Recurring Date – The fields in this section are available only if the *Summer Time* field is set to **Recurring** mode.	
Start Week	The week of the month within which summer time begins.
Start Day	The day of the week on which summer time begins.
Start Month	The month of the year within which summer time begins.
Starting Time of Day	The time, in hours and minutes, to start summer time.
End Week	The week of the month within which summer time ends.
End Day	The day of the week on which summer time ends.
End Month	The month of the year within which summer time ends.
Ending Time of Day	The time, in hours and minutes, to end summer time.
Zone – The fields in this section are available for all modes selected from the *Summer Time* field except **Disable**.	
Offset	The number of minutes to shift the summer time from the standard time.
Zone	The acronym associated with the time zone when summer time is in effect.

Use the buttons to perform the following tasks:

- If you make any changes to the page, click **Submit** to apply the settings.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Chapter 4: Configuring Switching Information

- **"Managing VLANs" on page 127**
- **"Creating MAC Filters" on page 134**
- **"GARP Configuration" on page 135**
- **"Configuring DHCP Snooping" on page 137**
- **"Configuring IGMP Snooping" on page 144**
- **"Configuring IGMP Snooping Querier" on page 151**
- **"Creating Port Channels" on page 154**
- **"Viewing Multicast Forwarding Database Information" on page 157**
- **"Configuring Protected Ports" on page 160**
- **"Configuring Spanning Tree Protocol" on page 161**
- **"Mapping 802.1p Priority" on page 170**
- **"Configuring Port Security" on page 172**
- **"Managing LLDP" on page 176**

Managing VLANs

Adding Virtual LAN (VLAN) support to a Layer-2 switch offers some of the benefits of both bridging and routing. Like a bridge, a VLAN switch forwards traffic based on the Layer-2 header, which is fast, and like a router, it partitions the network into logical segments, which provides better administration, security and management of multicast traffic.


A VLAN is a set of end stations and the switch ports that connect them. You may have many reasons for the logical division, such as department or project membership. The only physical requirement is that the end station and the port to which it is connected both belong to the same VLAN.

Each VLAN in a network has an associated VLAN ID, which appears in the IEEE 802.1Q tag in the Layer-2 header of packets transmitted on a VLAN. An end station may omit the tag, or the VLAN portion of the tag, in which case the first switch port to receive the packet may either reject it or insert a tag using its default VLAN ID.

A given port may handle traffic for more than one VLAN, but it can only support one default VLAN ID.

VLAN Status

Use the *VLAN Status* page to view information about the VLANs configured on your system. To access the *VLAN Status* page, click **Switching** > **VLAN** > **Status** in the navigation menu.

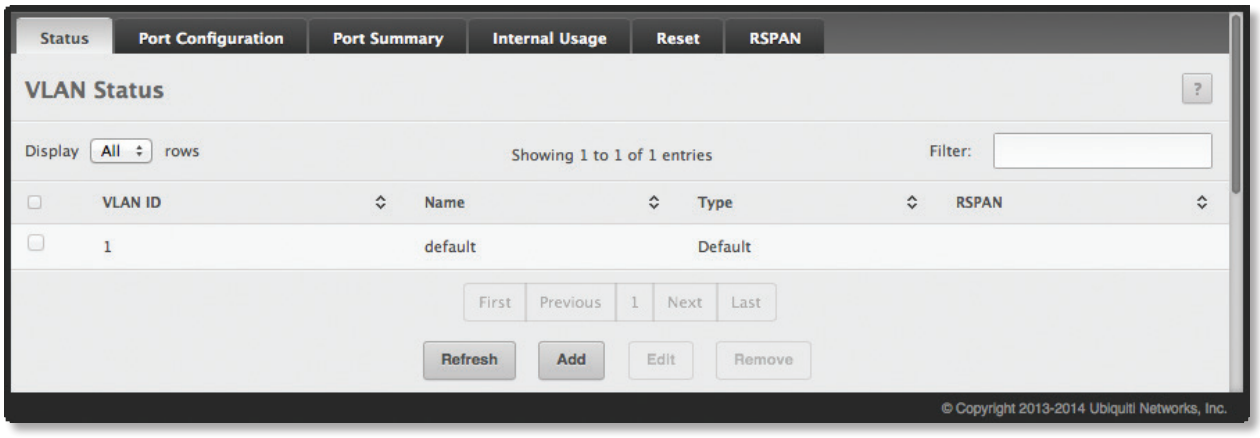

VLAN Status

VLAN Status Fields

Field	Description
VLAN ID	The VLAN Identifier (VID) of the VLAN. The range of the VLAN ID is *1* to *4093*. VLAN ID *1* is reserved for the default VLAN which is always present and cannot be edited or removed.
Name	The name of the VLAN. VLAN ID 1 is always named *default*.
Type	The VLAN type, which can be one of the following: • **Default** The default VLAN which is always present • **Static** A VLAN that you have created and configured • **Dynamic** A VLAN created by GVRP registration that you have not converted to static, and that GVRP may therefore remove.
RSPAN	Displays *Enabled* if the VLAN is configured as the Remote Switched Port Analyzer (RSPAN) VLAN; otherwise, blank. The RSPAN VLAN is used to carry mirrored traffic from source ports to a destination probe port on a remote device.

Use the buttons to perform the following tasks:


- To add a VLAN, click **Add**. In the *Add VLAN* dialog box, specify the VLAN ID(s) in the *VLAN ID or Range* field (use "**-**" or "**,**" to indicate a range of IDs or nonconsecutive IDs). Then, click **Submit** to apply the change.
- To configure a name for a VLAN or to convert a dynamic VLAN to a static VLAN, select the entry to modify and click **Edit**; then, configure the desired VLAN settings and click **Submit** to apply the changes.
- To remove one or more configured VLANs, select each entry to delete, click **Remove**, and confirm the deletion.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

VLAN Port Configuration

Use the *VLAN Port Configuration* page to configure a virtual LAN on a port.

To access the page, click **Switching** > **VLAN** > **Port Configuration** in the navigation menu.

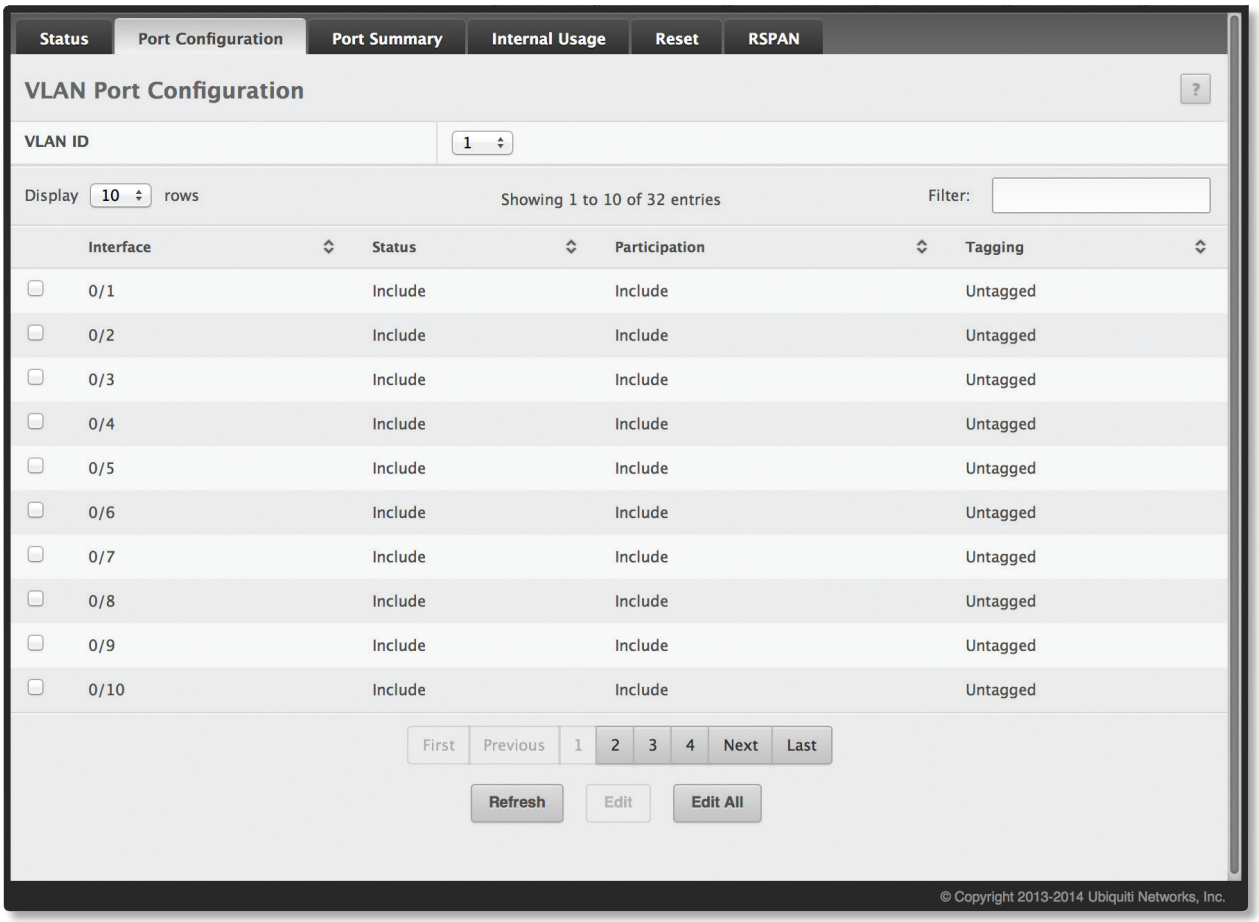

VLAN Port Configuration

VLAN Port Configuration Fields

Field	Description
VLAN ID	The menu includes the VLAN ID for all VLANs configured on the device. To view or configure settings for a VLAN, be sure to select the correct VLAN from the menu.
Interface	The interface associated with the rest of the data in the row. When editing VLAN information for one or more interfaces, this field identifies the interfaces that are being configured.
Status	The current participation mode of the interface in the selected VLAN. The *Status* value differs from the *Participation* value only when the *Participation* mode is *Auto Detect*. The *Status* is one of the following: • **Include** The port is a member of the selected VLAN. • **Exclude** The port is not a member of the selected VLAN.
Participation	The participation mode of the interface in the selected VLAN, which is one of the following: • **Include** The port is always a member of the selected VLAN. This mode is equivalent to registration fixed in the IEEE 802.1Q standard. • **Exclude** The port is never a member of the selected VLAN. This mode is equivalent to registration forbidden in the IEEE 802.1Q standard. • **Auto Detect** The port can be dynamically registered in the selected VLAN through GVRP. The port will not participate in this VLAN unless it receives a GVRP request. This mode is equivalent to registration normal in the IEEE 802.1Q standard.
Tagging	The tagging behavior for all the ports in this VLAN, which is one of the following: • **Tagged** The frames transmitted in this VLAN will include a VLAN ID tag in the Ethernet header. • **Untagged** The frames transmitted in this VLAN will be untagged.


Use the buttons to perform the following tasks:

- To configure a specific interface in the selected VLAN, select the interface's entry from table, click **Edit**, configure the fields as needed, and click **Submit** to apply the changes.
- To configure all interfaces in the selected VLAN, click **Edit All**, configure the fields as needed, and click **Submit** to apply the changes.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

VLAN Port Summary

Use the *VLAN Port Summary* page to view VLAN configuration information for all the ports on the system. To access the *VLAN Port Summary* page, click **Switching** > **VLAN** > **Port Summary** in the navigation menu.

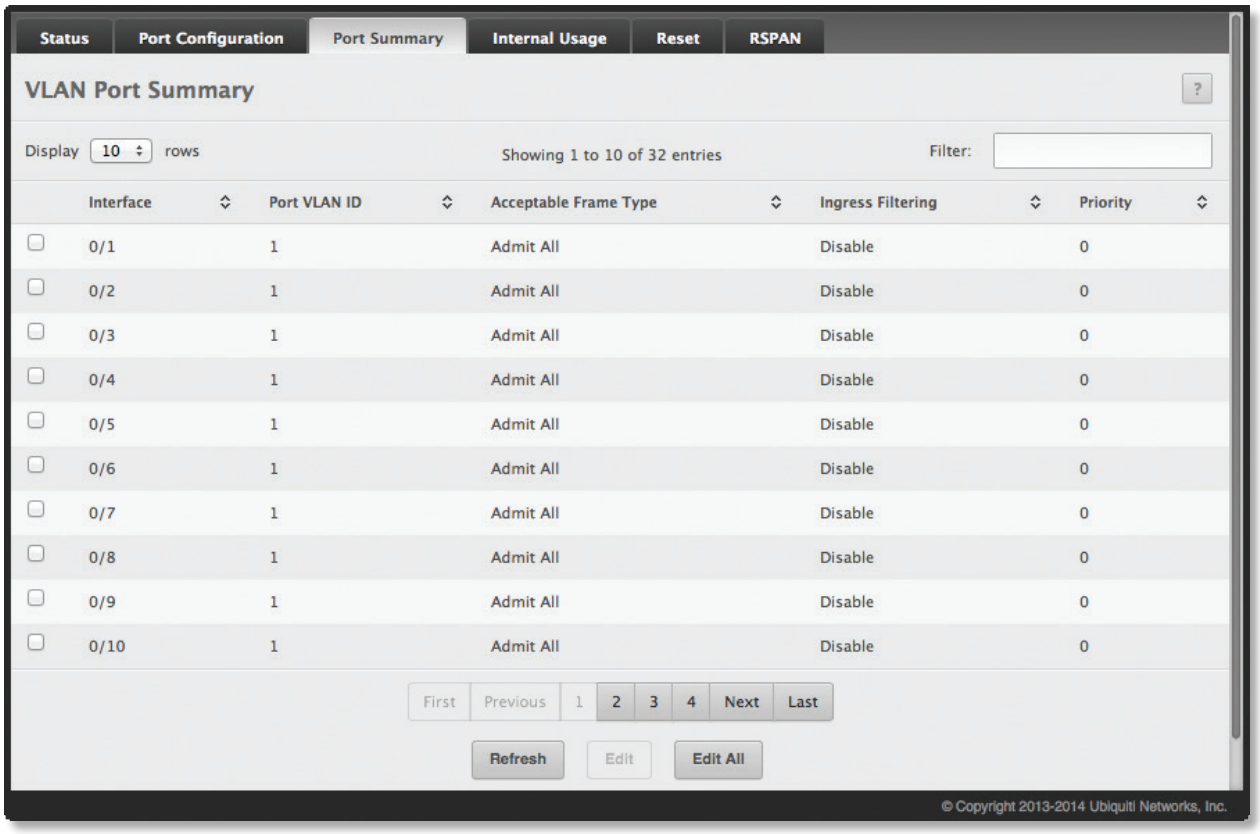

VLAN Port Summary

VLAN Port Summary Fields

Field	Description
Interface	Identifies the physical interface associated with the rest of the data in the row.
Port VLAN ID	The VLAN ID assigned to untagged or priority tagged frames received on this port. This value is also known as the Port VLAN ID (PVID). In a tagged frame, the VLAN is identified by the VLAN ID in the tag.
Acceptable Frame Types	Indicates how the interface handles untagged and priority tagged frames. The options include: • **Admit All** Untagged and priority tagged frames received on the interface are accepted and assigned the value of the Port VLAN ID for this interface. • **Only Tagged** The interface discards any untagged or priority tagged frames it receives. • **Only Untagged** The interface discards any tagged frames it receives. For all options, VLAN tagged frames are forwarded in accordance with the IEEE 802.1Q VLAN standard.
Ingress Filtering	Shows how the port handles tagged frames. • **Enable** Discards a frame if the VLAN ID in the tag identifies a VLAN to which the port does not belong. • **Disable** Accepts all tagged frames (factory default).
Priority	Identifies the default 802.1p priority assigned to untagged packets arriving at the port.

Use the buttons to perform the following tasks:


- To configure a specific port interface, select the interface's entry from table, click **Edit**, configure the fields as needed, and click **Submit** to apply the changes.
- To configure all port interfaces, click **Edit All**, configure the fields as needed, and click **Submit** to apply the changes.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

VLAN Internal Usage

Use the *VLAN Internal Usage Configuration* page to assign a Base VLAN ID for internal allocation of VLANs to the routing interface.

To access the *VLAN Internal Usage Configuration* page, click **Switching** > **VLAN** > **Internal Usage** in the navigation menu.

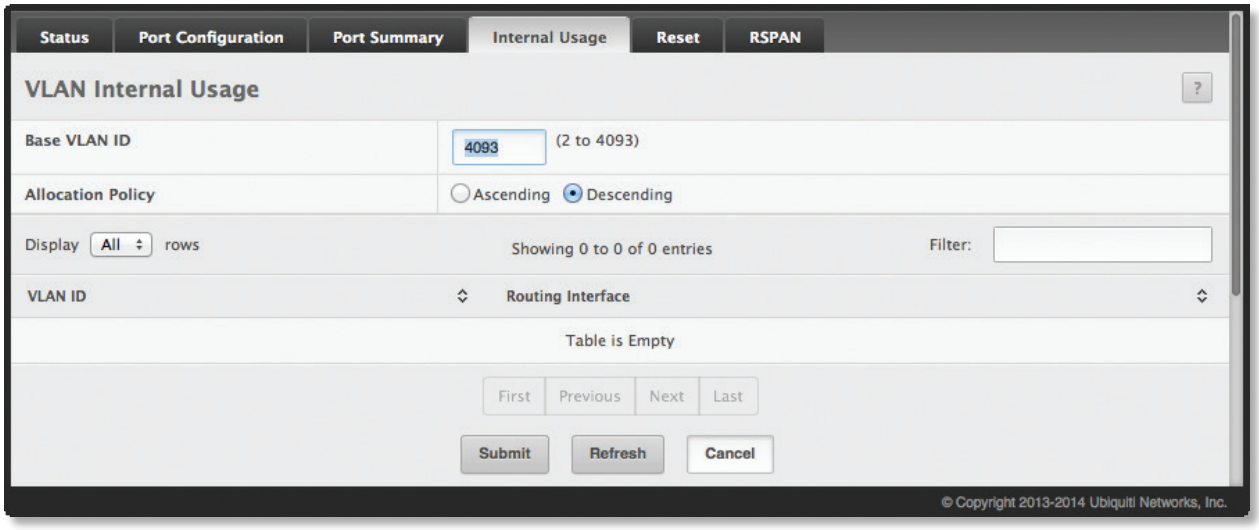

VLAN Internal Usage

VLAN Internal Usage Fields

Field	Description
Base VLAN ID	The first VLAN ID to be assigned to a port-based routing interface.
Allocation Policy	Determines whether VLAN IDs assigned to port-based routing interfaces start at the base and decrease in value (*Descending*) or start at the base and increase in value (*Ascending*).
VLAN ID	The VLAN ID assigned to a port-based routing interface. The device automatically assigns an unused VLAN ID when the routing interface is created.
Routing Interface	The port-based routing interface associated with the VLAN.

Use the buttons to perform the following tasks:


- If you change any information on the page, click **Submit** to apply the changes to the system.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Reset VLAN Configuration

Use the *Reset VLAN Configuration* page to return all VLAN parameters for all interfaces to the factory default values.

To access the *Reset VLAN Configuration* page, click **Switching** > **VLAN** > **Reset** in the navigation menu.

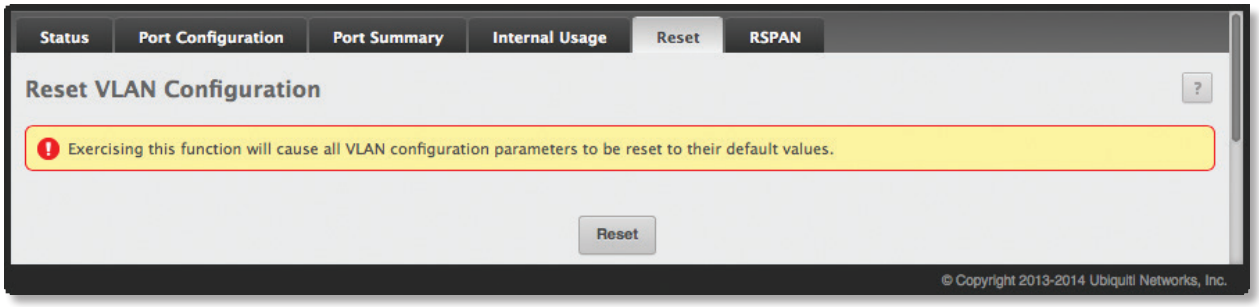

Reset VLAN Configuration

To reset the VLAN configuration, click **Reset**, and then confirm the reset by clicking **OK**. When the system indicates that all default VLAN settings have been restored, click **Close** to acknowledge the result.

Managing Voice VLANs


Voice VLAN Configuration

The voice VLAN feature enables switch ports to carry voice traffic with defined settings so that voice and data traffic are separated when coming onto the port. A voice VLAN ensures that the sound quality of an IP phone is safeguarded from deterioration when data traffic on the port is high.

The inherent isolation provided by VLANs ensures that inter-VLAN traffic is under management control and that network-attached clients cannot initiate a direct attack on voice components. A QoS protocol based on the IEEE 802.1P class-of-service (CoS) protocol uses classification and scheduling to send network traffic from the switch in a predictable manner. The system uses the source MAC of the traffic traveling through the port to identify the IP phone data flow.

Voice VLAN is enabled per-port basis. A port can participate only in one voice VLAN at a time. The Voice VLAN feature is disabled by default.

To display the *Voice VLAN Configuration* page, click **Switching** > **Voice VLAN** > **Configuration**.

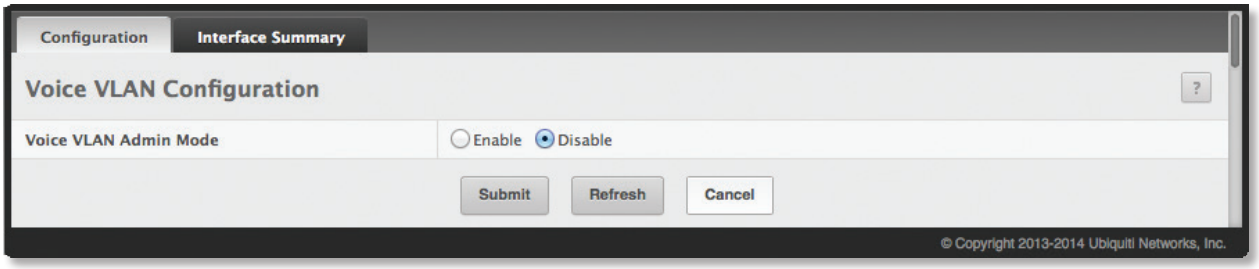

Voice VLAN Configuration

Voice VLAN Configuration Fields

Field	Description
Voice VLAN Admin Mode	The administrative mode of the Voice VLAN feature. Click *Enable* or *Disable* (default) to administratively turn the Voice VLAN feature on or off for all ports. When Voice VLAN is enabled globally and configured on interfaces that carry voice traffic, this feature can help ensure that the sound quality of an IP phone does not deteriorate when data traffic on the port is high.

Use the buttons to perform the following tasks:


- If you make any changes, click **Submit** to apply the change to the system.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Voice VLAN Interface Summary

Use this page to configure the per-port settings for the Voice VLAN feature. When Voice VLAN is configured on a port that receives both voice and data traffic, it can help ensure that the voice traffic has priority.

To display the *Voice VLAN Interface Summary* page, click **Switching > Voice VLAN > Interface Summary**.

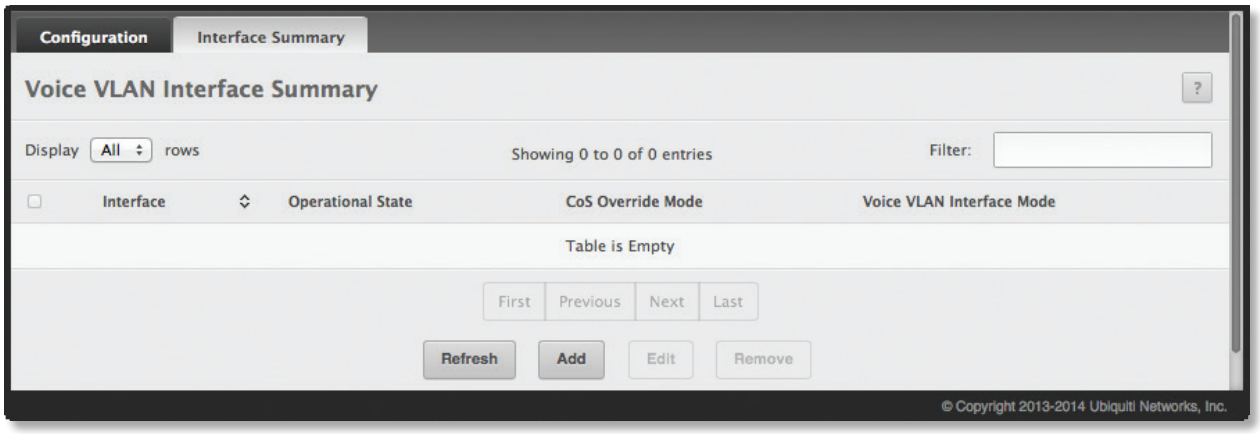

Voice VLAN Interface Summary

Voice VLAN Interface Summary Fields

Field	Description
Interface	The interface associated with the rest of the data in the row. When adding a Voice VLAN configuration to a port, the Interface menu allows you to select the port to configure. Only interfaces that have not been configured with Voice VLAN settings can be selected from the menu.
Operational State	The operational status of the Voice VLAN feature on the interface. To be enabled, Voice VLAN must be globally enabled and enabled on the interface. Additionally, the interface must be up and have a link.
CoS Override Mode	The Class of Service override mode: • **Enabled** The port ignores the 802.1p priority value in the Ethernet frames it receives from connected devices. • **Disabled** The port trusts the priority value in the received frame.
Voice VLAN Interface Mode	Indicates how an IP phone connected to the port should send voice traffic: • **VLAN ID** Forward voice traffic in the specified voice VLAN. • **Dot1p** Tag voice traffic with the specified 802.1p priority value. • **None** Use the settings configured on the IP phone to send untagged voice traffic. • **Untagged** Send untagged voice traffic. • **Disable** Operationally disables the Voice VLAN feature on the interface.
Add Voice VLAN and Edit Voice VLAN dialog boxes – When you click **Add** or **Edit**, the following configurable field is displayed:	
Voice VLAN Interface Value	When adding or editing Voice VLAN settings for an interface and either **VLAN ID** or **Dot1p** is selected as the *Voice VLAN Interface Mode*, specify the voice VLAN ID or the Dot1p priority value that the connected IP phone should use for voice traffic.

Use the buttons to perform the following tasks:

- To configure Voice VLAN settings on a port, click **Add**. Select the interface to configure from the *Interface* drop-down menu, configure the remaining settings, and then click **Submit** to apply the changes.
- To change the Voice VLAN settings, select the interface to modify and click **Edit**, configure the settings as needed, and then click **Submit** to apply the changes.
- To remove the Voice VLAN configuration from one or more ports, select each entry to delete, click **Remove**, and confirm the deletion.
- Click **Refresh** to refresh the page with the most current data from the switch.


To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Creating MAC Filters

Static MAC filtering allows you to associate a MAC address with a VLAN and set of source ports and destination ports. (The availability of source and destination port filters is subject to platform restrictions). Any packet with a static MAC address in a specific VLAN is admitted only if the ingress port is included in the set of source ports; otherwise the packet is dropped. If admitted, the packet is forwarded to all the ports in the destination list.

MAC Filter Configuration

Use the *MAC Filter Configuration* page to associate a MAC address with a VLAN and one or more source and/or destination ports. To access the page, click **Switching** > **Filters** > **MAC Filters** in the navigation menu.

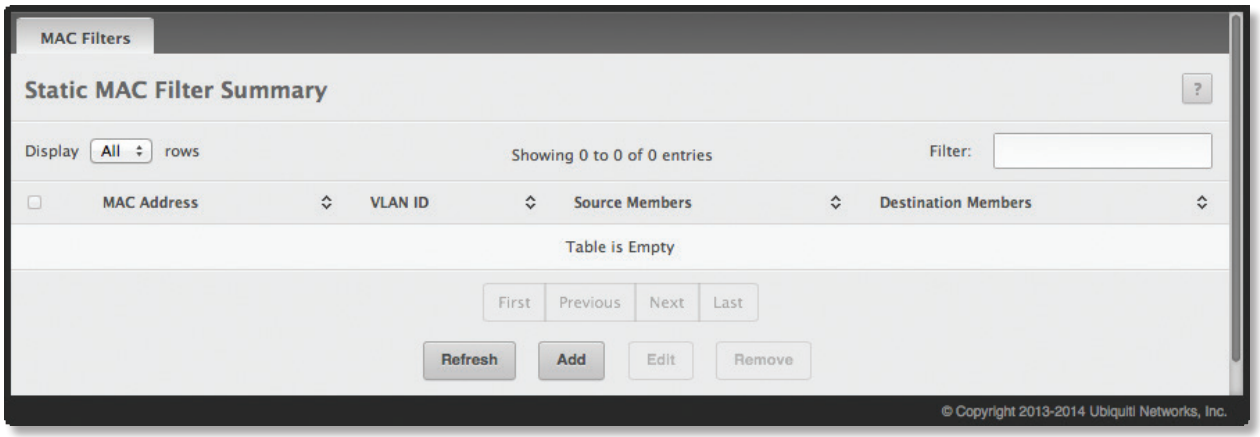

MAC Filter Configuration

MAC Filter Configuration Fields

Field	Description
MAC Address	The MAC address of the filter. The destination MAC address of an Ethernet frame must match this value to be considered for the filter. When adding or editing a filter, note that you cannot configure the following MAC addresses in this field: • 00:00:00:00:00:00 • 01:80:C2:00:00:00 to 01:80:C2:00:00:0F • 01:80:C2:00:00:20 to 01:80:C2:00:00:21 • FF:FF:FF:FF:FF:FF
VLAN ID	The VLAN ID associated with the filter. The VLAN ID is used with the MAC address to fully identify the frames to filter.
Source Members	The port(s) included in the inbound filter. If a frame with the MAC address and VLAN ID specified by the filter arrives on a port in the *Source Members* list, it is forwarded to a port in the *Destination Members* list. If the frame that meets the filter criteria arrives on a port that is not in the *Source Members* list, it is dropped.
Destination Members	The port(s) included in the outbound filter. A frame with the MAC address and VLAN ID combination specified in the filter is transmitted only out of ports in the list.

Use the buttons to perform the following tasks:

- To add a MAC filter, click **Add**. In the *Add Static MAC Filter* dialog box, enter a valid *MAC Address*, select a *VLAN ID* (the drop-down box only lists VLANs currently configured on the system), select the desired source and destination port(s) from the *Available Port List* fields (press and hold CTRL to select multiple ports), and click » to move the selected ports to the *Source Members* and *Destination Members* fields. Then, click **Submit** to apply the changes.
- To change the source and/or destination members for an existing filter, select the filter's entry from the table, and click **Edit**. When you have completed the changes, click **Submit** to apply the changes.
- To remove a filter, select it from the table, click **Remove**, and confirm the deletion.
- Click **Refresh** to refresh the page with the most current data from the switch.


To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

GARP Configuration

Use this page to set the administrative mode for the features that use the Generic Attribute Registration Protocol (GARP), including GARP VLAN Registration Protocol (GVRP) and GARP Multicast Registration Protocol (GMRP). GARP is a general-purpose protocol that registers any network connectivity or membership-style information. GARP defines a set of switches interested in a given network attribute, such as VLAN ID or multicast address.

GARP Switch Configuration

To access the *GARP Switch Configuration* page, click **Switching** > **GARP** > **Switch** in the navigation menu.

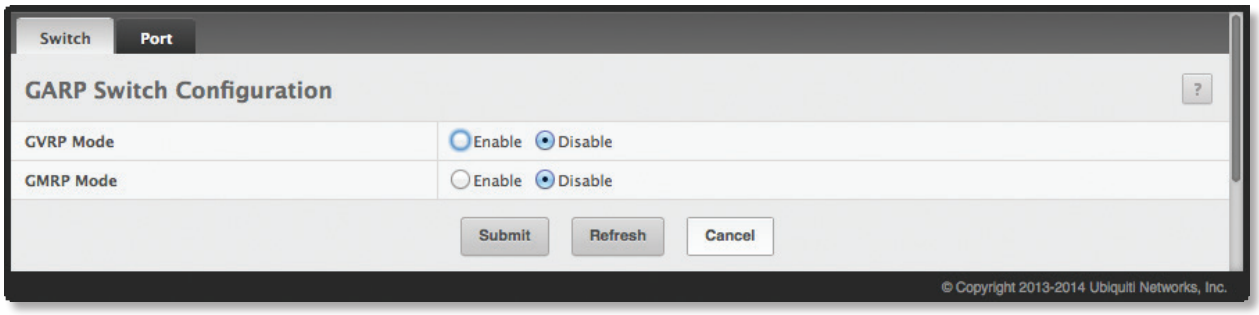

GARP Switch Configuration

GARP Switch Configuration Fields

Field	Description
GVRP Mode	The administrative mode of GVRP on the system. When set to *Enable*, GVRP can help dynamically manage VLAN memberships on trunk ports.
GMRP Mode	The administrative mode of GMRP on the system. When set to *Enable*, GMRP can help control the flooding of multicast traffic by keeping track of group membership information. GMRP is similar to IGMP snooping in its purpose, but IGMP snooping is more widely used. GMRP must be running on both the host and the switch to function properly.

Use the buttons to perform the following tasks:


- If you make any changes to this page, click **Submit** to apply the changes.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

GARP Port Configuration

Use this page to set the per-interface administrative mode for GARP VLAN Registration Protocol (GVRP) and GARP Multicast Registration Protocol (GMRP). On this page, you can also set the GARP timers for each interface. GVRP and GMRP use the same set of GARP timers to specify the amount of time to wait before transmitting various GARP messages.

To access the *GARP Port Configuration* page, click **Switching** > **GARP** > **Port** in the navigation menu.

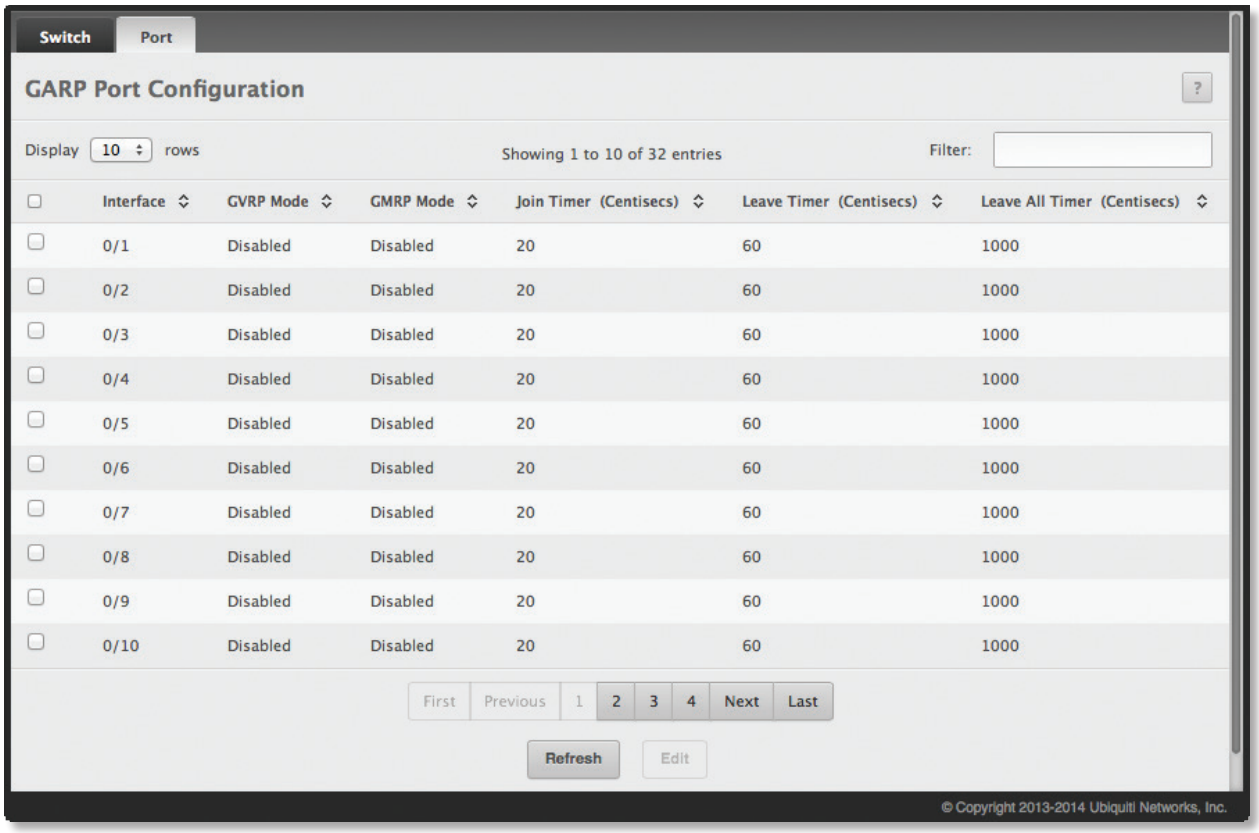

GARP Port Configuration

GARP Port Configuration Fields

Field	Description
Interface	The interface associated with the rest of the data in the row. When configuring one or more interfaces in the Edit GARP Port Configuration window, this field identifies the interfaces that are being configured.
GVRP Mode	The administrative mode of GVRP on the interface. When enabled, GVRP can help dynamically manage VLAN memberships on trunk ports. GVRP must also be enabled globally for the protocol to be active on the interface. When disabled, the protocol will not be active on the interface, and the GARP timers have no effect.
GMRP Mode	The administrative mode of GMRP on the interface. When enabled, GMRP can help control the flooding of multicast traffic by keeping track of group membership information. GMRP must also be enabled globally for the protocol to be active on the interface. When disabled, the protocol will not be active on the interface, and the GARP timers have no effect.
Join Timer (Centisecs)	The amount of time between the transmission of GARP PDUs registering (or re-registering) membership for a VLAN or multicast group.
Leave Timer (Centisecs)	The amount of time to wait after receiving an unregister request for a VLAN or multicast group before deleting the associated entry. This timer allows time for another station to assert registration for the same attribute in order to maintain uninterrupted service.
Leave All Timer (Centisecs)	The amount of time to wait before sending a LeaveAll PDU after the GARP application has been enabled on the interface or the last LeaveAll PDU was sent. A LeaveAll PDU indicates that all registrations will shortly be deregistered. Participants will need to rejoin in order to maintain registration.

To change the GARP settings for one or more interfaces, select each interface to configure and click **Edit**. The same settings are applied to all selected interfaces.

Click **Refresh** to refresh the page with the most current data from the switch.


Configuring DHCP Snooping

DHCP snooping is a security feature that monitors DHCP messages between a DHCP client and DHCP servers to filter harmful DHCP messages and to build a bindings database of {MAC address, IP address, VLAN ID, port} tuples that are considered authorized. You can enable DHCP snooping globally and on specific VLANs, and configure ports within the VLAN to be trusted or untrusted. If a DHCP message arrives on an untrusted port, DHCP snooping filters messages that are not from authorized DHCP clients. DHCP server messages are forwarded only through trusted ports.

Global DHCP Snooping Configuration

Use this page to view and configure the global settings for DHCP Snooping.

To access the *Global DHCP Snooping Configuration* page, click **Switching** > **DHCP Snooping** > **Base** > **Global** in the navigation menu.

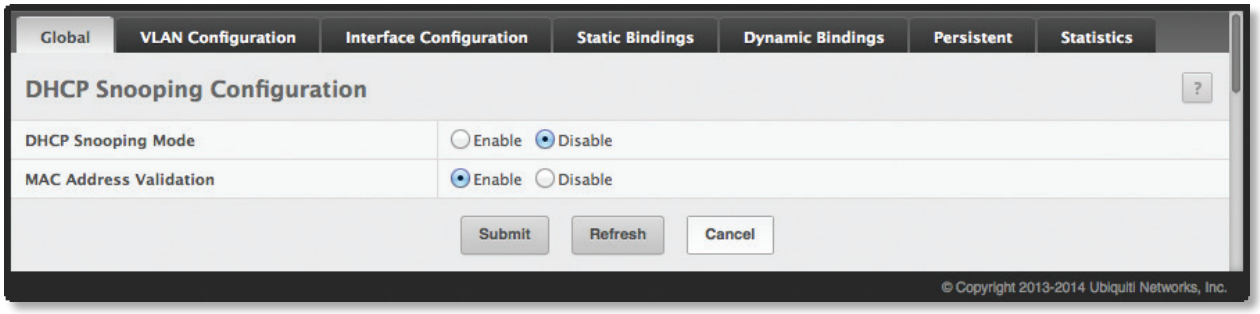

Global DHCP Snooping Configuration

Global DHCP Snooping Configuration Fields

Field	Description
DHCP Snooping Mode	Used to *Enable* or *Disable* DHCP snooping on the device.
MAC Address Validation	Used to *Enable* or *Disable* the verification of the sender MAC address for DHCP snooping. When enabled, the device checks packets that are received on untrusted interface to verify that the MAC address and the DHCP client hardware address match. If the addresses do not match, the device drops the packet.

Use the buttons to perform the following tasks:


- If you make any changes to this page, click **Submit** to apply the changes.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

DHCP Snooping VLAN Configuration

Use this page to view and configure the DHCP snooping settings on VLANs that exist on the device. DHCP snooping can be configured on switching VLANs and routing VLANs. For Layer-2 (non-routing) VLANs, DHCP snooping forwards valid DHCP client messages received on the VLANs. The message is forwarded on all trusted interfaces in the VLAN. When a DHCP packet is received on a routing VLAN, the DHCP snooping application applies its filtering rules and updates the bindings database. If a client message passes filtering rules, the message is placed into the software forwarding path, where it may be processed by the DHCP relay agent, the local DHCP server, or forwarded as an IP packet.

To access the *DHCP Snooping VLAN Configuration* page, click **Switching** > **DHCP Snooping** > **Base** > **VLAN Configuration** in the navigation menu.

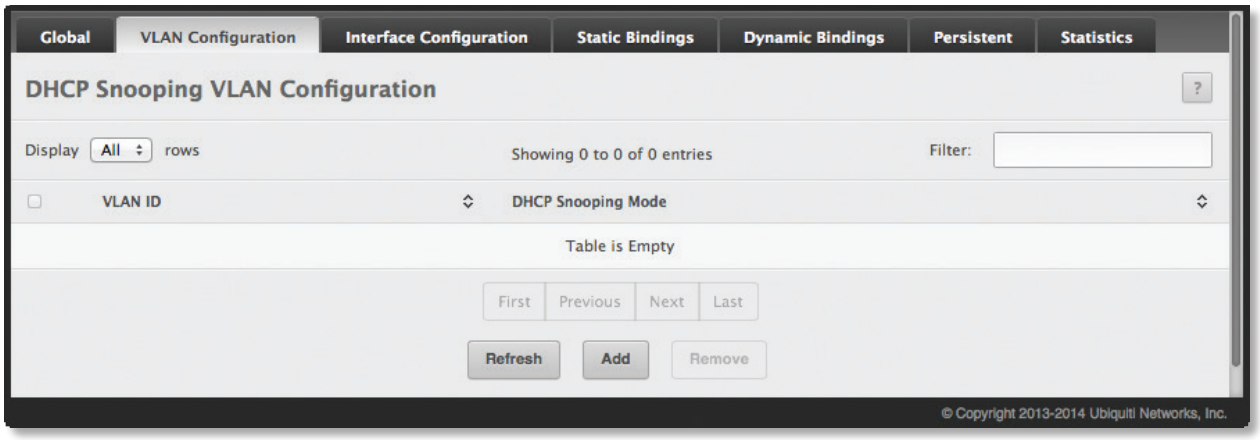

DHCP Snooping VLAN Configuration

DHCP Snooping VLAN Configuration Fields

Field	Description
VLAN ID	The VLAN ID that is enabled for DHCP snooping. In the Add DHCP Snooping VLAN Configuration window, this field lists the VLAN ID of all VLANs that exist on the device.
DHCP Snooping Mode	The current administration mode (*Enabled* or *Disabled*) of DHCP snooping for the VLAN. Only VLANs that are enabled for DHCP snooping appear in the list.

Use the buttons to perform the following tasks:


- To enable a VLAN for DHCP snooping, click **Add** and select the VLAN (press and hold CTRL to select multiple VLANs). Then, click **Submit** to apply the changes.
- To disable DHCP snooping on one or more VLANs, select each entry to delete and click **Remove**. You must confirm the action before the entry is deleted.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

DHCP Snooping Interface Configuration

Use this page to view and configure the DHCP snooping settings for each interface. The DHCP snooping feature processes incoming DHCP messages. For DHCPRELEASE and DHCPDECLINE messages, the feature compares the receive interface and VLAN with the client's interface and VLAN in the binding database. If the interfaces do not match, the application logs the event (when logging of invalid packets is enabled) and drops the message. If MAC address validation is globally enabled, messages that pass the initial validation are checked to verify that the source MAC address and the DHCP client hardware address match. Where there is a mismatch, DHCP snooping logs the event (when logging of invalid packets is enabled) and drops the packet. To change the DHCP Snooping settings for one or more interfaces, select each entry to modify and click **Edit**. The same settings are applied to all selected interfaces.

To access the *DHCP Snooping Interface Configuration* page, click **Switching** > **DHCP Snooping** > **Base** > **Interface Configuration** in the navigation menu.

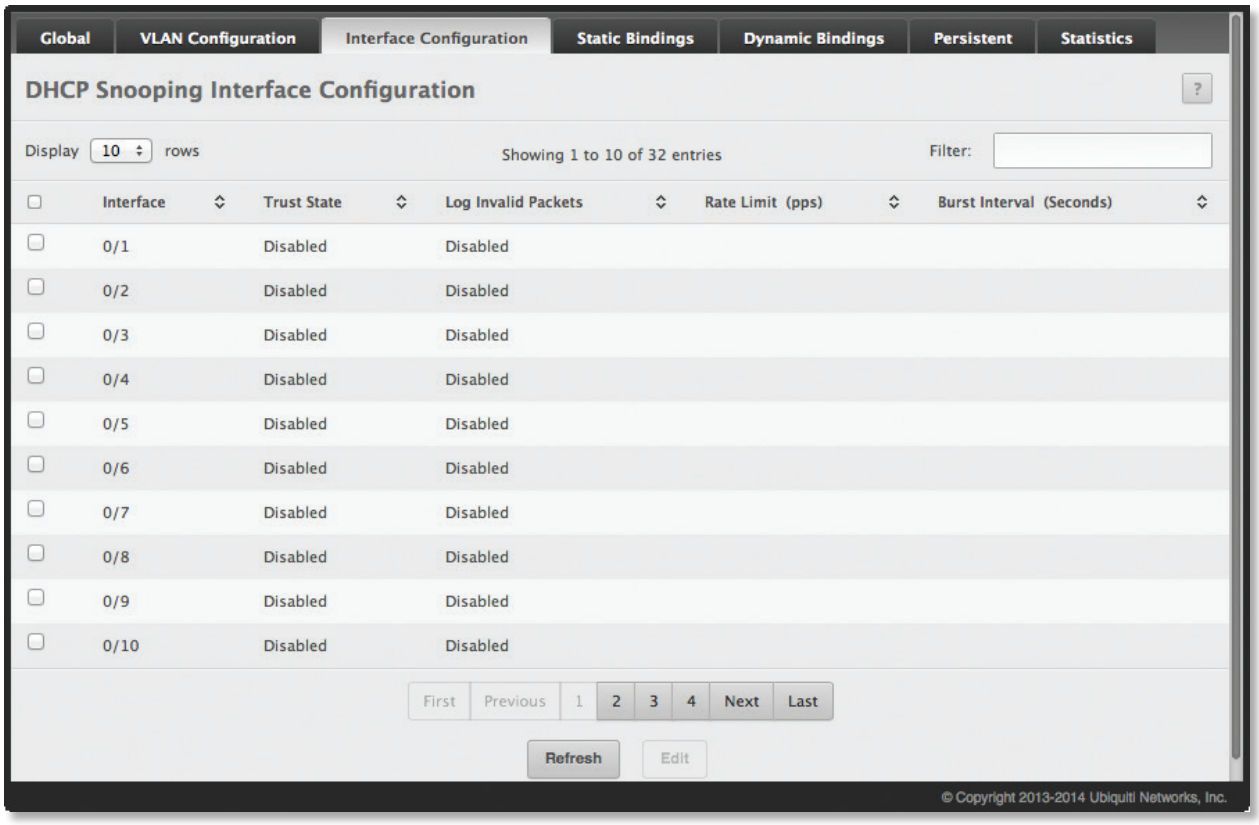

DHCP Snooping Interface Configuration

DHCP Snooping Interface Configuration Fields

Field	Description
Interface	The interface associated with the rest of the data in the row. When configuring the settings for one or more interfaces, this field identifies each interface that is being configured.

Trust State	The trust state configured on the interface. The trust state is one of the following:
	• **Disabled** The interface is considered to be untrusted and could potentially be used to launch a network attack. DHCP server messages are checked against the bindings database. On untrusted ports, DHCP snooping enforces the following security rules:
	  • DHCP packets from a DHCP server (DHCPOFFER, DHCPACK, DHCPNAK, DHCPRELEASEQUERY) are dropped.
	  • DHCPRELEASE and DHCPDECLINE messages are dropped if the MAC address is in the snooping database but the binding's interface is other than the interface where the message was received.
	  • DHCP packets are dropped when the source MAC address does not match the client hardware address if MAC Address Validation is globally enabled.
	• **Enabled** The interface is considered trusted and forwards DHCP server messages without validation.

Log Invalid Packets	The administrative mode of invalid packet logging on the interface. If enabled, the DHCP snooping feature generates a log message when an invalid packet is received and dropped by the interface.
Rate Limit (pps)	The rate limit value for DHCP packets received on the interface. To prevent DHCP packets from being used as a DoS attack when DHCP snooping is enabled, the snooping application enforces a rate limit for DHCP packets received on untrusted interfaces. If the incoming rate of DHCP packets exceeds the value of this object during the amount of time specified for the burst interval, the port will be shut down. You must administratively enable the port to allow it to resume traffic forwarding.
Burst Interval (Seconds)	The burst interval value for rate limiting on this interface. If the rate limit is unspecified, then burst interval has no meaning.

Use the buttons to perform the following tasks:


- To edit DHCP snooping on one or more interfaces, select each interface entry, click **Edit**, change the settings as needed, and click **Submit** to apply the changes.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

DHCP Snooping Static Bindings

Use this page to view, add, and remove static bindings in the DHCP snooping bindings database.

To access the *DHCP Snooping Static Bindings* page, click **Switching** > **DHCP Snooping** > **Base** > **Static Bindings** in the navigation menu.

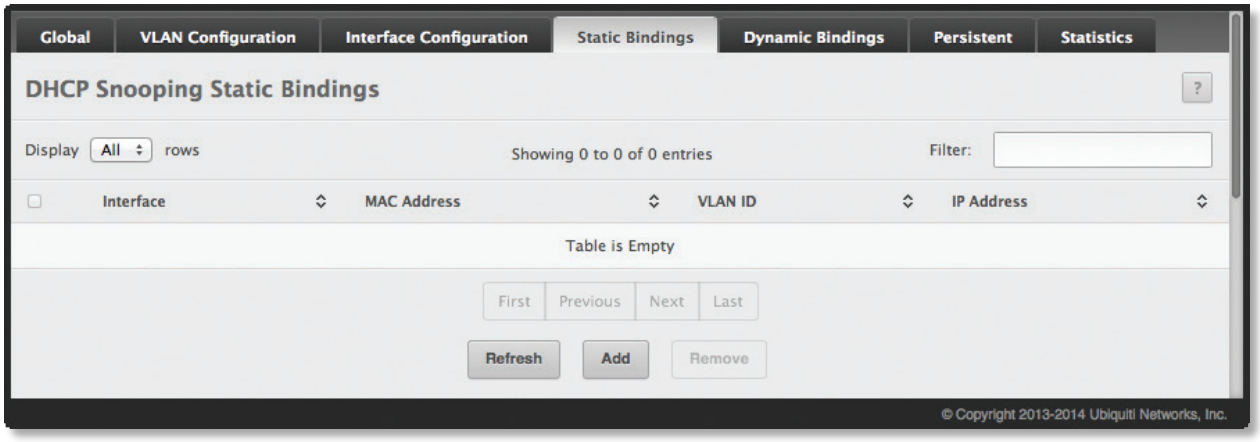

DHCP Snooping Static Bindings

DHCP Snooping Static Bindings Fields

Field	Description
Interface	The interface on which the DHCP client is authorized.
MAC Address	The MAC address associated with the DHCP client. This is the Key to the binding database.
VLAN ID	The ID of the VLAN the client is authorized to use.
IP Address	The IP address of the client.

Use the buttons to perform the following tasks:


- To add a DHCP Snooping static binding, click **Add**. Then, enter a valid MAC address, select a VLAN ID from the drop-down menu, enter an IP address, and click **Submit** to apply the changes.
- To remove a DHCP snooping static binding, select the entry from the table, click **Remove**, and confirm the operation.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

DHCP Snooping Dynamic Bindings

Use this page to view and clear dynamic bindings in the DHCP snooping bindings database. The DHCP snooping feature uses DHCP messages to build and maintain the bindings database. The bindings database includes data for clients only on untrusted ports. DHCP snooping creates a tentative binding from DHCP DISCOVER and REQUEST messages. Tentative bindings tie a client to an interface (the interface where the DHCP client message was received). Tentative bindings are completed when DHCP snooping learns the client's IP address from a DHCP ACK message on a trusted port. DHCP snooping removes bindings in response to DECLINE, RELEASE, and NACK messages. The DHCP snooping feature ignores the ACK messages as a reply to the DHCP Inform messages received on trusted ports.

To access the *DHCP Snooping Dynamic Bindings* page, click **Switching** > **DHCP Snooping** > **Base** > **Dynamic Bindings** in the navigation menu.

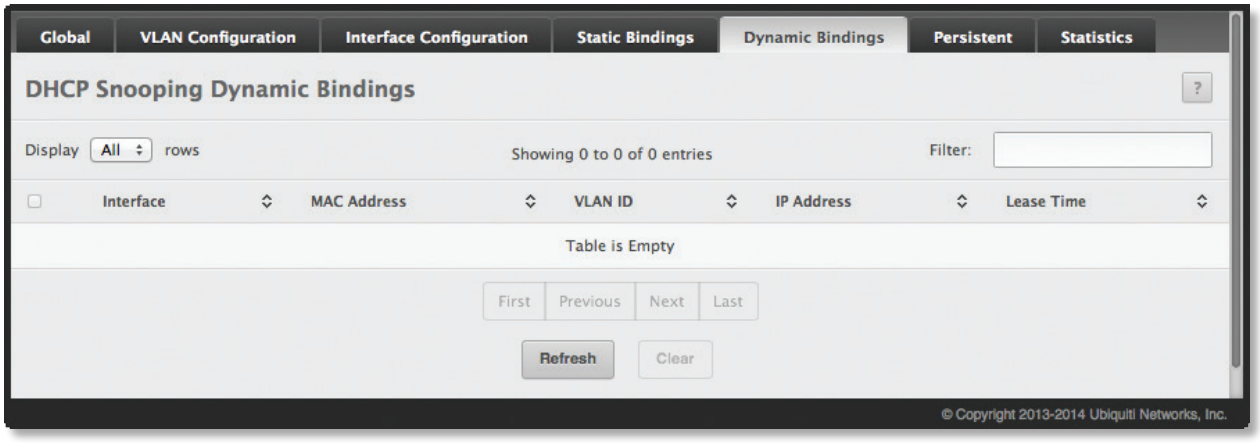

DHCP Snooping Dynamic Bindings

DHCP Snooping Dynamic Bindings Fields

Field	Description
Interface	The interface on which the DHCP client message was received.
MAC Address	The MAC address associated with the DHCP client that sent the message. This is the key to the binding database.
VLAN ID	The VLAN ID of the client interface.
IP Address	The IP address assigned to the client by the DHCP server.
Lease Time	The remaining IP address lease time for the client.

Use the buttons to perform the following tasks:


- To remove one or more entries in the database, select each entry to delete and click **Clear**. You must confirm the action before the entry is deleted.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

DHCP Snooping Persistent Configuration

Use this page to configure the persistent location of the DHCP snooping bindings database. The bindings database can be stored locally on the device or on a remote system somewhere else in the network. The device must be able to reach the IP address of the remote system to send bindings to a remote database.

To access the *DHCP Snooping Persistent Configuration* page, click **Switching** > **DHCP Snooping** > **Base** > **Persistent** in the navigation menu.

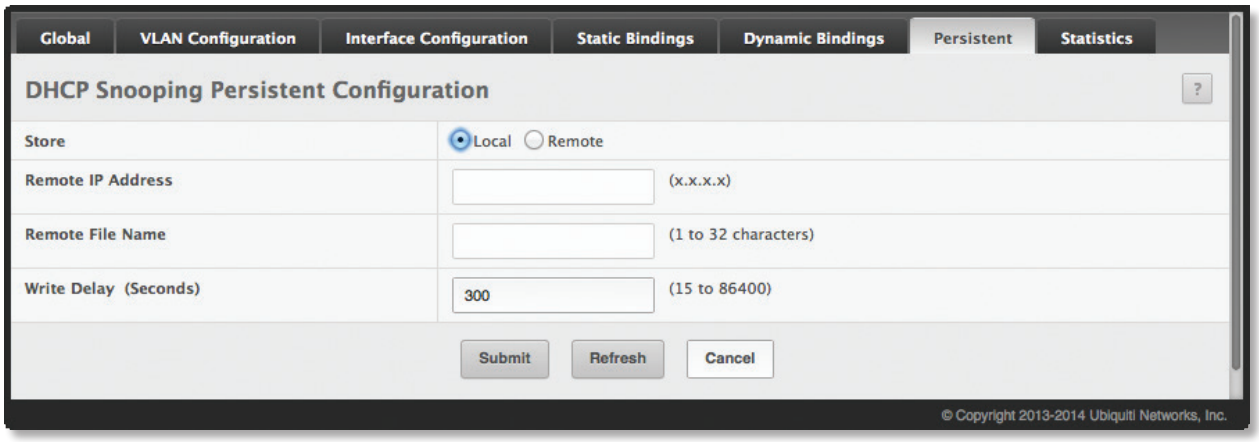

DHCP Snooping Persistent Configuration

DHCP Snooping Persistent Configuration Fields

Field	Description
Store	The location of the DHCP snooping bindings database, which is either locally on the device (*Local*) or on a remote system (*Remote*).
Remote IP Address	The IP address of the system on which the DHCP snooping bindings database will be stored. This field is available only if *Remote* is selected in the *Store* field.
Remote File Name	The file name of the DHCP snooping bindings database in which the bindings are stored. This field is available only if *Remote* is selected in the *Store* field.
Write Delay (Seconds)	The amount of time to wait between writing bindings information to persistent storage. This allows the device to collect as many entries as possible (new and removed) before writing them to the persistent file.

Use the buttons to perform the following tasks:


- If you make any changes to this page, click **Submit** to apply the changes.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

DHCP Snooping Statistics

Use this page to configure the persistent location of the DHCP snooping bindings database. The bindings database can be stored locally on the device or on a remote system somewhere else in the network. The device must be able to reach the IP address of the remote system to send bindings to a remote database.

To access the *DHCP Snooping Statistics* page, click **Switching** > **DHCP Snooping** > **Base** > **Statistics** in the navigation menu.

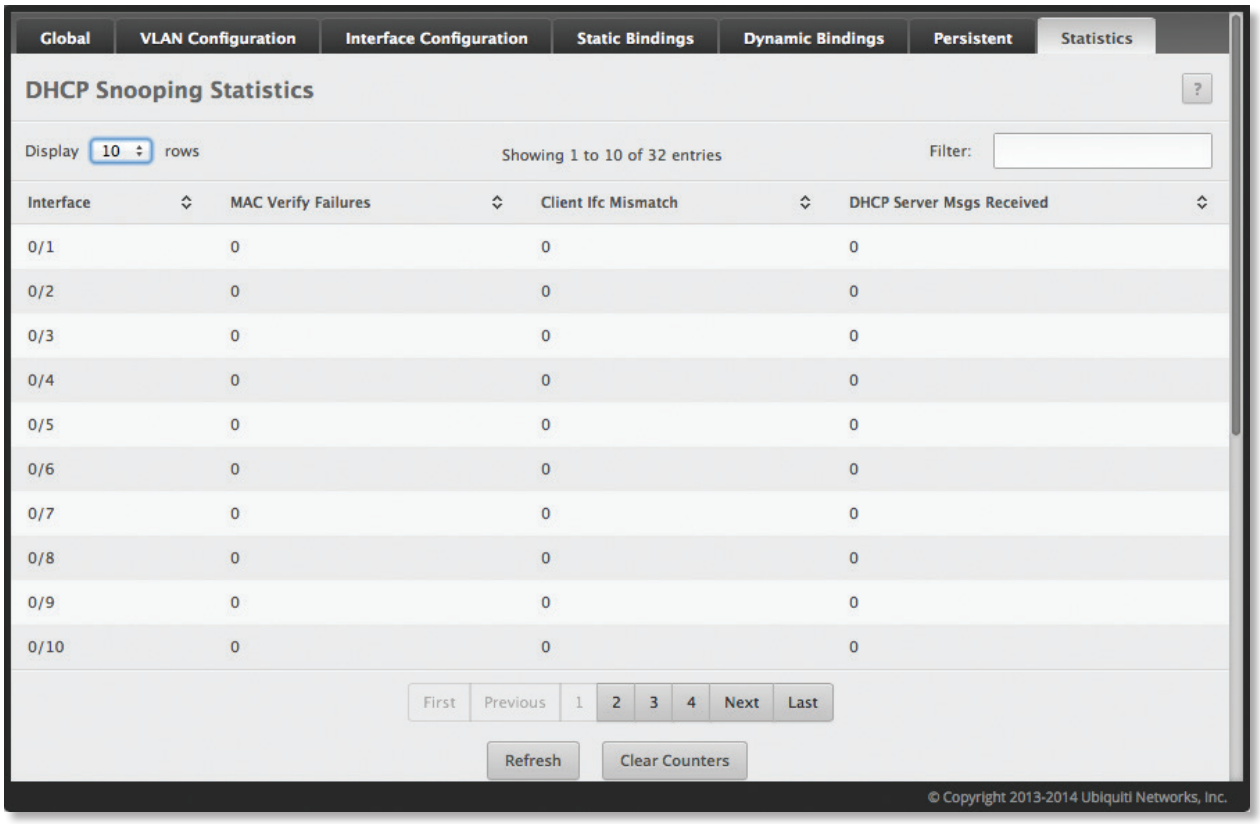

DHCP Snooping Statistics

DHCP Snooping Statistics Fields

Field	Description
Interface	The interface associated with the rest of the data in the row.
MAC Verify Failures	The number of DHCP messages that were dropped because the source MAC address and client hardware address did not match. MAC address verification is performed only if it is globally enabled.
Client Ifc Mismatch	The number of packets that were dropped by DHCP snooping because the interface and VLAN on which the packet was received does not match the client's interface and VLAN information stored in the binding database.
DHCP Server Msgs Received	The number of DHCP server messages (DHCPOFFER, DHCPACK, DHCPNAK, DHCPRELEASEQUERY) that have been dropped on an untrusted port.

Use the buttons to perform the following tasks:

- To reset the statistics to zero for one or more interfaces, select each interface with the data to reset and click **Clear Counters**. You must confirm the action before the counters are reset.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Configuring IGMP Snooping

Internet Group Management Protocol (IGMP) Snooping is a feature that allows a switch to forward multicast traffic intelligently on the switch. Multicast IP traffic is traffic that is destined to a host group. Host groups are identified by class D IP addresses, which range from 224.0.0.0 to 239.255.255.255. Based on the IGMP query and report messages, the switch forwards traffic only to the ports that request the multicast traffic. This prevents the switch from broadcasting the traffic to all ports and possibly affecting network performance.


A traditional Ethernet network may be separated into different network segments to prevent placing too many devices onto the same shared media. Bridges and switches connect these segments. When a packet with a broadcast or multicast destination address is received, the switch will forward a copy into each of the remaining network segments in accordance with the IEEE MAC Bridge standard. Eventually, the packet is made accessible to all nodes connected to the network.

This approach works well for broadcast packets that are intended to be seen or processed by all connected nodes. In the case of multicast packets, however, this approach could lead to less efficient use of network bandwidth, especially if the packets are for only a small number of nodes. Packets are flooded into network segments where no node has any interest in receiving them. While nodes rarely incur any processing overhead to filter packets addressed to unrequested group addresses, they are unable to transmit new packets onto the shared media for the period of time that the multicast packet is flooded. The problem of wasting bandwidth is even worse when the LAN segment is not shared, for example in Full Duplex links.

Allowing switches to snoop IGMP packets is a creative effort to solve this problem. The switch uses the information in the IGMP packets as they are being forwarded throughout the network to determine which segments should receive packets directed to the group address.

Global Configuration and Status

Use the *IGMP Snooping Global Configuration and Status* page to enable IGMP snooping on the switch and view information about the current IGMP configuration. To access the page, click **Switching** > **IGMP Snooping** > **Configuration and Status** in the navigation menu.

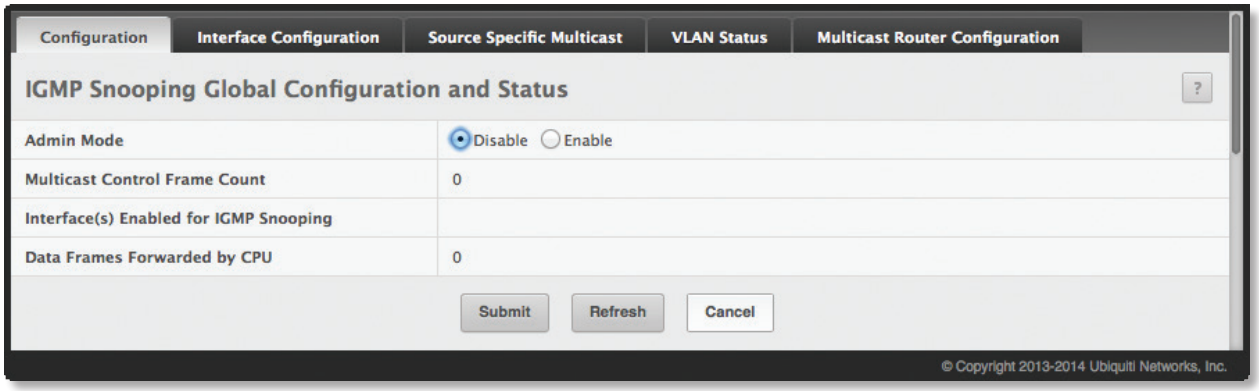

IGMP Snooping Global Configuration and Status

IGMP Snooping Global Configuration and Status Fields

Field	Description
Admin Mode	Select the administrative mode for IGMP Snooping for the switch. The default is *Disable*.
Multicast Control Frame Count	Shows the number of multicast control frames that have been processed by the CPU.
Interfaces Enabled for IGMP Snooping	Lists the interfaces currently enabled for IGMP Snooping. To enable interfaces for IGMP snooping, see **"Interface Configuration" on page 145**.
Data Frames Forwarded by CPU	Shows the number of multicast control frames processed by the CPU.

Use the buttons to perform the following tasks:


- If you make any changes to this page, click **Submit** to apply the changes.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Interface Configuration

Use the *IGMP Snooping Interface Configuration* page to configure IGMP snooping settings on specific interfaces.

To access the page, click **Switching** > **IGMP Snooping** > **Interface Configuration** in the navigation menu.

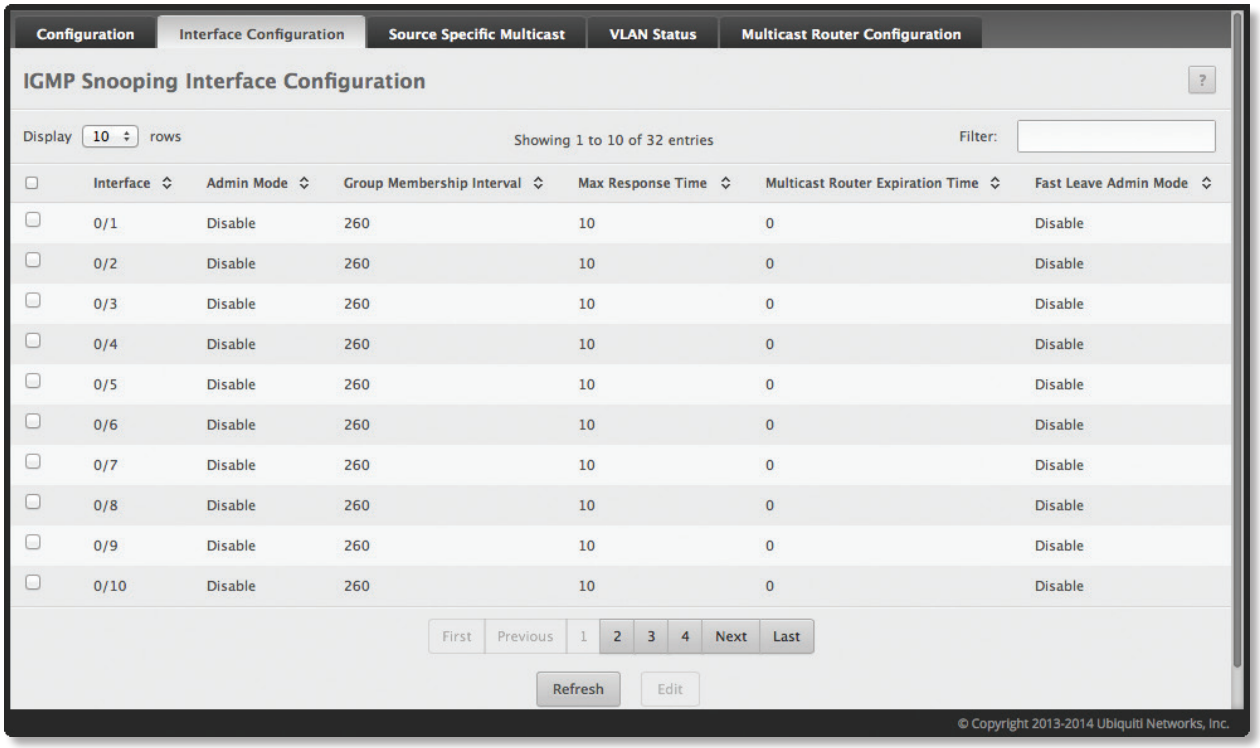

IGMP Snooping Interface Configuration

IGMP Snooping Interface Configuration Fields

Field	Description
Interface	The physical or LAG interface.
Admin Mode	The interface mode for the selected interface for IGMP Snooping for the switch. The default is *Disable*. IGMP snooping must be enabled globally and on an interface for the interface to be able to snoop IGMP packets to determine which segments should receive multicast packets directed to the group address.
Group Membership Interval	The amount of time in seconds that the interface should wait for a report for a particular group on a particular interface before IGMP snooping deletes that interface from the group. The valid range is from *2* to *3600* seconds. The default is *260* seconds.
Max Response Time	The amount of time in seconds that the interface should wait after sending a query if it does not receive a report for a particular group on that interface. The value must be greater or equal to *1* and less than the *Group Membership Interval* in seconds. The default is *10* seconds.
Multicast Router Expiration Time	The amount of time in seconds that the interface should wait to receive a query on an interface before it is removed from the list of interfaces with multicast routers attached. The valid range is from *0* to *3600* seconds. The default is *0* seconds (indicates an infinite timeout; i.e., no expiration).
Fast Leave Admin Mode	The Fast Leave mode (default *Disable*) for an interface. If enabled, the interface can be immediately removed from the Layer-2 forwarding table entry upon receiving an IGMP leave message for a multicast group without first sending out MAC-based general queries.

Use the buttons to perform the following tasks:


- To edit the IGMP snooping configuration of one or more interfaces, select the interface(s), click **Edit**, and make the changes as needed. Then, click **Submit** to apply the changes.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

IGMP Snooping Source Specific Multicast

This page displays information about multicast groups discovered by snooping IGMPv3 reports.

To access the *IGMP Snooping Source Specific Multicast* page, click **Switching** > **IGMP Snooping** > **Source Specific Multicast** in the navigation menu.

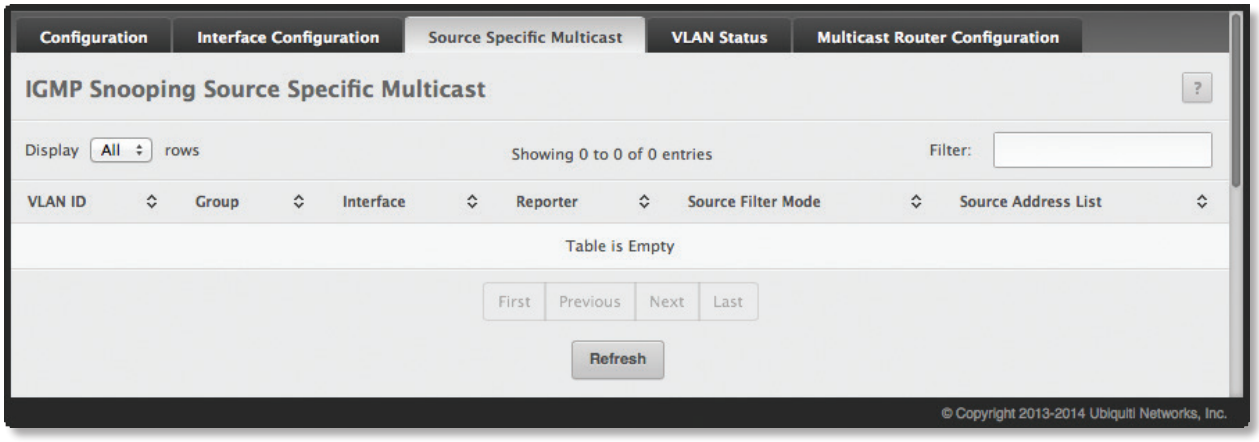

IGMP Snooping Source Specific Multicast

IGMP Snooping Source Specific Multicast Fields


Field	Description
VLAN ID	VLAN on which the IGMP v3 report is received.
Group	The IPv4 multicast group address.
Interface	The interface on which the IGMP v3 report is received.
Reporter	The IPv4 address of the host that sent the IGMPv3 report.
Source Filter Mode	The source filter mode (*Include* or *Exclude*) for the specified group.
Source Address List	List of source IP addresses for which source filtering is requested.

Click **Refresh** to refresh the page with the most current data from the switch.

IGMP Snooping VLAN Status

Use this page to enable or disable IGMP snooping on system VLANs and to view and configure per-VLAN IGMP snooping settings. Only VLANS that are enabled for IGMP snooping appear in the table.

To access the *IGMP Snooping VLAN Status* page, click **Switching** > **IGMP Snooping** > **VLAN Status** in the navigation menu.

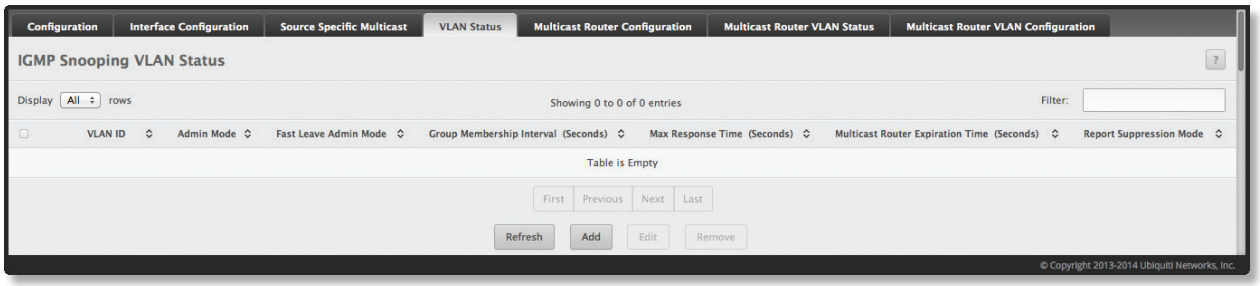

IGMP Snooping VLAN Status

IGMP Snooping VLAN Status Fields

Field	Description
VLAN ID	The VLAN associated with the rest of the data in the row. When enabling IGMP snooping on a VLAN, use this menu to select the desired VLAN. Only VLANs that have been configured on the system and are not already enabled for IGMP snooping appear in the menu. When modifying IGMP snooping settings, this field identifies the VLAN that is being configured.
Admin Mode	The administrative mode of IGMP snooping on the VLAN. IGMP snooping must be enabled globally and on an VLAN for the VLAN to be able to snoop IGMP packets to determine which network segments should receive multicast packets directed to the group address.
Fast Leave Admin Mode	The administrative mode of Fast Leave on the VLAN. If Fast Leave is enabled, the VLAN can be immediately removed from the Layer-2 forwarding table entry upon receiving an IGMP leave message for a multicast group without first sending out MAC-based general queries.
Group Membership Interval (Seconds)	The number of seconds the VLAN should to wait for a report for a particular group on the VLAN before the IGMP snooping feature deletes the VLAN from the group.
Max Response Time (Seconds)	The number of seconds the VLAN should wait after sending a query if does not receive a report for a particular group. The specified value should be less than the *Group Membership Interval*.
Multicast Router Expiration Time (Seconds)	The number of seconds the VLAN should wait to receive a query before it is removed from the list of VLANs with multicast routers attached.
Report Suppression Mode	The IGMPv1 and IGMPv2 report suppression mode. The device uses IGMP report suppression to limit the membership report traffic sent to multicast-capable routers. When this mode is enabled, the device does not send duplicate reports to the multicast router. Note that this mode is supported only when the multicast query has IGMPv1 and IGMPv2 reports. This feature is not supported when the query includes IGMPv3 reports. The options are as follows: • **Enabled** Only the first IGMP report from all hosts for a group IGMP report is forwarded to the multicast routers. • **Disabled** The device forwards all IGMP reports from all hosts in a multicast group to the multicast routers.

Use the buttons to perform the following tasks:


- To enable IGMP snooping on a VLAN, click **Add**, configure the settings in the fields, and click **Submit** to apply the changes.
- To change the IGMP snooping settings of an IGMP snooping-enabled VLAN, select the entry to be changed, click **Edit**, and make the changes as needed. Then, click **Submit** to apply the changes.
- To disable IGMP snooping on one or more VLANs, select each VLAN, click **Remove**, and confirm the action. When IGMP snooping is disabled, the VLAN entry is removed from the table, but the VLAN itself still exists on the system.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

IGMP Snooping Multicast Router Configuration

If a multicast router is attached to the switch, its existence can be learned dynamically. You can also statically configure a switch port as a multicast router interface. Use the *IGMP Snooping Multicast Router Configuration* page to manually configure an interface as a static multicast router interface.

To access the *IGMP Snooping Multicast Router Configuration* page, click **Switching** > **IGMP Snooping** > **Multicast Router Configuration** in the navigation menu.

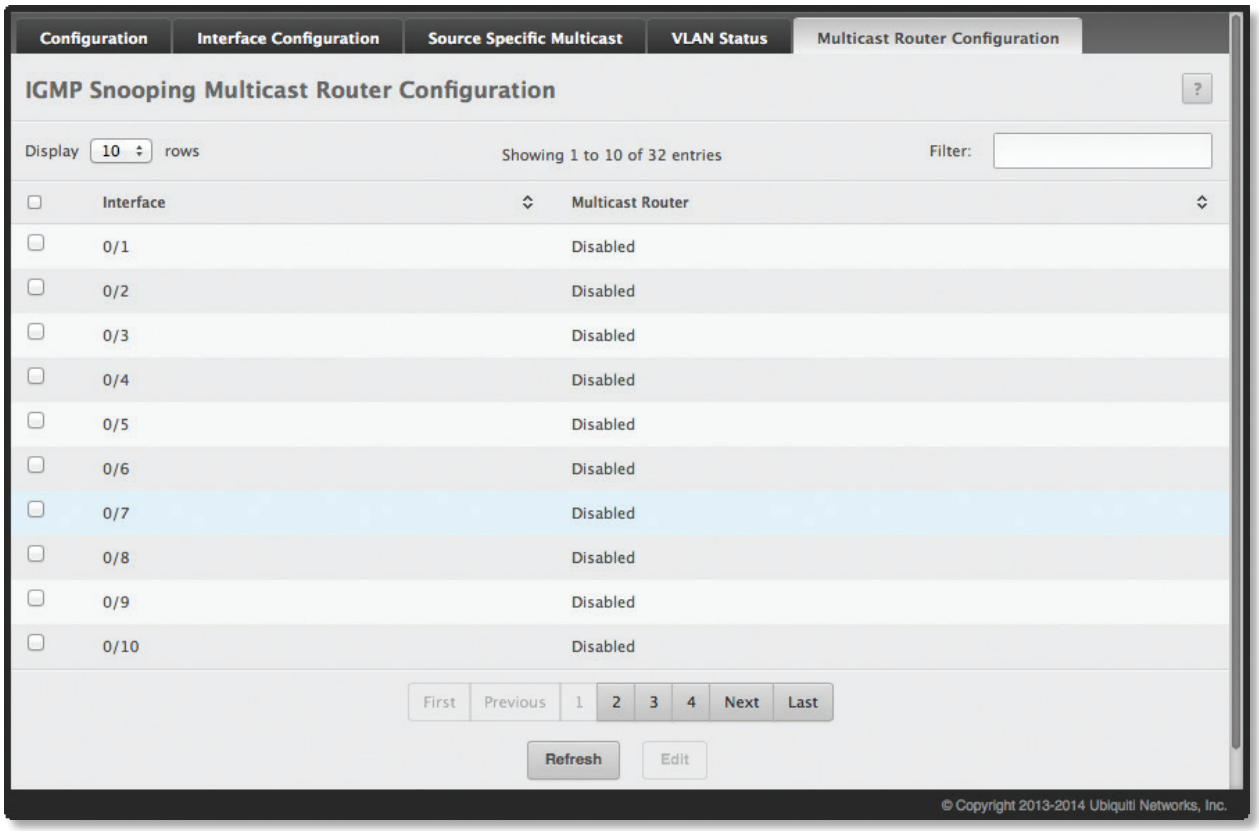

IGMP Snooping Multicast Router Configuration

IGMP Snooping Multicast Router Configuration Fields

Field	Description
Interface	Select the physical or LAG interface to display.
Multicast Router	Set the multicast router status: • **Enabled** The port is a multicast router interface. • **Disabled** The port does not have a multicast router configured.

Use the buttons to perform the following tasks:


- To or disable multicast router configuration on one or more interfaces, select the interfaces, click **Edit**, configure the *Multicast Router* field, and click **Submit** to apply the changes.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

IGMP Snooping Multicast Router VLAN Status

If a multicast router is attached to the switch, its existence can be learned dynamically. You can also statically configure one or more VLANs on each interface to act as a multicast router interface, which is an interface that faces a multicast router or IGMP querier and receives multicast traffic.

To access the *IGMP Snooping Multicast Router VLAN Status* page, click **Switching** > **IGMP Snooping** > **Multicast Router VLAN Status** in the navigation menu.

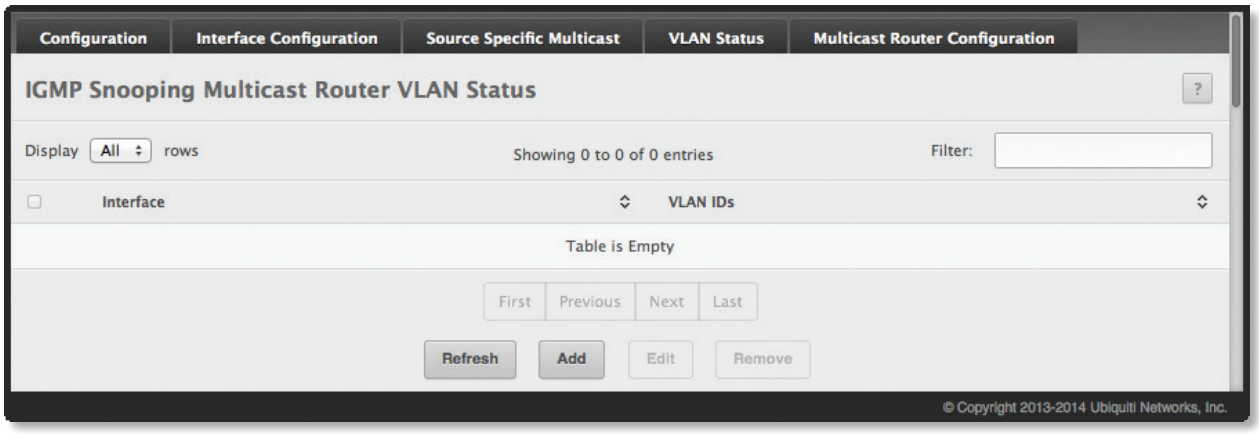

IGMP Snooping Multicast Router VLAN Status

IGMP Snooping Multicast Router VLAN Status Fields

Field	Description
Interface	The interface associated with the rest of the data in the row. Only interfaces that are configured with multicast router VLANs appear in the table.
VLAN IDs	The ID of the VLAN configured as enabled for multicast routing on the associated interface.

Use this page to view the multicast router VLAN status for each interface. Use the buttons to perform the following tasks:


- Click the **Add** and **Edit** buttons to be redirected to the *Multicast Router VLAN Configuration* page for the selected interface to enable or disable VLANs as multicast router interfaces.
- To disable all VLANs as multicast router interfaces for one or more physical ports or LAGs, select each entry to modify, click **Remove**, and confirm the action.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

IGMP Snooping Multicast Router VLAN Configuration

Use this page to enable or disable specific VLANs as multicast router interfaces for a physical port or LAG. A multicast router interface faces a multicast router or IGMP querier and receives multicast traffic.

To access the *IGMP Snooping Multicast Router VLAN Configuration* page, click **Switching** > **IGMP Snooping** > **Multicast Router VLAN Configuration** in the navigation menu.

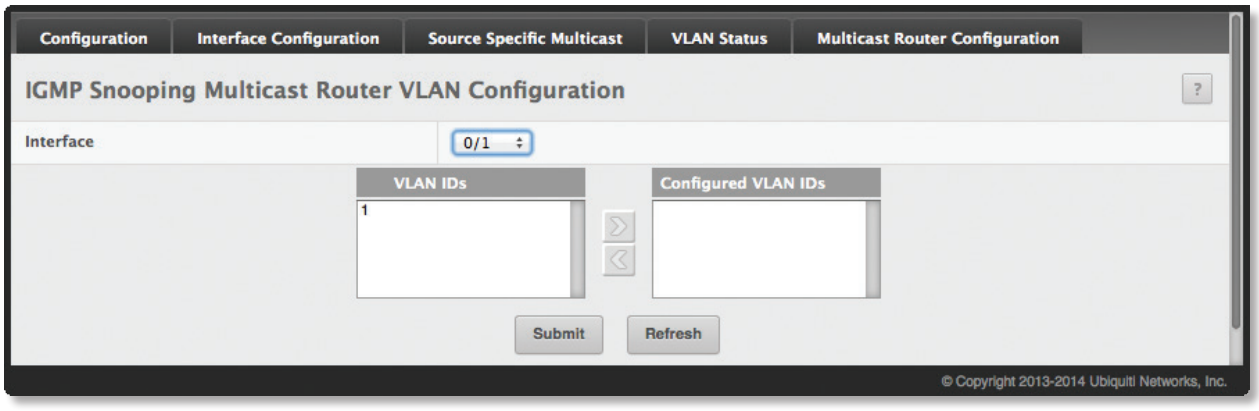

IGMP Snooping Multicast Router VLAN Configuration

IGMP Snooping Multicast Router VLAN Configuration Fields

Field	Description
Interface	Select the port or LAG on which to enable or disable a VLAN multicast routing interface.
VLAN IDs	The VLANs configured on the system that are not currently enabled as multicast router interfaces on the selected port or LAG. To enable a VLAN as a multicast router interface, click the VLAN ID to select it (or press and hold CTRL to select multiple VLAN IDs). Then, click » to move the selected VLAN(s) to the *Configured VLAN IDs* field.
Configured VLAN IDs	The VLANs that are enabled as multicast router interfaces on the selected port or LAG. To disable a VLAN as a multicast router interface, click the VLAN ID to select it (or press and hold CTRL to select multiple VLAN IDs). Then, click « to move the selected VLAN(s) back to the *VLAN IDs* field.

Use the buttons to perform the following tasks:

- If you make any changes to this page, click **Submit** to apply the changes.
- Click **Refresh** to refresh the page with the most current data from the switch.


To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Configuring IGMP Snooping Querier

Use this page to configure the global IGMP snooping querier settings on the device. IGMP snooping requires that one central switch or router periodically query all end-devices on the network to announce their multicast memberships. This central device is the IGMP querier. When Layer-3 IP multicast routing protocols are enabled in a network with IP multicast routing, the IP multicast router acts as the IGMP querier. However, if the IP-multicast traffic in a VLAN needs to be Layer-2 switched only, an IP-multicast router is not required. The IGMP snooping querier can perform the IGMP snooping functions on the VLAN.

IGMP Snooping Querier Configuration

To access the *IGMP Snooping Querier Configuration* page, click **Switching** > **IGMP Snooping Querier** > **Configuration** in the navigation menu.

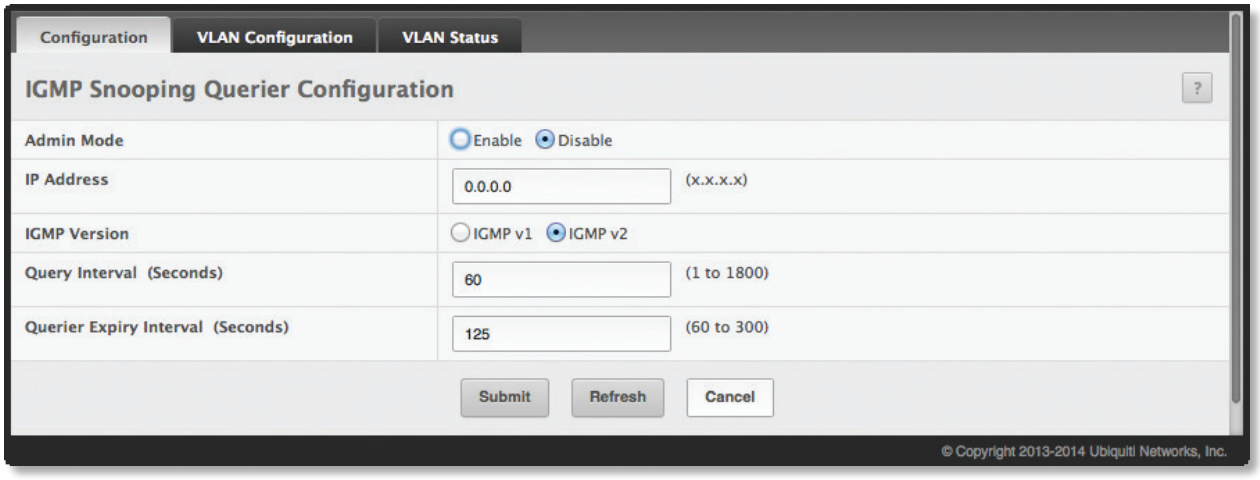

IGMP Snooping Querier Configuration

IGMP Snooping Querier Configuration Fields

Field	Description
Admin Mode	The administrative mode for the IGMP snooping querier on the device. When set to *Enable*, the IGMP snooping querier sends out periodic IGMP queries that trigger IGMP report messages from the switches that want to receive IP multicast traffic. The IGMP snooping feature listens to these IGMP reports to establish appropriate forwarding.
IP Address	The snooping querier address to be used as source address in periodic IGMP queries. This address is used when no IP address is configured on the VLAN on which the query is being sent.
IGMP Version	The IGMP protocol version used in periodic IGMP queries.
Query Interval (Seconds)	The amount of time the IGMP snooping querier on the device should wait between sending periodic IGMP queries.
Querier Expiry Interval (Seconds)	The amount of time the device remains in non-querier mode after it has discovered that there is a multicast querier in the network.

Use the buttons to perform the following tasks:


- If you make any changes to this page, click **Submit** to apply the changes.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

VLAN Configuration

Use this page to enable the IGMP snooping querier feature on one or more VLANs and to configure per-VLAN IGMP snooping querier settings. Only VLANS that have the IGMP snooping querier feature enabled appear in the table.

To access the *IGMP Snooping Querier VLAN Configuration* page, click **Switching** > **IGMP Snooping Querier** > **VLAN Configuration** in the navigation menu.

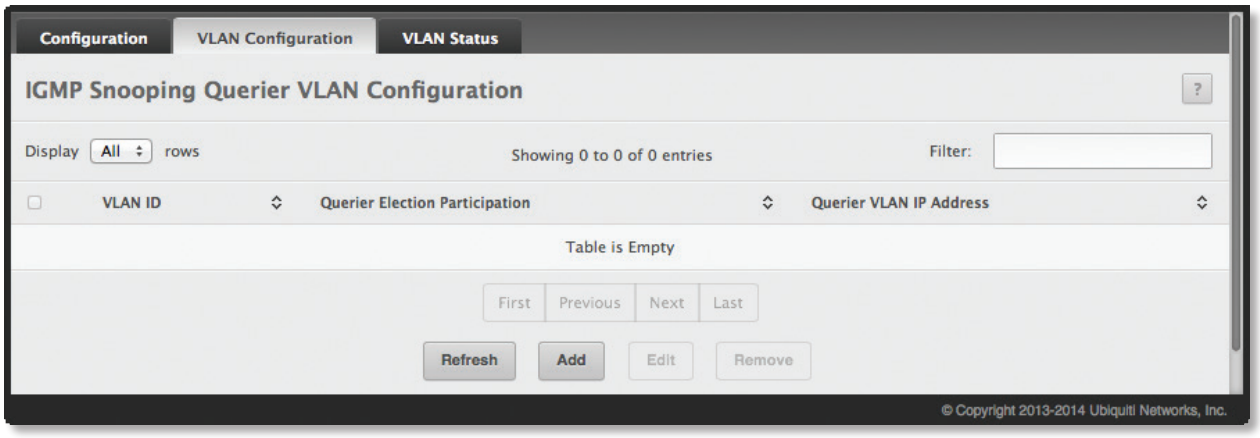

IGMP Snooping Querier VLAN Configuration

IGMP Snooping Querier VLAN Configuration Fields

Field	Description
VLAN ID	The VLAN on which the IGMP snooping querier is enabled. When enabling the IGMP snooping querier on a VLAN, use this menu to select the desired VLAN. Only VLANs that have been configured on the system and are not already enabled for the IGMP snooping querier appear in the menu. When modifying IGMP snooping querier settings, this field identifies the VLAN that is being configured.
Querier Election Participation	The participation mode for the IGMP snooping querier election process: • **Enabled** The IGMP snooping querier on this VLAN participates in the querier election process when it discovers the presence of another querier in the VLAN. If the snooping querier finds that the other querier source IP address is lower than its own address, it stops sending periodic queries. If the snooping querier wins the election (because it has the lowest IP address), then it continues sending periodic queries. • **Disabled** When the IGMP snooping querier on this VLAN sees other queriers of the same version in the VLAN, the snooping querier moves to the non-querier state and stops sending periodic queries.
Querier VLAN IP Address	The IGMP snooping querier address the VLAN uses as the source IP address in periodic IGMP queries sent on the VLAN. If this value is not configured, the VLAN uses the global IGMP snooping querier IP address.

Use the buttons to perform the following tasks:


- To enable the IGMP snooping querier feature on a VLAN, click **Add**, specify the desired settings, and click **Submit** to apply the changes.
- To change the IGMP snooping querier settings for a VLAN, select the entry to modify, click **Edit**, specify the desired settings, and click **Submit** to apply the changes.
- To disable the IGMP snooping querier feature on one or more VLANs, select each entry to change, click **Remove**, and confirm the action. Clicking this button does not remove the VLAN from the system.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

IGMP Snooping Querier VLAN Status

Use this page to view information about the IGMP snooping querier status for all VLANs that have the snooping querier enabled.

To access the *IGMP Snooping Querier VLAN Status* page, click **Switching** > **IGMP Snooping Querier** > **VLAN Status** in the navigation menu.

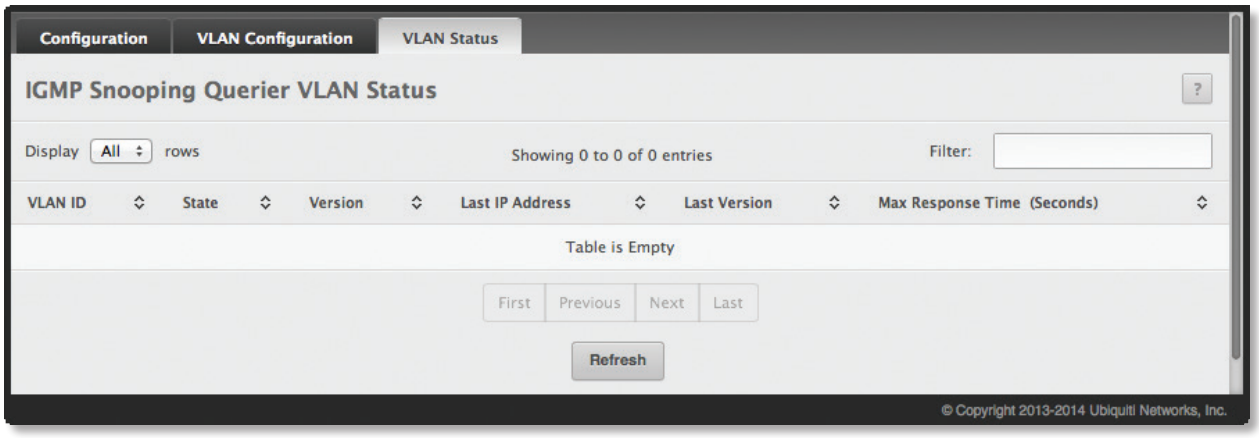

IGMP Snooping Querier VLAN Status

IGMP Snooping Querier VLAN Status Fields

Field	Description
VLAN ID	The VLAN associated with the rest of the data in the row. The table includes only VLANs that have the snooping querier enabled.
State	The operational state of the IGMP snooping querier on the VLAN: • **Querier** The snooping switch is the querier in the VLAN. The snooping switch will send out periodic queries with a time interval equal to the configured querier query interval. If the snooping switch sees a better querier (numerically lower) in the VLAN, it moves to non-querier mode. • **Non-Querier** The snooping switch is in non-querier mode in the VLAN. If the querier expiry interval timer expires, the snooping switch moves into querier mode. • **Disabled** The snooping querier is not operational on the VLAN. The snooping querier moves to the disabled mode when IGMP snooping is not operational on the VLAN, when the querier address is not configured, or the network management address is not configured.
Version	The operational IGMP protocol version of the querier.
Last IP Address	The IP address of the last querier from which a query was snooped on the VLAN.
Last Version	The IGMP protocol version of the last querier from which a query was snooped on the VLAN.
Max Response Time (Seconds)	The maximum response time to be used in the queries that are sent by the snooping querier.

Click **Refresh** to refresh the page with the most current data from the switch.

Creating Port Channels

Port channels, also known as link aggregation groups (LAGs), allow you to combine multiple full-duplex Ethernet links into a single logical link. Network devices treat the aggregation as if it were a single link, which increases fault tolerance and provides load sharing. You assign the port-channel (LAG) VLAN membership after you create a port-channel. The port channel by default becomes a member of the management VLAN.

A port-channel (LAG) interface can be either static or dynamic, but not both. All members of a port channel must participate in the same protocols. A static port-channel interface does not require a partner system to be able to aggregate its member ports.


Note: If you configure the maximum number of dynamic port-channels (LAGs) that your platform supports, additional port-channels that you configure are automatically static.

Static LAGs are supported. When a port is added to a LAG as a static member, it neither transmits nor receives Link Aggregation Control Protocol (LACP) Protocol Data Units (PDU)s.

Port Channel Summary

Use the *Port Channel Summary* page to group one or more full duplex Ethernet links to be aggregated together to form a port-channel, which is also known as a link aggregation group (LAG). The switch can treat the port-channel as if it were a single link.

To access the page, click **Switching** > **Port Channel** > **Summary** in the navigation menu.

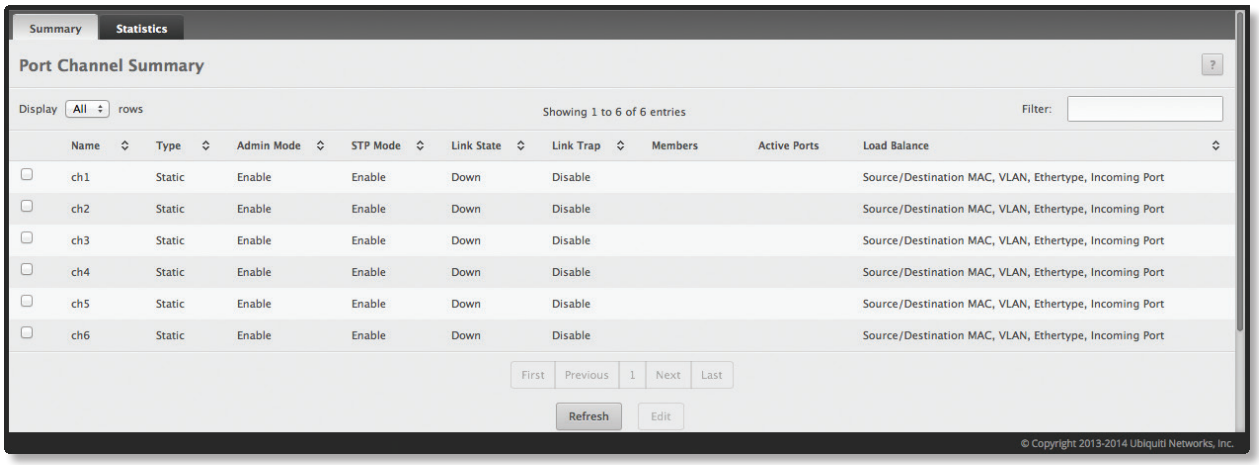

Port Channel Summary

Port Channel Summary Fields

Field	Description
Name	A unique name to identify the port channel. Depending on the type of port channel, this name is automatically assigned by the system or can be configured by a system administrator.
Type	The type of port channel: • **Dynamic** Uses LACP PDUs to exchange information with the link partners to help maintain the link state. To use Dynamic link aggregation on this port channel, the link partner must also support LACP. • **Static** Does not require a partner system to be able to aggregate its member ports. When a port is added to a port channel as a static member, it neither transmits nor receives LACP PDUs. When configuring a port channel (by clicking **Edit**), use the *Static Mode* field to set the port channel type. If the *Static Mode* is disabled, the port channel type is **Dynamic**.
Admin Mode	The administrative mode of the port channel. When disabled, the port channel does not send and receive traffic.
STP Mode	The spanning tree protocol (STP) mode of the port channel. When enabled, the port channel participates in the STP operation to help prevent network loops.
Link State	The current link status of the port channel, which can be *Up*, *Up (SFP)*, or *Down*.
Link Trap	The link trap mode of the port channel. When enabled, a trap is sent to any configured SNMP receiver(s) when the link state of the port channel changes.

Port Channel Summary Fields (Continued)

Field	Description
Members	The ports that are members of a port channel. Each port channel can have a maximum of 8 member ports. To add ports to a port channel, select the port channel from the table and click **Edit**; then, select one or more ports from the *Port List* field (press and hold CTRL to select multiple ports), click » to move the selected ports to the *Members* field, and click **Submit** to apply the changes.
Active Ports	The ports that are actively participating members of a port channel. A member port that is operationally or administratively disabled or does not have a link is not an active port.
Load Balance	The algorithm used to distribute traffic load among the physical ports of the port channel while preserving the per-flow packet order. The packet attributes that the load-balancing algorithm can use to determine the outgoing physical port include the following: • Source MAC, VLAN, Ethertype, Incoming Port • Destination MAC, VLAN, Ethertype, Incoming Port • Source/Destination MAC, VLAN, Ethertype, Incoming Port • Source IP and Source TCP/UDP Port Fields • Destination IP and Destination TCP/UDP Port Fields • Source/Destination IP and TCP/UDP Port Fields • Enhanced Hashing Mode

Use the buttons to perform the following tasks:


- To change the settings for an existing port channel, select the port channel from the table, click **Edit**, configure the settings as needed, and click **Submit** to apply the changes.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Port Channel Statistics

This page displays the flap count for each port channel and their member ports. A flap occurs when a port-channel interface or port-channel member port goes down.

To access the *Port Channel Statistics* page, click **Switching** > **Port Channel** > **Statistics** in the navigation menu.

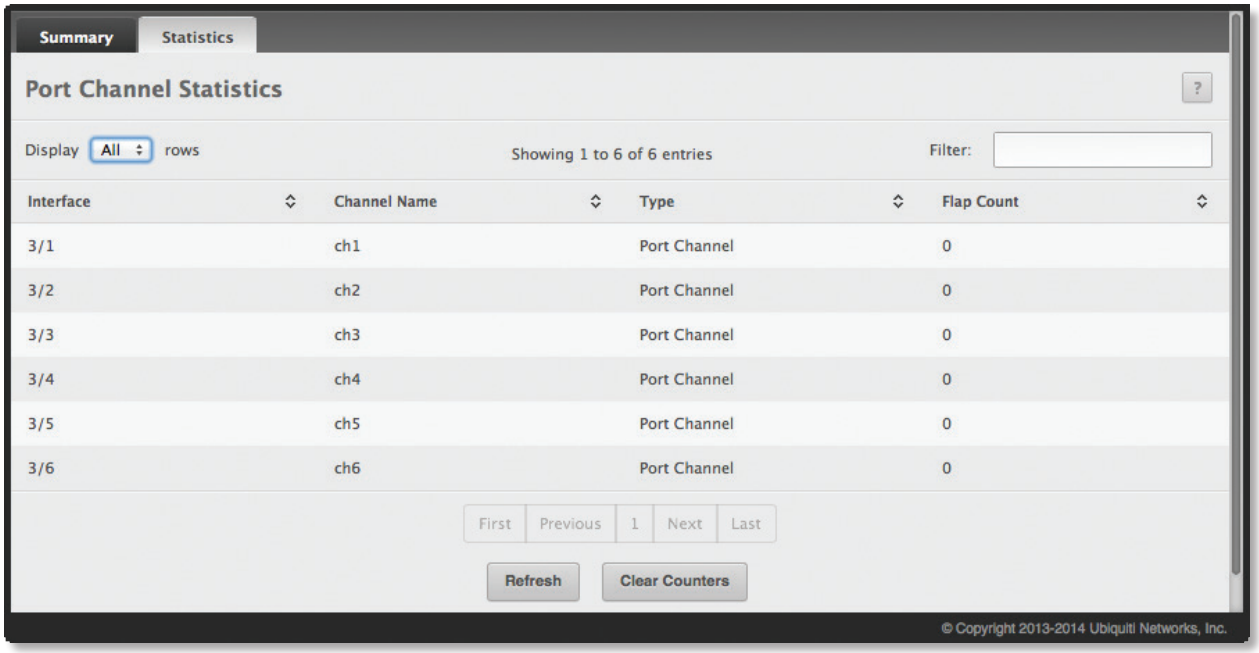

Port Channel Statistics

Port Channel Statistics Fields

Field	Description
Interface	The port channel or member port (physical port) associated with the rest of the data in the row.
Channel Name	The port channel name associated with the port channel. For a physical port, this field identifies the name of the port channel of which the port is a member.
Type	The interface type, which is either *Port Channel* (logical link-aggregation group) or *Member Port* (physical port).
Flap Count	The number of times the interface has gone down. The counter for a member port is incremented when the physical port is either manually shut down by the administrator or when its link state is down. When a port channel is administratively shut down, the flap counter for the port channel is incremented, but the flap counters for its member ports are not affected. When all active member ports for a port channel are inactive (either administratively down or link down), then the port channel flap counter is incremented.

Use the buttons to perform the following tasks:

- Click **Clear Counters** to reset the flap counters for all port channels and member ports to 0.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Viewing Multicast Forwarding Database Information


The Layer-2 Multicast Forwarding Database (MFDB) is used by the switch to make forwarding decisions for packets that arrive with a multicast destination MAC address. By limiting multicasts to only certain ports in the switch, traffic is prevented from going to parts of the network where that traffic is unnecessary.

When a packet enters the switch, the destination MAC address is combined with the VLAN ID and a search is performed in the Layer-2 Multicast Forwarding Database. If no match is found, the packet is either flooded to all ports in the VLAN or discarded, depending on the switch configuration. If a match is found, the packet is forwarded only to the ports that are members of that multicast group.

Multicast Forwarding Database Summary

Use the *Multicast Forwarding Database Summary* page to view the port membership information for all active multicast address entries. The key for an entry consists of a VLAN ID and MAC address pair. Entries may contain data for more than one protocol.

To access the *Multicast Forwarding Database Summary* page, click **Switching** > **Multicast Forwarding Database** > **Summary** in the navigation menu.

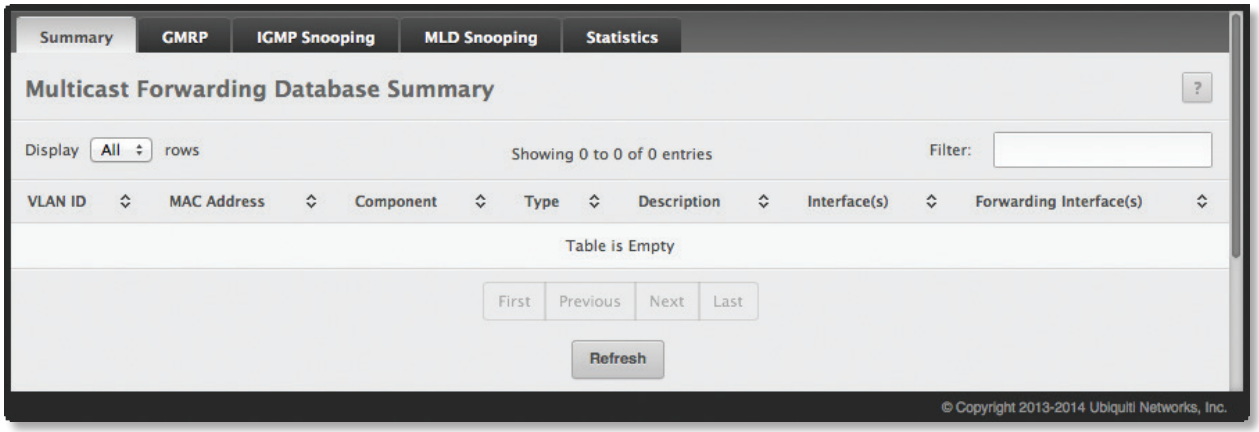

Multicast Forwarding Database Summary

Multicast Forwarding Database Summary Fields

Field	Description
VLAN ID	The VLAN ID associated with the entry in the MFDB.
MAC Address	The multicast MAC address that has been added to the MFDB.
Component	The feature on the device that was responsible for adding the entry to the multicast forwarding database, which is one of the following: • **IGMP Snooping** A Layer-2 feature that allows the device to dynamically add or remove ports from IPv4 multicast groups by listening to IGMP join and leave requests. • **MLD Snooping** A Layer-2 feature that allows the device to dynamically add or remove ports from IPv6 multicast groups by listening to MLD join and leave requests. • **GMRP** Generic Address Resolution Protocol (GARP) Multicast Registration Protocol, which helps help control the flooding of multicast traffic by keeping track of group membership information. • **Static Filtering** A static MAC filter that was manually added to the address table by an administrator.
Type	The type of entry, which is one of the following: • **Static** The entry has been manually added to the MFDB by an administrator. • **Dynamic** The entry has been added to the MFDB as a result of a learning process or protocol.
Description	A text description of this multicast table entry.
Interface(s)	The list of interfaces that will forward or filter traffic sent to the multicast MAC address.
Forwarding Interface(s)	The list of forwarding interfaces. The list does not include any interfaces listed as static filtering interfaces.


To quickly find a MAC address when the list is too long to scan, enter the MAC address in the *Filter* box.

Click **Refresh** to update the information on the screen with the most current data.

Multicast Forwarding Database GMRP Table

Use the *Multicast Forwarding Database GMRP Table* page to display the entries in the multicast forwarding database (MFDB) that were added by using the GARP Multicast Registration Protocol (GMRP).

To access the page, click **Switching** > **Multicast Forwarding Database** > **GMRP** in the navigation menu.

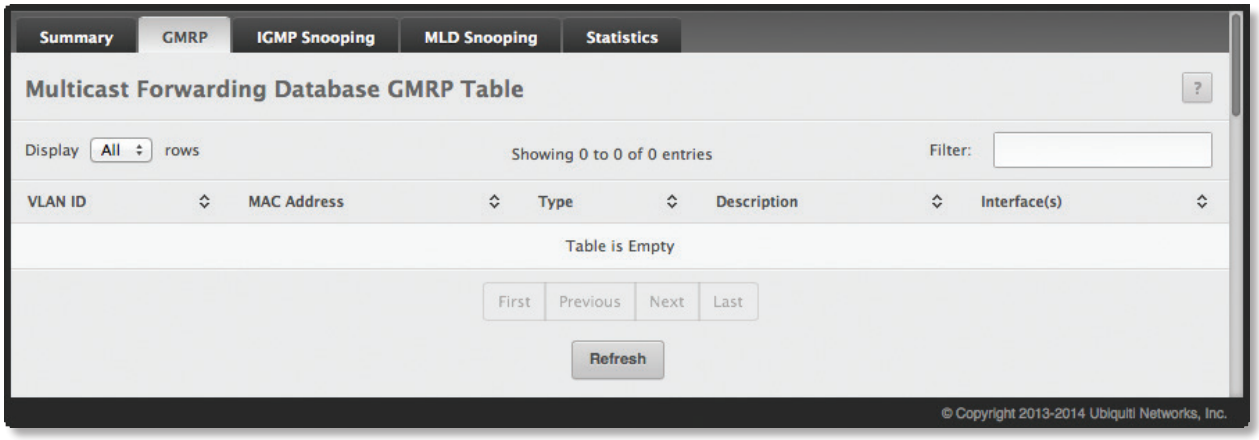

Multicast Forwarding Database GMRP Table

Multicast Forwarding Database GMRP Table Fields


Field	Description
VLAN ID	The VLAN ID associated with the entry in the MFDB.
MAC Address	The multicast MAC address associated with the entry in the MFDB.
Type	The type of entry, which is one of the following: • **Static** The entry has been manually added to the MFDB by an administrator. • **Dynamic** The entry has been added to the MFDB as a result of a learning process or protocol. Entries that appear on this page have been added by using GARP.
Description	A text description of this multicast table entry.
Interface(s)	The list of interfaces that will forward or filter traffic sent to the multicast MAC address.

Click **Refresh** to update the information on the screen with the most current data.

Multicast Forwarding Database IGMP Snooping Table

This page displays the entries in the multicast forwarding database (MFDB) that were added because they were discovered by the IGMP snooping feature. IGMP snooping allows the device to dynamically add or remove ports from IPv4 multicast groups by listening to IGMP join and leave requests.

To access the page, click **Switching** > **Multicast Forwarding Database** > **IGMP Snooping** in the navigation menu.

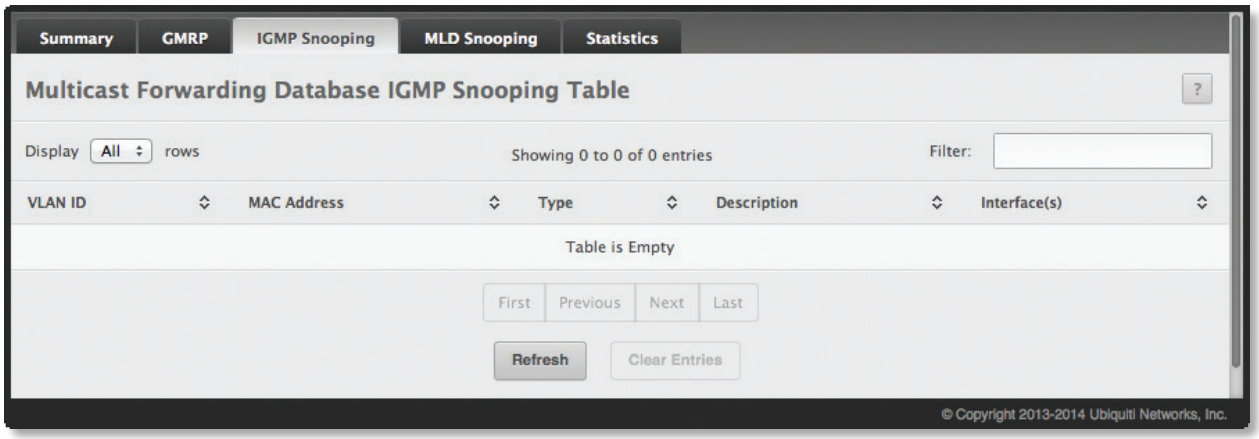

Multicast Forwarding Database IGMP Snooping Table

Multicast Forwarding Database IGMP Snooping Table Fields

Field	Description
VLAN ID	The VLAN ID associated with the entry in the MFDB.
MAC Address	The multicast MAC address associated with the entry in the MFDB.
Type	The type of entry, which is one of the following: • **Static** The entry has been manually added to the MFDB by an administrator. • **Dynamic** The entry has been added to the MFDB as a result of a learning process or protocol. Entries that appear on this page have been learned by examining IGMP messages.
Description	A text description of this multicast table entry.
Interface(s)	The list of interfaces that will forward or filter traffic sent to the multicast MAC address.

Use the buttons to perform the following tasks:


- To reset the statistics to zero for all interfaces, click **Clear Counters**. You must confirm the action before the counters are reset.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Multicast Forwarding Database Statistics

Use the *Multicast Forwarding Database Statistics* page to view statistical information about the MFDB table.

To access the *Multicast Forwarding Database Statistics* page, click **Switching** > **Multicast Forwarding Database** > **Statistics** in the navigation menu.

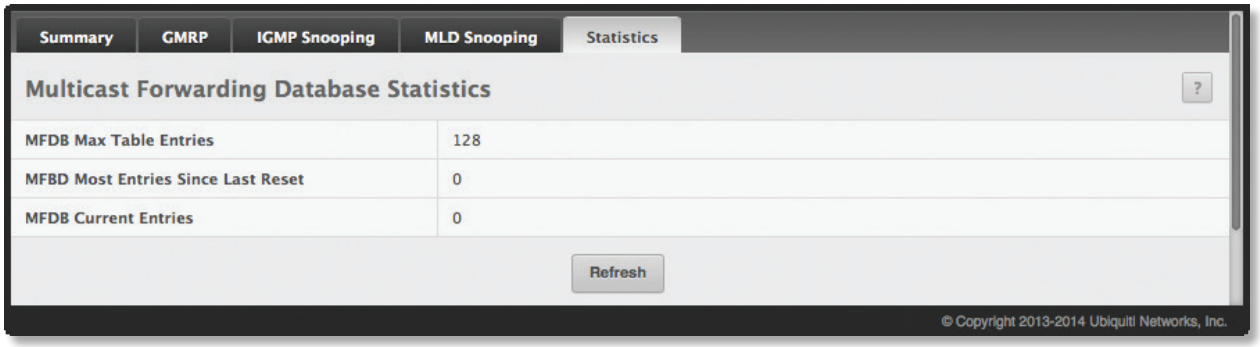

Multicast Forwarding Database Statistics

Multicast Forwarding Database Statistics Fields


Field	Description
MFDB Max Table Entries	The maximum number of entries that the multicast forwarding database can hold.
MFDB Most Entries Since Last Reset	The largest number of entries that have been present in the multicast forwarding database since the device was last reset. This value is also known as the MFDB high-water mark.
MFDB Current Entries	The current number of entries in the multicast forwarding database.

Click **Refresh** to update the information on the screen with the most current data.

Configuring Protected Ports

Use this page to configure and view protected ports groups. A port that is a member of a protected ports group is a protected port. A port that is not a member of any protected ports group is an unprotected port. Each port can be a member of only one protected ports group. Ports in the same protected ports group cannot forward traffic to other protected ports within the group, even if they are members of the same VLAN. However, a port in a protected ports group can forward traffic to ports that are in a different protected ports group. A protected port can also forward traffic to unprotected ports. Unprotected ports can forward traffic to both protected and unprotected ports.

To access the *Protected Ports Configuration* page, click **Switching** > **Protected Ports** > **Configuration** in the navigation menu.

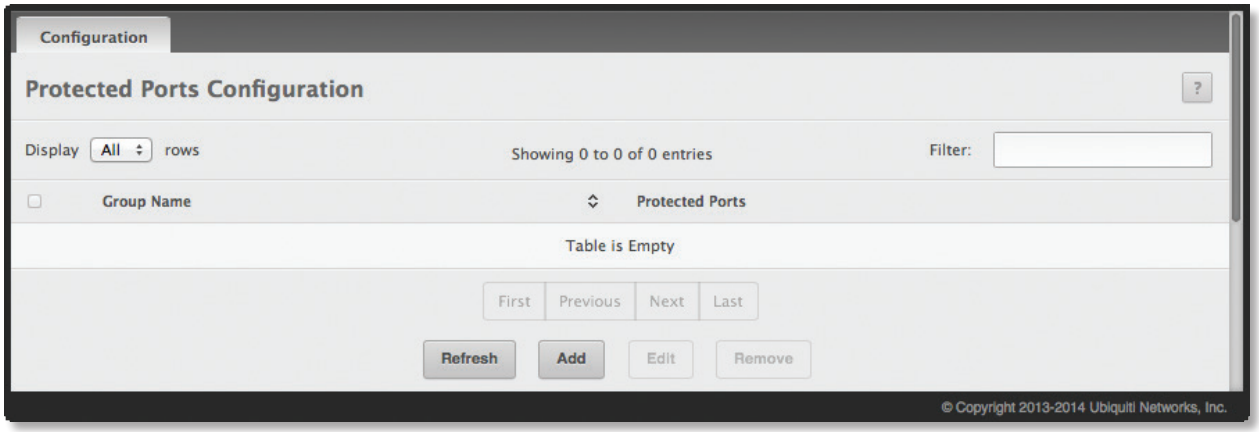

Protected Ports Configuration

Protected Ports Configuration Fields

Field	Description
Group Name	This is the configured name of the protected ports group.
Protected Ports	The ports that are members of the protected ports group. When adding a port to a protected ports group, the *Available Interfaces* field lists the ports that are not already members of a protected ports group. To move an interface between the *Available Interfaces* and *Selected Interfaces* fields, click the port (or press and hold CTRL to select multiple ports), and then click « or » to move the port(s) to the desired field.

Use the buttons to perform the following tasks:

- To create a protected ports group and add ports to the group, click **Add**, configure the settings in the available fields, and click **Submit** to apply the settings.
- To change the name or the port members for an existing group, select the group to update and click **Edit**. Then, configure the settings as needed, and click **Submit** to apply the changes.
- To remove one or more protected ports groups, select each entry to delete and click **Remove**. You must confirm the action before the entry is deleted.
- Click **Refresh** to refresh the page with the most current data from the switch.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Configuring Spanning Tree Protocol

The Spanning Tree Protocol (STP) provides a tree topology for any arrangement of bridges. STP also provides one path between end stations on a network, eliminating loops. Spanning tree versions supported include Common STP, Multiple STP, and Rapid STP.

Classic STP provides a single path between end stations, avoiding and eliminating loops. For information on configuring Common STP, see **"Spanning Tree CST Port Configuration" on page 164**.


Multiple Spanning Tree Protocol (MSTP) supports multiple spanning tree instances to efficiently channel VLAN traffic over different interfaces. Each spanning tree instance behaves in the manner specified in IEEE 802.1w, Rapid Spanning Tree Protocol (RSTP), with slight modifications in the working but not the end effects (a primary effect being the rapid transitioning of the port to 'Forwarding'). The difference between RSTP and the traditional STP (IEEE 802.1D) is the ability to configure and recognize full-duplex connectivity and ports which are connected to end stations, resulting in rapid transitioning of the port to 'Forwarding' state and the suppression of Topology Change Notifications (TCNs). These features are represented by the parameters 'pointtopoint' and 'edgeport'. MSTP is compatible with both RSTP and STP. It behaves appropriately to STP and RSTP bridges. A MSTP bridge can be configured to behave entirely as a RSTP bridge or a STP bridge.

Note: For two bridges to be in the same region, the force version should be 802.1S and their configuration name, digest key, and revision level should match. For more information about regions and their effect on network topology, refer to the IEEE 802.1Q standard.

Spanning Tree Switch Configuration

The *Spanning Tree Switch Configuration* page contains fields for enabling STP on the switch.

To display the *Spanning Tree Switch Configuration* page, click **Switching** > **Spanning Tree** > **Switch** in the navigation menu.

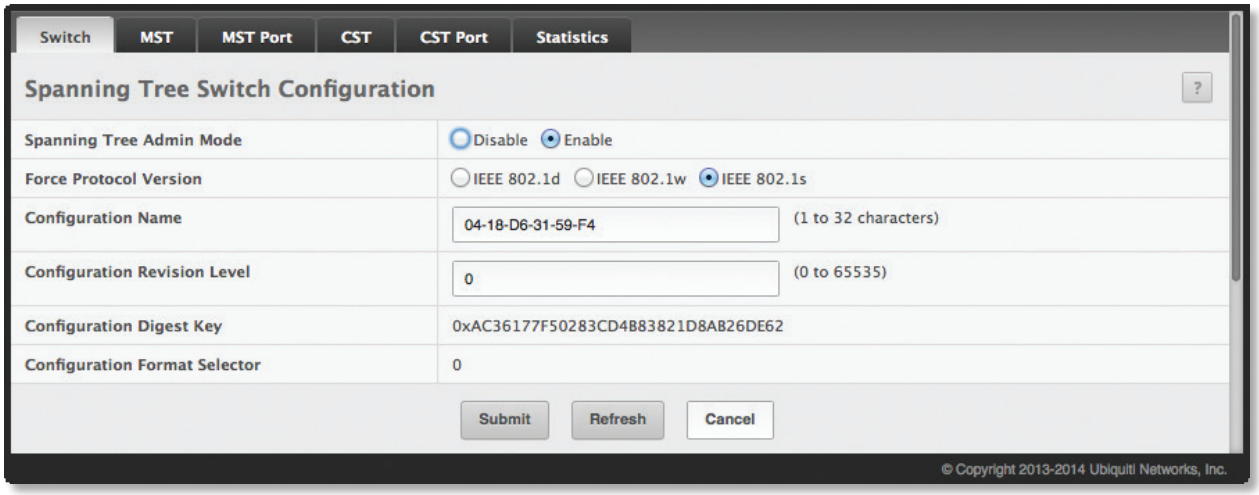

Spanning Tree Switch Configuration

Spanning Tree Switch Configuration Fields

Field	Description
Spanning Tree Admin Mode	The STP administrative mode. If set to *Enable*, the switch participates in the root bridge election process and exchanges Bridge Protocol Data Units (BPDUs) with other switches in the spanning tree to determine the root path costs and maintain topology information.
Force Protocol Version	The STP version the device uses, which is one of the following: • **IEEE 802.1d** Classic STP: Provides a single path between end stations, avoiding and eliminating loops. • **IEEE 802.1w** Rapid Spanning Tree Protocol (RSTP): Can configure and recognize full-duplex connectivity and ports connected to end stations, for rapid transitioning of port to Forwarding state and suppression of TCNs. • **IEEE 802.1s** Multiple Spanning Tree Protocol (MSTP): Supports multiple spanning tree instances to efficiently channel VLAN traffic over different interfaces. Compatible with RSTP and STP.

Spanning Tree Switch Configuration Fields (Continued)

Field	Description
Configuration Name	The name of the MSTP region. Each switch that participates in the same MSTP region must share the same *Configuration Name*, *Configuration Revision Level*, and MST-to-VLAN mappings.
Configuration Revision Level	The revision number of the MSTP region. This number must be the same on all switches that participate in the MSTP region.
Configuration Digest Key	A 16-byte signature of type HMAC-MD5 created from MST Configuration Table (a VLAN ID-to-MST ID mapping).
Configuration Format Selector	The version of the configuration format being used in the exchange of BPDUs.


Use the buttons to perform the following tasks:

- If you make any configuration changes, click **Submit** to apply the new settings to the switch.
- Click **Refresh** to update the information on the screen with the most current data.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Spanning Tree CST Configuration

Use the *Spanning Tree CST Configuration* page to configure Common Spanning Tree (CST) settings. The settings and information on this page define the device within the spanning tree topology that connects all STP/RSTP bridges and MSTP regions. To access the page, click **Switching** > **Spanning Tree** > **CST** in the navigation menu.

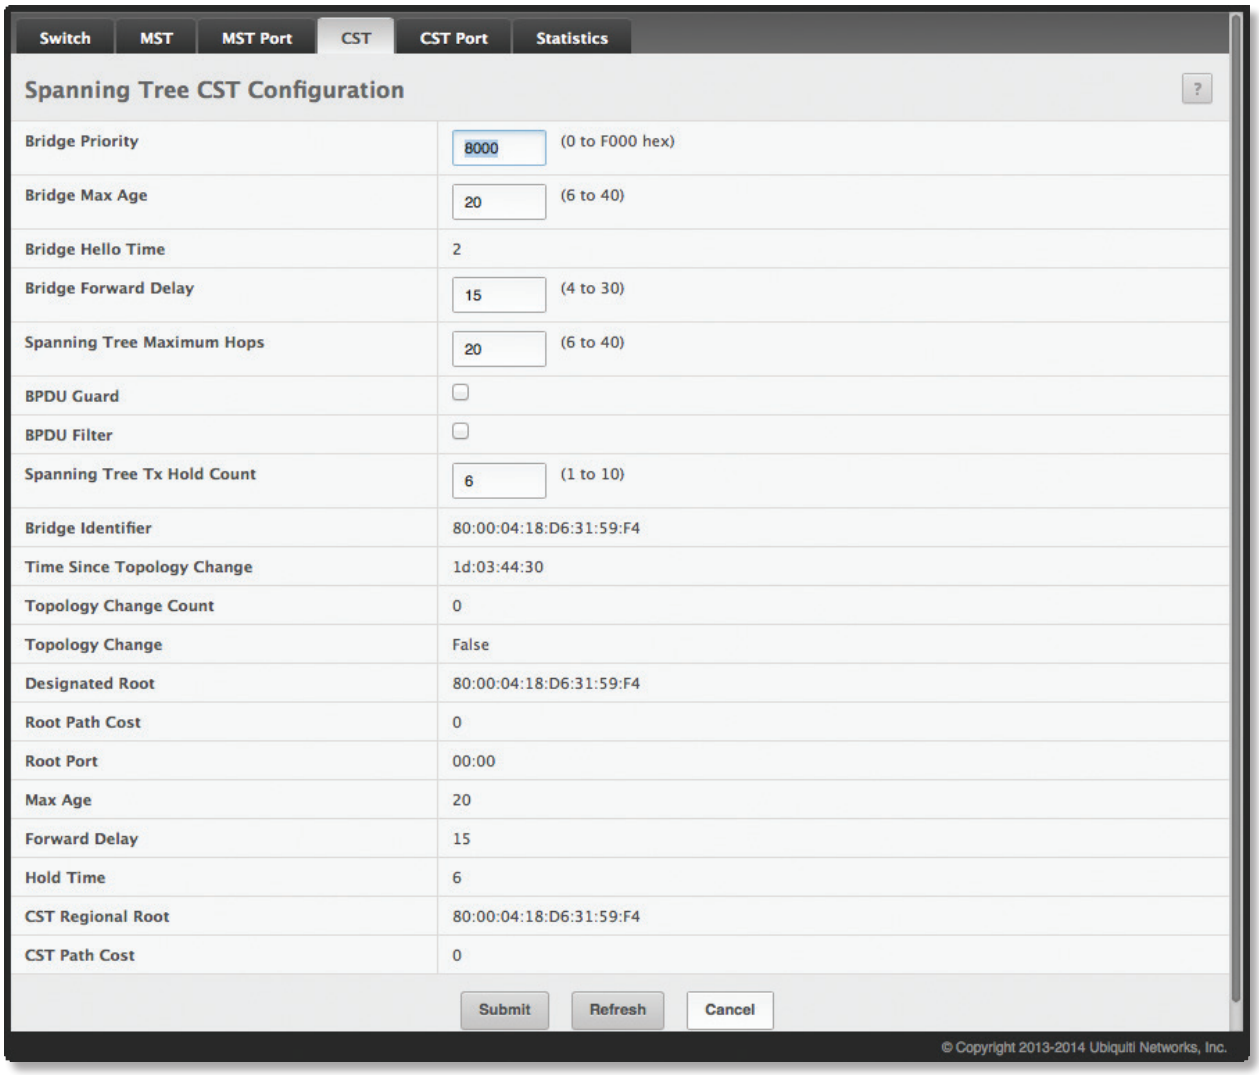

Spanning Tree CST

Spanning Tree CST Fields

Field	Description
Bridge Priority	The value that helps determine which bridge in the spanning tree is elected as the root bridge during STP convergence. A lower value increases the probability that the bridge becomes the root bridge.
Bridge Max Age	The amount of time a bridge waits before implementing a topological change.
Bridge Hello Time	The amount of time the root bridge waits between sending hello BPDUs.
Bridge Forward Delay	The amount of time a bridge remains in a listening and learning state before forwarding packets.
Spanning Tree Maximum Hops	The maximum number of hops a Bridge Protocol Data Unit (BPDU) is allowed to traverse within the spanning tree region before it is discarded.
BPDU Guard	When enabled, *BPDU Guard* can disable edge ports that receive BPDU packets. This prevents a new device from entering the existing STP topology. Thus devices that were originally not a part of STP are not allowed to influence the STP topology.
BPDU Filter	When enabled, this feature filters the BPDU traffic on the edge ports. When spanning tree is disabled on a port, BPDU filtering allows BPDU packets received on that port to be dropped.
Spanning Tree Tx Hold Count	The maximum number of BPDUs that a bridge is allowed to send within a hello time window.
Bridge Identifier	A unique value that is automatically generated based on the bridge priority value and the base MAC address of the bridge. When electing the root bridge for the spanning tree, if the bridge priorities for multiple bridges are equal, the bridge with the lowest MAC address is elected as the root bridge.
Time Since Topology Change	The amount of time that has passed since the topology of the spanning tree has changed since the device was last reset.
Topology Change Count	The number of times the topology of the spanning tree has changed.
Topology Change	Indicates whether a topology change is in progress on any port assigned to the CST. If a change is in progress the value is *True*; otherwise, it is *False*.
Designated Root	The bridge identifier of the root bridge for the CST. The identifier is made up of the bridge priority and the base MAC address.
Root Path Cost	The path cost to the designated root for the CST. Traffic from a connected device to the root bridge takes the least-cost path to the bridge. If the value is *0*, the cost is automatically calculated based on port speed.
Root Port	The port on the bridge with the least-cost path to the designated root for the CST.
Max Age	The amount of time a bridge waits before implementing a topological change.
Forward Delay	The forward delay value for the root port bridge.
Hold Time	The minimum amount of time between transmissions of Configuration BPDUs.
CST Regional Root	The bridge identifier of the CST regional root. The identifier is made up of the priority value and the base MAC address of the regional root bridge.
CST Path Cost	The path cost to the CST tree regional root.

Use the buttons to perform the following tasks:


- If you make any configuration changes, click **Submit** to apply the new settings to the switch.
- Click **Refresh** to update the information on the screen with the most current data.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Spanning Tree CST Port Configuration

Use the CST Port page to view and configure the Common Spanning Tree (CST) settings for each interface on the device. To configure CST settings for an interface and to view additional information about the interface's role in the CST topology, select the interface to view or configure and click **Edit**.

To display the *Spanning Tree CST Port* page, click **Switching** > **Spanning Tree** > **CST Port** in the navigation menu.

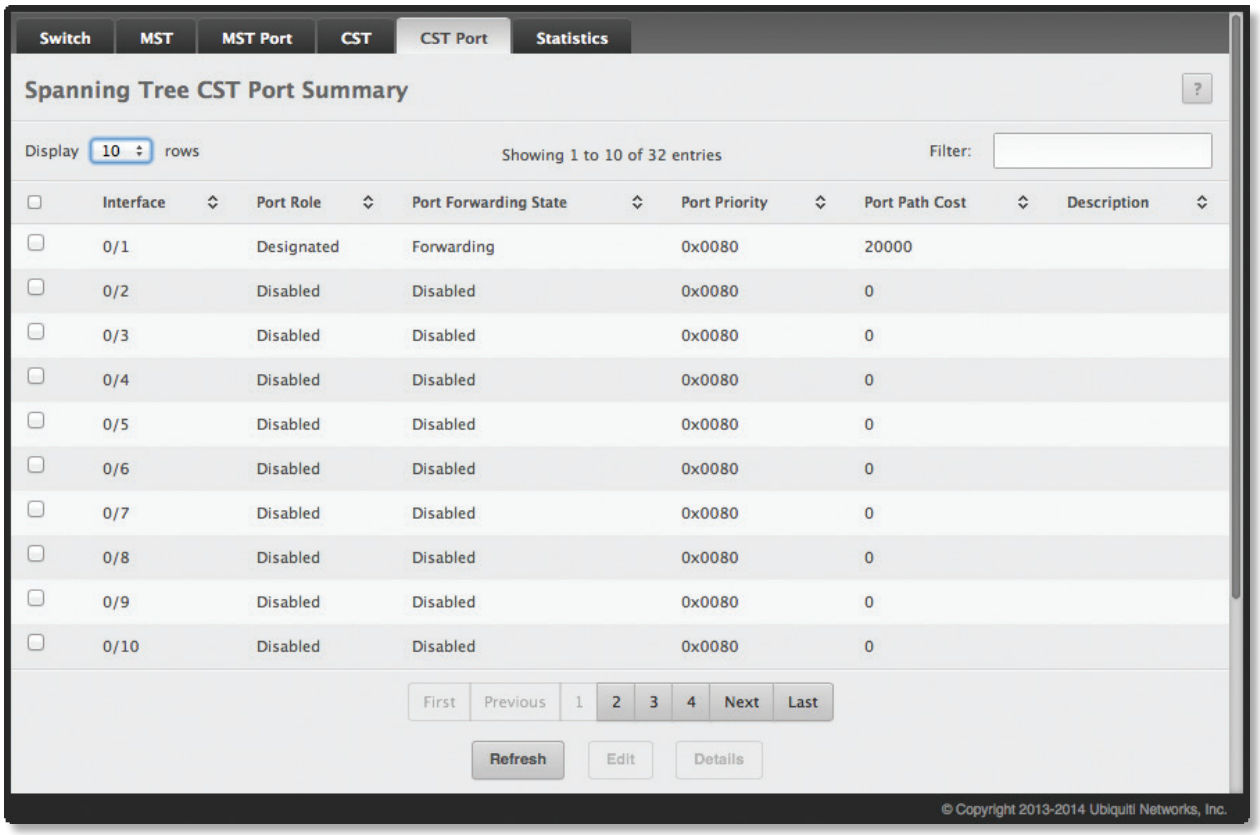

Spanning Tree CST Port

Spanning Tree CST Port Fields

Field	Description
Interface	The port or link aggregation group (LAG) associated with the rest of the data in the row. When configuring CST settings for an interface, this field identifies the interface being configured.
Port Role	The role of the port within the CST, which is one of the following: • **Root** A port on the non-root bridge that has the least-cost path to the root bridge. • **Designated** A port that has the least-cost path to the root bridge on its segment. • **Alternate** A blocked port that has an alternate path to the root bridge. • **Backup** A blocked port that has a redundant path to the same network segment as another port on the bridge. • **Master** The port on a bridge within an MST instance that links the MST instance to other STP regions. • **Disabled** The port is administratively disabled and is not part of the spanning tree.
Port Forwarding State	• **Blocking** The port discards user traffic and receives, but does not send, BPDUs. During the election process, all ports are in the blocking state. The port is blocked to prevent network loops. • **Listening** The port sends and receives BPDUs and evaluates information to provide a loop-free topology. This state occurs during network convergence and is the first state in transitioning to the forwarding state. • **Learning** The port learns the MAC addresses of frames it receives and begins to populate the MAC address table. This state occurs during network convergence and is the second state in transitioning to the forwarding state. • **Forwarding** The port sends and receives user traffic. • **Disabled** The port is administratively disabled and is not part of the spanning tree.

Spanning Tree CST Port Fields (Continued)

Field	Description
Port Priority	The priority for the port within the CST. This value is used in determining which port on a switch becomes the root port when two ports have the same least-cost path to the root. The port with the lower priority value becomes the root port. If the priority values are the same, the port with the lower interface index becomes the root port.
Port Path Cost	The path cost from the port to the root bridge.
Description	A user-configured description of the port. If you select an interface and click **Edit**, the *Edit CST Port Entry* dialog box (described below) opens and allows you to edit the CST port settings and view additional CST information for the interface.
Edit CST Port Entry dialog box –	When you click **Edit**, this dialog box opens and allows you to configure these additional fields:
Admin Edge Port	Select this option to administratively configure the interface as an edge port. An edge port is an interface that is directly connected to a host and is not at risk of causing a loop.
Auto-calculate Port Path Cost	Shows whether the path cost from the port to the root bridge is automatically determined by the speed of the interface (Enabled) or configured manually (Disabled).
Hello Timer	The amount of time the port waits between sending hello BPDUs.
External Port Path Cost	The cost of the path from the port to the CIST root. This value becomes important when the network includes multiple regions.
Auto-calculate External Port Path Cost	Shows whether the path cost from the port to the CIST root is automatically determined by the speed of the interface (*Enabled*) or configured manually (*Disabled*).
BPDU Filter	Select this option to enable this feature. When enabled, this feature filters the BPDU traffic on the edge ports. Edge ports do not need to participate in the spanning tree, so BPDU filtering allows BPDU packets received on edge ports to be dropped.
BPDU Flood	Select this option to enable this feature, which determines the behavior of the interface if STP is disabled on the port and the port receives a BPDU. If BPDU flooding is enabled, the port will flood the received BPDU to all the ports on the switch that are similarly disabled for spanning tree.
BPDU Guard Effect	Shows the status (*Disabled* or *Enabled*) of BPDU Guard Effect on the interface. When enabled, *BPDU Guard Effect* can disable edge ports that receive BPDU packets. This prevents a new device from entering the existing STP topology. Thus devices that were originally not a part of STP are not allowed to influence the STP topology.
Port ID	A unique value that is automatically generated based on the port priority value and the interface index.
Port Up Time Since Counters Last Cleared	The amount of time that the port has been up since the counters were cleared.
Port Mode	Used to *Enable* or *Disable* the administrative mode of spanning tree on the port.
Port Forwarding State	• **Blocking** The port discards user traffic and receives, but does not send, BPDUs. During the election process, all ports are in the blocking state. The port is blocked to prevent network loops. • **Listening** The port sends and receives BPDUs and evaluates information to provide a loop-free topology. This state occurs during network convergence and is the first state in transitioning to the forwarding state. • **Learning** The port learns the MAC addresses of frames it receives and begins to populate the MAC address table. This state occurs during network convergence and is the second state in transitioning to the forwarding state. • **Forwarding** The port sends and receives user traffic. • **Disabled** The port is administratively disabled and is not part of the spanning tree.
Port Role	The role of the port within the CST, which is one of the following: • **Root** A port on the non-root bridge that has the least-cost path to the root bridge. • **Designated** A port that has the least-cost path to the root bridge on its segment. • **Alternate** A blocked port that has an alternate path to the root bridge. • **Backup** A blocked port that has a redundant path to the same network segment as another port on the bridge. • **Master** The port on a bridge within an MST instance that links the MST instance to other STP regions. • **Disabled** The port is administratively disabled and is not part of the spanning tree.
Designated Root	The bridge ID of the root bridge for the CST.
Designated Cost	The path cost offered to the LAN by the designated port.
Designated Bridge	The bridge ID of the bridge with the designated port.
Designated Port	The port ID of the designated port.

Spanning Tree CST Port Fields (Continued)

Field	Description
Topology Change Acknowledge	Displays *True* if the next BPDU to be transmitted for this port will have the topology change acknowledgement flag set; otherwise, displays *False*.
Auto Edge	When this option is selected (enabled), *Auto Edge* allows the interface to become an edge port if it does not receive any BPDUs within a given amount of time.
Edge Port	Displays *Enabled* if the interface is configured as an edge port; otherwise, displays *Disabled*.
Point-to-point MAC	Displays *True* if the link type for the interface is a point-to-point link; otherwise, displays *False*.
Root Guard	When this option is selected (enabled), *Root Guard* allows the interface to discard any superior information it receives to protect the root of the device from changing. The port gets put into discarding state and does not forward any frames.
Loop Guard	When this option is selected (enabled), *Loop Guard* prevents an interface from erroneously transitioning from blocking state to forwarding when the interface stops receiving BPDUs. The port is marked as being in loop-inconsistent state. In this state, the interface does not forward frames.
TCN Guard	When this option is selected (enabled), *TCN Guard* restricts the interface from propagating any topology change information received through that interface.
CST Regional Root	The bridge ID of the bridge that has been elected as the root bridge of the CST region.
CST Path Cost	The path cost from the interface to the CST regional root.
Loop Inconsistent State	Displays *True* if the interface is currently in a loop inconsistent state; otherwise, displays *False*. An interface transitions to a loop inconsistent state if loop guard is enabled and the port stops receiving BPDUs. In this state, the interface does not transmit frames.
Transitions Into LoopInconsistent State	The number of times this interface has transitioned into loop inconsistent state.
Transitions Out Of LoopInconsistent State	The number of times this interface has transitioned out of loop inconsistent state.

Use the buttons to perform the following tasks:

- To edit the CST port settings, click **Edit**, configure the settings as needed, and click **Submit** to apply the new settings to the switch.
- Click **Details** to display the CST port settings.
- Click **Refresh** to update the screen with most recent data.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.


Spanning Tree MST Configuration

Use the *Spanning Tree MST Summary* page to view and configure the Multiple Spanning Tree Instances (MSTIs) on the device. Multiple Spanning Tree Protocol (MSTP) allows the creation of MSTIs based upon a VLAN or groups of VLANs. Configuring MSTIs creates an active topology with a better distribution of network traffic and an increase in available bandwidth when compared to classic STP.

To display the *Spanning Tree MST Port Summary* page, click **Switching** > **Spanning Tree** > **MST** in the navigation menu.

Use the buttons to perform the following tasks:

- To configure a new MSTI, click **Add** and specify the desired settings.
- To change the Priority or the VLAN associations for an existing MSTI, select the entry to modify and click **Edit**.
- To remove one or more MSTIs, select each entry to delete and click **Remove**. You must confirm the action before the entry is deleted.

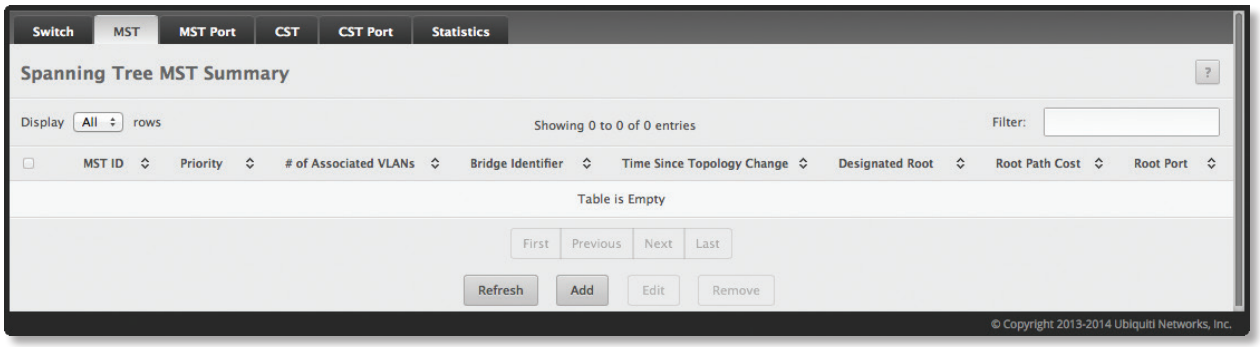

Spanning Tree MST Summary

Spanning Tree MST Summary Fields

Field	Description
MST ID	The number that identifies the MST instance.
Priority	The bridge priority for the spanning-tree instance. This value affects the likelihood that the bridge is selected as the root bridge. A lower value increases the probability that the bridge is selected as the root bridge.
# of Associated VLANs	The number of VLANs that are mapped to the MSTI. This number does not contain any information about the VLAN IDs that are mapped to the instance.
Bridge Identifier	A unique value that is automatically generated based on the bridge priority value of the MSTI and the base MAC address of the bridge. When electing the root bridge for an MST instance, if the bridge priorities for multiple bridges are equal, the bridge with the lowest MAC address is elected as the root bridge.
Time Since Topology Change	The amount of time that has passed since the topology of the MSTI has changed.
Designated Root	The bridge identifier of the root bridge for the MST instance. The identifier is made up of the bridge priority and the base MAC address.
Root Path Cost	The path cost to the designated root for this MST instance. Traffic from a connected device to the root bridge takes the least-cost path to the bridge. If the value is 0, the cost is automatically calculated based on port speed.
Root Port	The port on the bridge with the least-cost path to the designated root for the MST instance.

Use the buttons to perform the following tasks:

- To configure a new MSTI, click **Add**, configure the settings as required, and **Submit** to apply the new settings to the switch.
- To change an existing MSTI's settings, select the entry, click **Edit**, make the required changes, and click **Submit** to apply the changes.
- To remove an MSTI, select the entry, click **Remove**, and confirm the deletion.
- Click **Refresh** to update the screen with most recent data.


To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Spanning Tree MST Port Configuration

Use the *Spanning Tree MST Port Summary* page to view and configure the Multiple Spanning Tree (MST) settings for each interface on the device. To configure MST settings for an interface and to view additional information about the interface's role in the MST topology, first select the appropriate MST instance from the MST ID menu. Then, select the interface to view or configure and click **Edit**.

To display the *Spanning Tree MST Port Summary* page, click **Switching** > **Spanning Tree** > **MST Port** in the navigation menu.

Note: If no MST instances have been configured on the switch, the page displays a "No MSTs Available" message and does not display the fields shown in the illustration below.

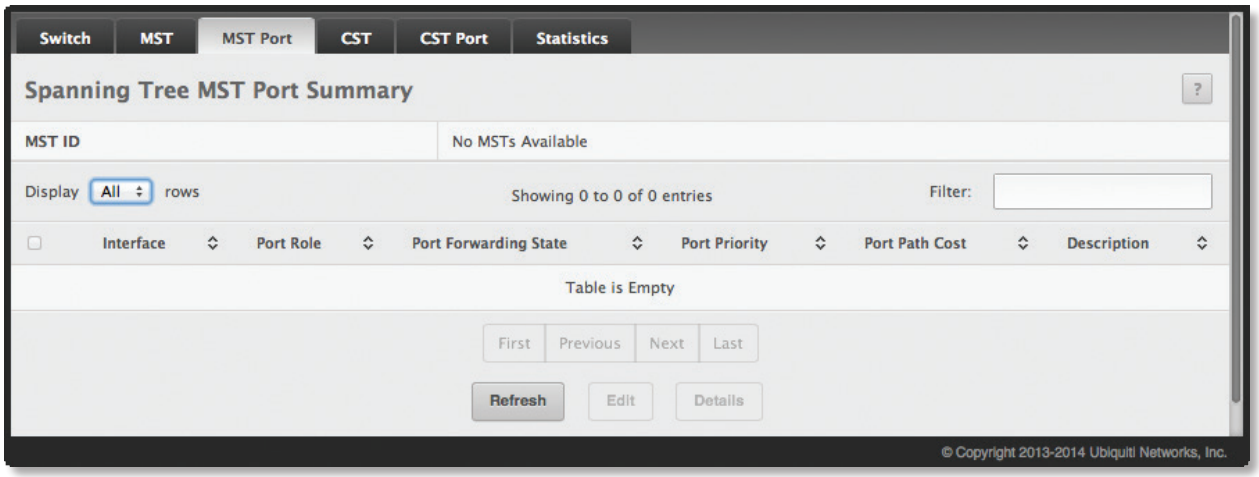

Spanning Tree MST Port Summary

Spanning Tree MST Port Summary Fields

Field	Description
MST ID	The menu contains the ID of each MST instance that has been created on the device.
Interface	The port or link aggregation group (LAG) associated with the rest of the data in the row. When configuring MST settings for an interface, this field identifies the interface being configured.
Port Role	The role of the port within the MST, which is one of the following: • **Root** A port on the non-root bridge that has the least-cost path to the root bridge. • **Designated** A port that has the least-cost path to the root bridge on its segment. • **Alternate** A blocked port that has an alternate path to the root bridge. • **Backup** A blocked port that has a redundant path to the same network segment as another port on the bridge. • **Master** The port on a bridge within an MST instance that links the MST instance to other STP regions. • **Disabled** The port is administratively disabled and is not part of the spanning tree.
Port Forwarding State	• **Blocking** The port discards user traffic and receives, but does not send, BPDUs. During the election process, all ports are in the blocking state. The port is blocked to prevent network loops. • **Listening** The port sends and receives BPDUs and evaluates information to provide a loop-free topology. This state occurs during network convergence and is the first state in transitioning to the forwarding state. • **Learning** The port learns the MAC addresses of frames it receives and begins to populate the MAC address table. This state occurs during network convergence and is the second state in transitioning to the forwarding state. • **Forwarding** The port sends and receives user traffic. • **Disabled** The port is administratively disabled and is not part of the spanning tree.
Port Priority	The priority for the port within the MSTI. This value is used in determining which port on a switch becomes the root port when two ports have the same least-cost path to the root. The port with the lower priority value becomes the root port. If the priority values are the same, the port with the lower interface index becomes the root port.
Port Path Cost	The path cost from the port to the root bridge.

Spanning Tree MST Port Summary Fields (Continued)

Field	Description
Description	A user-configured description of the port. If you select an interface and click **Edit**, the *Edit MST Port Entry* dialog box (described below) opens and allows you to edit the MST port settings and view additional MST information for the interface.
Edit MST Port Entry dialog box – When you click **Edit**, this dialog box opens and allows you to configure these additional fields:	
Auto-calculate Port Path Cost	Shows whether the path cost from the port to the root bridge is automatically determined by the speed of the interface (**Enabled**) or configured manually (**Disabled**).
Port ID	A unique value that is automatically generated based on the port priority value and the interface index.
Port Up Time Since Counters Last Cleared	The amount of time that the port has been up since the counters were cleared.
Port Mode	The spanning tree administrative mode (*Disable* or *Enable*) on the port.
Designated Root	The bridge ID of the root bridge for the MST instance.
Designated Cost	The path cost offered to the LAN by the designated port.
Designated Bridge	The bridge ID of the bridge with the designated port.
Designated Port	The port ID of the designated port.
Loop Inconsistent State	Display *True* if the interface is currently in a loop inconsistent state; otherwise, displays *False*. An interface transitions to a loop inconsistent state if loop guard is enabled and the port stops receiving BPDUs. In this state, the interface does not transmit frames.
Transitions Into LoopInconsistent State	The number of times this interface has transitioned into loop inconsistent state.
Transitions Out Of LoopInconsistent State	The number of times this interface has transitioned out of loop inconsistent state.

Use the buttons to perform the following tasks:


- To edit the MST port settings, click **Edit**, configure the settings as needed, and click **Submit** to apply the new settings to the switch.
- Click **Details** to display the MST port settings.
- Click **Refresh** to update the screen with most recent data.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Spanning Tree Statistics

Use the *Spanning Tree Statistics* page to view information about the number and type of bridge protocol data units (BPDUs) transmitted and received on each port.

To display the *Spanning Tree Statistics* page, click **Switching** > **Spanning Tree** > **Statistics** in the navigation menu.

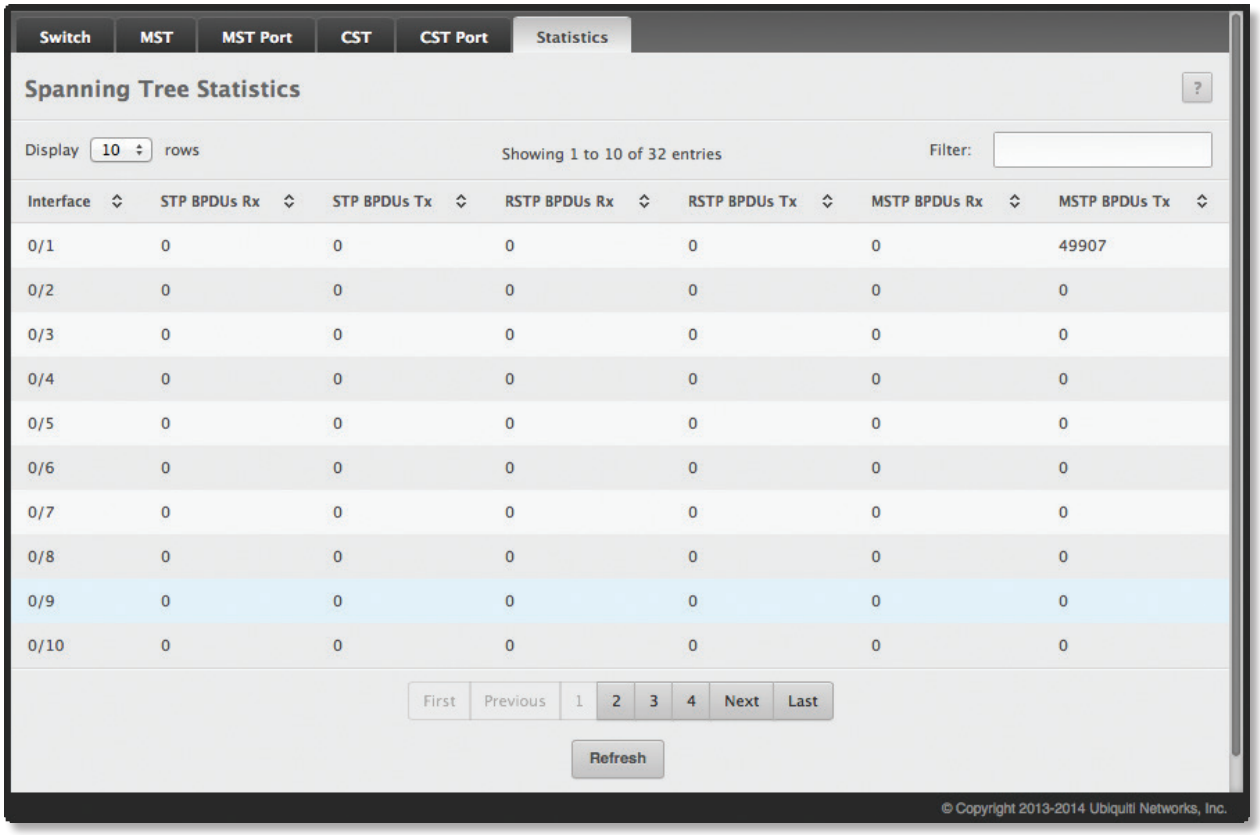

Spanning Tree Statistics

Spanning Tree Statistics Fields

Field	Description
Interface	The port or link aggregation group (LAG) associated with the rest of the data in the row.
STP BPDUs Rx	The number of classic STP (IEEE 802.1d) BPDUs received by the interface.
STP BPDUs Tx	The number of classic STP BPDUs sent by the interface.
RSTP BPDUs Rx	The number of RSTP (IEEE 802.1w) BPDUs received by the interface.
RSTP BPDUs Tx	The number of RSTP BPDUs sent by the interface.
MSTP BPDUs Rx	The number of MSTP (IEEE 802.1s) BPDUs received by the interface.
MSTP BPDUs Tx	The number of MSTP BPDUs sent by the interface.


Click **Refresh** to update the screen with most recent data.

Mapping 802.1p Priority

The IEEE 802.1p feature allows traffic prioritization at the MAC level. The switch can prioritize traffic based on the 802.1p tag attached to the L2 frame. Each port on the switch has multiple queues to give preference to certain packets over others based on the class of service (CoS) criteria you specify. When a packet is queued for transmission in a port, the rate at which it is serviced depends on how the queue is configured and possibly the amount of traffic present in the other queues of the port. If a delay is necessary, packets get held in the queue until the scheduler authorizes the queue for transmission.

Use the *802.1p Priority Mapping* page in the Class of Service submenu to assign 802.1p priority values to various traffic classes on one or more interfaces.

To display the page, click **Switching** > **Class of Service** > **802.1p Priority Mapping** in the navigation menu.

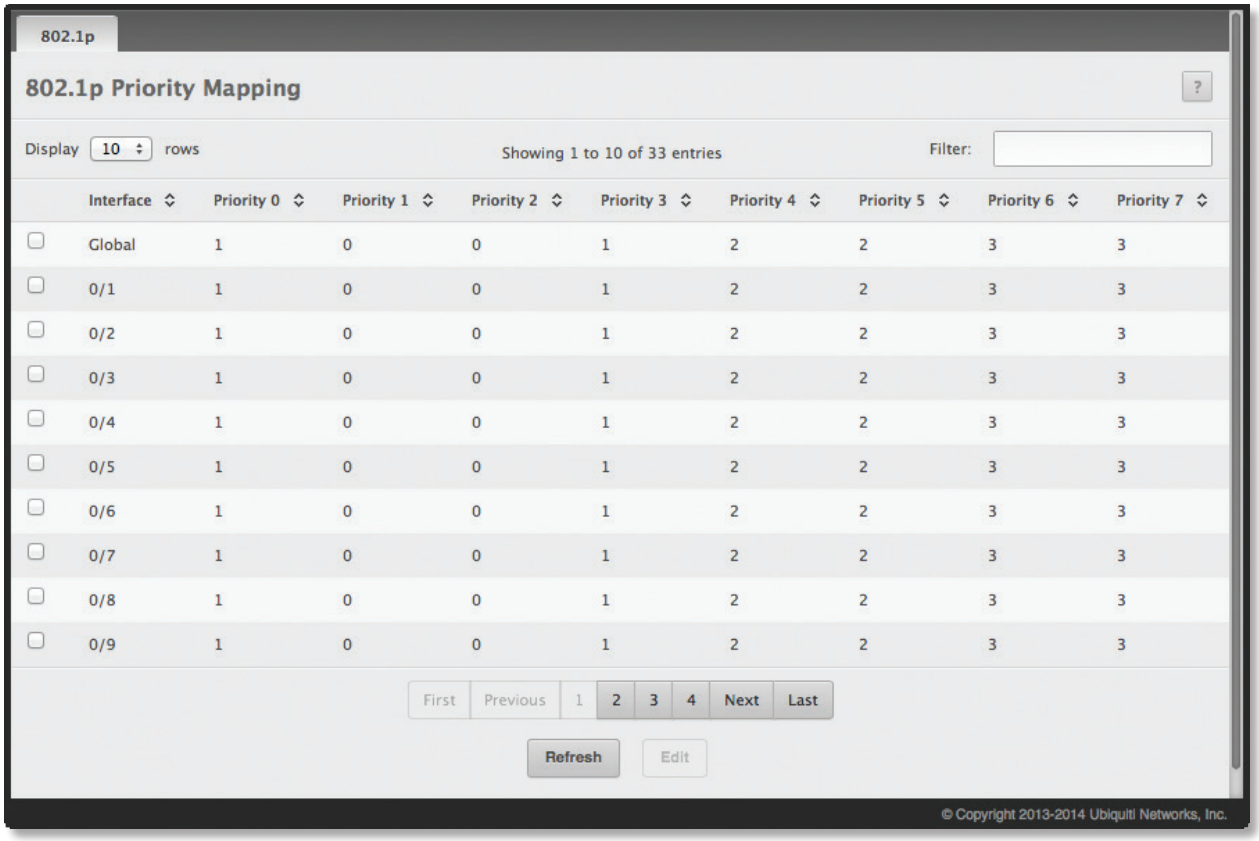

802.1p Priority Mapping

802.1p Priority Mapping Fields

Field	Description
Interface	The interface associated with the rest of the data in the row. The *Global* entry represents the common settings for all interfaces, unless specifically overridden individually.
Priority 0 - Priority 7	The heading row lists each 802.1p priority value (*Priority 0* to *Priority 7*), and the data in the table shows which traffic class is mapped to the priority value. Incoming frames containing the designated 802.1p priority value are mapped to the corresponding traffic class in the device.
Edit 802.1p Priority Mapping dialog box – Click **Edit** to open this dialog box and configure these additional fields:	
802.1p Priority	The 802.1p priority value to be mapped.
Traffic Class	The internal traffic class to which the corresponding 802.1p priority value is mapped. The default value for each 802.1p priority level is displayed for reference.

Use the buttons to perform the following tasks:

- To edit an interface's settings, select the entry, click **Edit**, configure the settings as needed, and click **Submit** to apply the new settings to the switch.
- Click **Refresh** to update the screen with most recent data.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Configuring Port Security

Port Security can be enabled on a per-port basis. When a port is locked, only packets with allowable source MAC addresses can be forwarded. All other packets are discarded. A MAC address can be defined as allowable by one of two methods: dynamically or statically. Note that both methods are used concurrently when a port is locked.

Dynamic locking implements a "first arrival" mechanism for Port Security. You specify how many addresses can be learned on the locked port. If the limit has not been reached, a packet with an unknown source MAC address is learned and forwarded normally. Once the limit is reached, no more addresses are learned on the port. Any packets with source MAC addresses that were not already learned are discarded. Note that you can effectively disable dynamic locking by setting the number of allowable dynamic entries to zero.

Static locking allows you to specify a list of MAC addresses that are allowed on a port. The behavior of packets is the same as for dynamic locking: only packets with an allowable source MAC address can be forwarded.


To see the MAC addresses learned on a specific port, see **"Basic Switch Configuration" on page 52**.

Disabled ports can only be activated from the *Configuring Ports* page.

Port Security Global Administration

Use the *Port Security Global Administration* page to enable or disable the port security feature on your switch.

To access the *Port Security Global Administration* page, click **Switching** > **Port Security** > **Global** in the navigation menu.

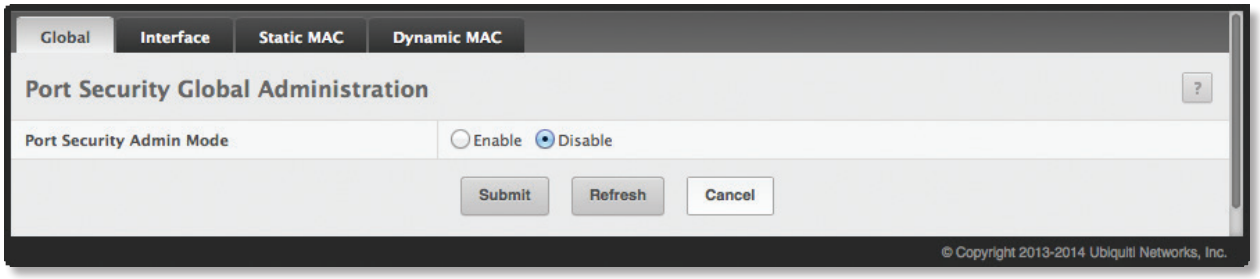

Port Security Global Administration

Port Security Global Administration Fields

Field	Description
Port Security Admin Mode	The global administrative mode (*Enable* or *Disable*) for port security. The port security mode must be enabled both globally and on an interface to enforce the configured limits for the number of static and dynamic MAC addresses allowed on that interface.


Use the buttons to perform the following tasks:

- To change the *Port Security Admin Mode* setting, select **Enable** or **Disable** and click **Submit** to apply the change.
- Click **Refresh** to update the screen with most recent data.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Port Security Interface Status

Use the *Port Security Interface Status* page to configure the port security feature on a selected interface. To access the page, click **Switching** > **Port Security** > **Interface** in the navigation menu.

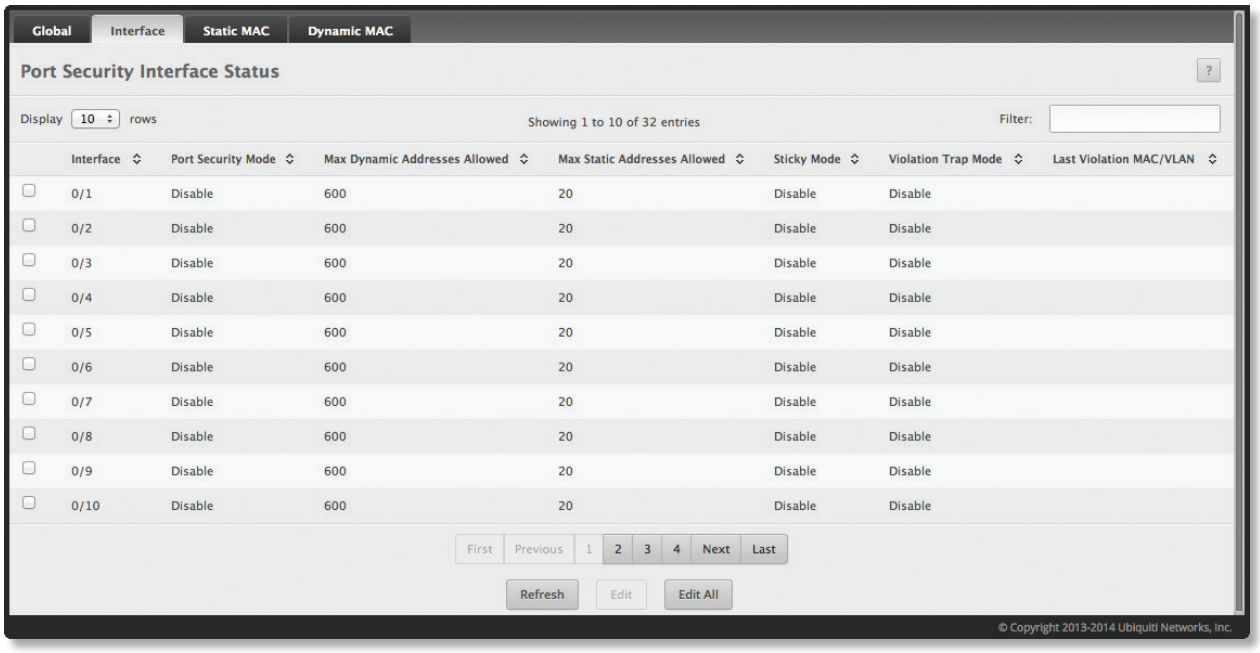

Port Security Interface Status

Port Security Interface Status Fields

Field	Description
Interface	The interface associated with the rest of the data in the row. When configuring the port security settings for one or more interfaces, this field lists the interfaces that are being configured.
Port Security Mode	The administrative mode of the port security feature on the interface. The port security mode must be enabled both globally and on an interface to enforce the configured limits for the number of static and dynamic MAC addresses allowed on that interface.
Max Dynamic Addresses Allowed	The number of source MAC addresses that can be manually added to the port security MAC address table for an interface. If the port link goes down, the statically configured MAC addresses remain in the MAC address table. The maximum number includes all dynamically learned MAC addresses that have been converted to static MAC addresses.
Max Static Addresses Allowed	The number of source MAC addresses that can be manually added to the port security MAC address table for an interface. If the port link goes down, the statically configured MAC addresses remain in the MAC address table. The maximum number includes all dynamically learned MAC addresses that have been converted to static MAC addresses.
Sticky Mode	The sticky MAC address learning mode, which is one of the following: • **Enabled** MAC addresses learned or manually configured on this interface are learned in sticky mode. A sticky-mode MAC address is a MAC address that does not age out and is added to the running configuration. If the running configuration is saved, the sticky addresses do not need to be relearned when the device restarts. Upon enabling sticky mode on an interface, all dynamically learned MAC addresses in the MAC address table for that interface are converted to sticky mode. Additionally, new addresses dynamically learned on the interface will also become sticky. • **Disabled** When a link goes down on a port, all of the dynamically learned addresses are cleared from the source MAC address table for the feature. When the link is restored, the interface can once again learn addresses up to the specified limit. If sticky mode is disabled after being enabled on an interface, the sticky-mode addresses learned or manually configured on the interface are converted to dynamic entries and are automatically removed from persistent storage.
Violation Trap Mode	Indicates whether the port security feature sends a trap to the SNMP agent when a port is locked and a frame with a MAC address not currently in the table arrives on the port. A port is considered to be locked once it has reached the maximum number of allowed dynamic or static MAC address entries in the port security MAC address table.
Last Violation MAC/VLAN	The source MAC address and, if applicable, associated VLAN ID of the last frame discarded at a locked port.

Use the buttons to perform the following tasks:


- To edit the security settings of one port, select the entry, click **Edit**, configure the settings as needed, and click **Submit** to apply the changes.
- To edit the security settings for all ports, click **Edit All**, configure the settings as needed, and click **Submit** to apply the changes.
- Click **Refresh** to update the screen with most recent data.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Port Security Statically Configured MAC Addresses

Use the *Port Security Static MAC Addresses* page to view static MAC addresses configured on an interface. From this page, you can delete statically configured MAC addresses.

To access the *Port Security Static MAC Addresses* page, click **Switching** > **Port Security** > **Static MAC** in the navigation menu.

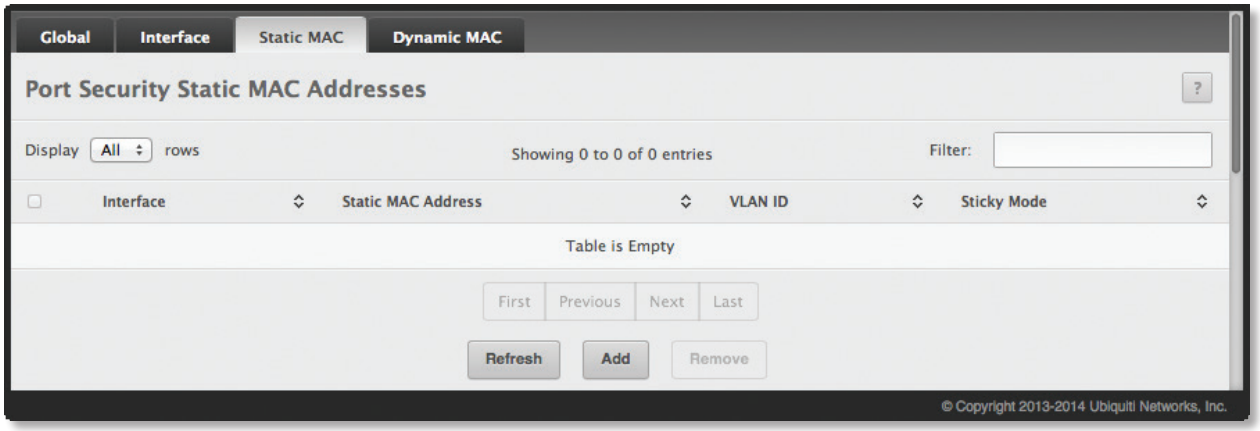

Port Security Static MAC Addresses

Port Security Static MAC Address Fields

Field	Description
Interface	The interface associated with the rest of the data in the row. When adding a static MAC address entry, use the Interface menu to select the interface to associate with the permitted MAC address.
Static MAC Address	The MAC address of the host that is allowed to forward packets on the associated interface.
VLAN ID	The ID of the VLAN that includes the host with the specified MAC address.
Sticky Mode	Indicates whether the static MAC address entry is added in sticky mode. When adding a static MAC address entry, the *Sticky Mode* field can be selected only if it is enabled on the interface. If a static MAC address is added in sticky mode, and sticky mode is disabled on the interface, the MAC address entry is converted to a dynamic entry and will age out and be removed from the running (and saved) configuration if it is not relearned.

Use the buttons to perform the following tasks:


- To add a static MAC address, click **Add**, configure the settings as needed, and click **Submit** to apply the new settings.
- To remove a static MAC address, select the entry, click **Remove**, and confirm the deletion.
- Click **Refresh** to update the screen with most recent data.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Port Security Dynamically Learned MAC Addresses

Use the *Port Security Dynamic MAC Addresses* page to view a table with the dynamically learned MAC addresses on an interface. With dynamic locking, MAC addresses are learned on a "first arrival" basis. You specify how many addresses can be learned on the locked port.

To access the *Port Security Dynamic MAC Addresses* page, click **Switching** > **Port Security** > **Dynamic MAC** in the navigation menu.

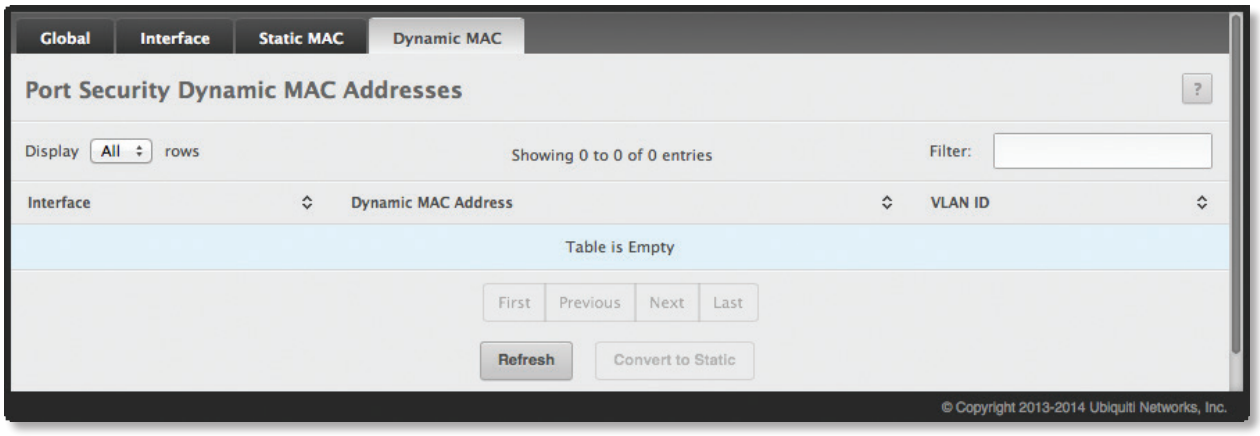

Port Security Dynamic MAC Addresses

Port Security Dynamic MAC Address Fields

Field	Description
Interface	The interface associated with the rest of the data in the row. When converting dynamic addresses to static addresses, use the Interface menu to select the interface to associate with the MAC addresses.
Dynamic MAC Address	The MAC address that was learned on the device. An address is dynamically learned when a frame arrives on the interface and the source MAC address in the frame is added to the MAC address table.
VLAN ID	The VLAN ID specified in the Ethernet frame received by the interface.

Use the buttons to perform the following tasks:

- Click **Convert to Static** to convert all MAC addresses learned on an interface to static MAC address entries. A dialog box lets you select the interface associated with the MAC address entries to convert. A static MAC address entry is written to the running configuration file and does not age out.
- Click **Refresh** to update the screen with most recent data.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.

Managing LLDP

The IEEE 802.1AB defined standard, Link Layer Discovery Protocol (LLDP), allows stations residing on an 802 LAN to advertise major capabilities and physical descriptions. This information is viewed by a network manager to identify system topology and detect bad configurations on the LAN.


LLDP is a one-way protocol; there are no request/response sequences. Information is advertised by stations implementing the transmit function, and is received and processed by stations implementing the receive function. The transmit and receive functions can be enabled/disabled separately per port. By default, both transmit and receive are disabled on all ports. The application is responsible for starting each transmit and receive state machine appropriately, based on the configured status and operational state of the port.

The EdgeSwitch software allows LLDP to have multiple LLDP neighbors per interface. The number of such neighbors is limited by the memory constraints. A product-specific constant defines the maximum number of neighbors supported by the switch. There is no restriction on the number of neighbors supported on a per LLDP port. If all the remote entries on the switch are filled up, the new neighbors are ignored. In case of multiple VOIP devices on a single interface, the 802.1ab component sends the Voice VLAN configuration to all the VoIP devices.

LLDP Global Configuration

Use the *LLDP Global Configuration* page to specify LLDP parameters that are applied to the switch.

To display the *LLDP Global Configuration* page, click **Switching** > **LLDP** > **Global** in the navigation menu.

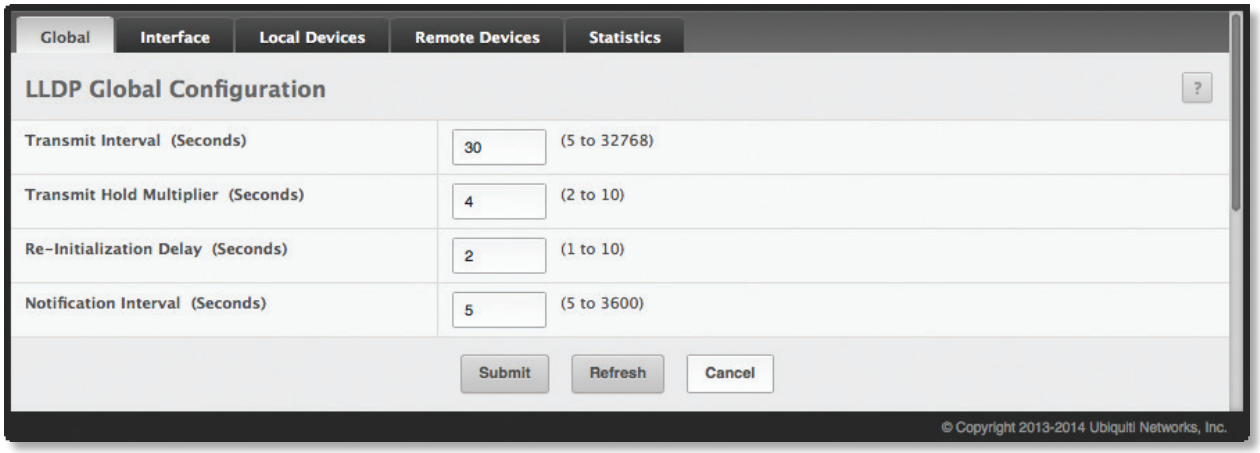

LLDP Global Configuration

LLDP Global Configuration Fields

Field	Description
Transmit Interval (Seconds)	The number of seconds between transmissions of LLDP advertisements.
Transmit Hold Multiplier (Seconds)	The *Transmit Interval* multiplier value, where *Transmit Hold Multiplier* × *Transmit Interval* = the time to live (TTL) value the device advertises to neighbors.
Re-Initialization Delay (Seconds)	The number of seconds to wait before attempting to reinitialize LLDP on a port after the LLDP operating mode on the port changes.
Notification Interval (Seconds)	The minimum number of seconds to wait between transmissions of remote data change notifications to the SNMP trap receiver(s) configured on the device.

Use the buttons to perform the following tasks:

- If you make any changes to the page, click **Submit** to apply the new settings to the system.
- Click **Refresh** to update the screen with most recent data.

To retain the changes across the switch's next power cycle, click **System** > **Configuration Storage** > **Save**.